



GLB ENTERPRISES
PHONE: 214-884-6243
WWW.GLBFE.COM



T-MAG HFJ1011G



T-MAG CREW CAB HFJ1011H



T-MAG C-VAN HFJ6371 ZHONGYI



T-MAG P-VAN HFJ6371 ZHONGYI

THIS MANUAL DOES NOT COVER THE MAG HFJ6370 OR THE XC MODELS

THIS CATALOG WAS PREPARED FROM THE BEST INFORMATION AVAILABLE, WITH PAINSTAKING ATTENTION TO ACCURACY. HOWEVER, THE ORIGINAL MANUFACTURERS MAKE MANY CHANGES IN SPECIFICATIONS AND MODELS WITHOUT ANNOUNCEMENT. THEREFORE THESE LISTINGS MAY NOT BE 100% CORRECT OR COMPLETE.

GLB CANNOT ACCEPT ANY RESPONSIBILITY FOR ANY ERRORS THAT MAY OCCUR.

CATALOGUE

FIGURE	TITLE	PAGE
FIG. 1	CYLINDER HEAD	P.1
FIG. 2	CYLINDER BLOCK	P.3
FIG. 3	CRANKSHAFT & PISTONS	P.5
FIG. 4	VALVE TRAIN (EGI)	P.7
FIG. 5	CYLINDER HEAD (EGI)	P.9
FIG. 6	CYLINDER HEAD (HFJ6351)	P.11
FIG. 7	CYLINDER BLOCK (HFJ6350 & HFJ6351)	P.13
FIG. 8	CRANKSHAFT & PISTONS (HFJ6350)	P.15
FIG. 9	CRANKSHAFT & PISTONS (HFJ6351)	P.17
FIG. 10	VALVE TRAIN (HFJ6350 & HFJ6351)	P.19
FIG. 11	TIMING COVER I	P.21
FIG. 12	TIMING COVER II	P.23
FIG. 13	OIL PAN	P.25
FIG. 14	INTAKE MANIFOLD (UAES)	P.27
FIG. 15	INTAKE MANIFOLD (DELPHI)	P.29
FIG. 16	INTAKE MANIFOLD (CARBURETOR)	P.31
FIG. 17	PCV VALVE (UAES)	P.33
FIG. 18	PCV VALVE (DELPHI)	P.35
FIG. 19	AIR CLEANER (EGI)	P.37
FIG. 20	AIR CLEANER (HFJ6351)	P.39
FIG. 21	AIR CLEANER (HFJ6350)	P.41
FIG. 22	AIR CLEANER (HFJ1011G)	P.43
FIG. 23	AIR CLEANER (HFJ1011H)	P.45
FIG. 24	EXHAUST MANIFOLD (EGI)	P.47
FIG. 25	EXHAUST MANIFOLD (CARBURETOR)	P.49
FIG. 26	MUFFLER (EGI)	P.51
FIG. 27	MUFFLER (HFJ6350)	P.53
FIG. 28	MUFFLER (HFJ1011G & HFJ1011H)	P.55
FIG. 29	OIL PUMP (EGI)	P.57
FIG. 30	OIL PUMP (HFJ6350)	P.59
FIG. 31	CLUTCH (EGI)	P.61
FIG. 32	CLUTCH (4-SPEED)	P.63
FIG. 33	CLUTCH (5-SPEED)	P.65
FIG. 34	TRANSMISSION CASE (4-SPEED)	P.67
FIG. 35	TRANSMISSION (4-SPEED)	P.69
FIG. 36	TRANSMISSION CASE (5-SPEED)	P.71
FIG. 37	TRANSMISSION (5-SPEED)	P.73

CATALOGUE

FIGURE	TITLE	PAGE
FIG. 38	GEAR SHIFTER LEVER CASE	P.76
FIG. 39	SHIFTER & SHIFT CABLES	P.78
FIG. 40	WATER PUMP (EGI)	P.80
FIG. 41	WATER PUMP (CARBURETOR)	P.82
FIG. 42	RADIATOR	P.84
FIG. 43	RADIATOR HOSE (DA462-1A/D)	P.86
FIG. 44	RADIATOR HOSE (DA465-1A)	P.88
FIG. 45	RADIATOR HOSE (DA462)	P.90
FIG. 46	RADIATOR FAN	P.92
FIG. 47	ENGINE MOUNTS (4-SPEED)	P.94
FIG. 48	ENGINE MOUNTS (5-SPEED)	P.96
FIG. 49	FUEL LINE SYSTEM (UAES)	P.98
FIG. 50	FUEL LINE SYSTEM (DELPHI)	P.100
FIG. 51	FUEL LINE SYSTEM (HFJ6350B & HFJ6351B)	P.102
FIG. 52	FUEL LINE SYSTEM (HFJ1011G, HFJ1011H & EGI)	P.104
FIG. 53	FUEL LINE SYSTEM (HFJ1011G - CARBURETOR)	P.106
FIG. 54	FUEL TANK (UAES)	P.108
FIG. 55	FUEL TANK (DELPHI)	P.110
FIG. 56	FUEL TANK (HFJ6350B & HFJ6351B)	P.112
FIG. 57	FUEL TANK (HFJ1011G, HFJ1011H & EGI)	P.114
FIG. 58	FUEL TANK (HFJ1011G- CARBURETOR)	P.116
FIG. 59	ACCELERATOR, CLUTCH & CHOKE CABLE	P.118
FIG. 60	DRIVE SHAFT I	P.120
FIG. 61	DRIVE SHAFT II	P.122
FIG. 62	REAR AXLE	P.124
FIG. 63	DIFFERENTIAL ASM	P.126
FIG. 64	HALFT SHAFT (DRUM)	P.128
FIG. 65	REAR AXLE HOUSING & HALF SHAFT	P.130
FIG. 66	FRONT DISC BRAKE	P.132
FIG. 67	FRONT DRUM BRAKE (MANUAL ADJUST)	P.134
FIG. 68	FRONT DRUM BRAKE (AUTO ADJUST)	P.136
FIG. 69	REAR DRUM BRAKE (MANUAL ADJUST)	P.138
FIG. 70	REAR DRUM BRAKE (AUTO ADJUST TYPE I)	P.140
FIG. 71	REAR DRUM BRAKE (AUTO ADJUST TYPE II)	P.142
FIG. 72	FRONT AXLE	P.144
FIG. 73	MASTER CYLINDER & RESERVOIR	P.146

CATALOGUE

FIGURE	TITLE	PAGE
FIG. 74	MASTER CYLINDER & RESERVOIR (UAES) EGI	P.148
FIG. 75	MASTER CYLINDER & RESERVOIR (CARBURETOR)	P.150
FIG. 76	BRAKE PIPE (X-TYPE, DISC & DRUM)	P.152
FIG. 77	BRAKE PIPE (TYPE II, FRONT DISC & REAR DRUM)	P.154
FIG. 78	BRAKE PIPE (TYPE II, DOUBLE DRUM BRAKE)	P.156
FIG. 79	BRAKE PIPE (TYPE X, DOUBLE DRUM BRAKE)	P.158
FIG. 80	BRAKE PIPE (TYPE II, DOUBLE DRUM BRAKE)	P.160
FIG. 81	BRAKE PIPE (TYPE II, FRONT DISC & DRUM BRAKE)	P.162
FIG. 82	ACCELERATOR & CLUTCH PEDAL	P.164
FIG. 83	PARKING BRAKE	P.166
FIG. 84	STEERING RACK & PINION	P.168
FIG. 85	STEERING SHAFT	P.170
FIG. 86	STEERING SHAFT (AIR BAG)	P.712
FIG. 87	FRONT STEERING	P.174
FIG. 88	STEERING WHEEL	P.176
FIG. 89	STEERING WHEEL (AIR BAG)	P.178
FIG. 90	FRONT SUSPENSION FRAME	P.180
FIG. 91	FRONT STABILIZER	P.182
FIG. 92	FRONT STRUT	P.184
FIG. 93	REAR SUSPENSION TRUCK	P.186
FIG. 94	REAR SUSPENSION VAN	P.188
FIG. 95	WHEEL & TIRE	P.190
FIG. 96	SPARE TIRE MOUNT	P.192
FIG. 97	SPARE TIRE BRACKET MOUNTING	P.194
FIG. 98	TIRE JACK	P.196
FIG. 99	STARTER	P.198
FIG. 100	ALTERNATOR	P.200
FIG. 101	DISTRIBUTOR	P.201
FIG. 102	BATTERY	P.203
FIG. 103	BATTERY (HFJ1011G)	P.205
FIG. 104	SWITCHES	P.207
FIG. 105	SPEEDO CLUSTER & SPEEDO SENSOR	P.209
FIG. 106	RADIO	P.211
FIG. 107	WIRING HARNESS (VAN)	P.213
FIG. 108	WIRING HARNESS (TRUCK)	P.215
FIG. 109	WIPER MOTOR & BLADES	P.217
FIG. 110	REAR WIPER MOTOR & BLADE	P.219
FIG. 111	FRONT HEAD LAMP	P.221

CATALOGUE

FIGURE	TITLE	PAGE
FIG. 112	FRONT HEAD LAMP (CRYSTAL)	P.223
FIG. 113	FRONT HEAD LAMP (HFJ6376)	P.225
FIG. 114	CORNER LAMP	P.227
FIG. 115	CORNER LAMP (HFJ6376)	P.229
FIG. 116	CABIN LAMP	P.231
FIG. 117	TAIL LAMP (VAN TYPE I-VAN)	P.233
FIG. 118	TAIL LAMP (VAN TYPE II-VAN)	P.235
FIG. 119	COMBINATION LAMP	P.237
FIG. 120	TAIL LAMP (TRUCK)	P.239
FIG. 121	REAR FOG LAMP	P.241
FIG. 122	FRONT FOG LAMP	P.243
FIG. 123	BACKUP LAMP	P.245
FIG. 124	LICENSE PLATE LAMP	P.247
FIG. 125	REAR REFLECTOR	P.249
FIG. 126	FOG LAMP	P.251
FIG. 127	TURN SIGNAL LAMP (HFJ6376)	P.253
FIG. 128	TURN SIGNAL LAMP (HFJ1011G, HFJ1011H)	P.255
FIG. 129	SIDE TURN SIGNAL LAMP	P.257
FIG. 130	HEATER SYSTEM	P.259
FIG. 131	HEATER ASM & BOX	P.261
FIG. 132	A/C SYSTEM (TWO EVAPS & TWO CONDENSERS)	P.263
FIG. 133	A/C SYSTEM (SINGLE EVAP)	P.266
FIG. 134	A/C SYSTEM (SINGLE UPPER EVAP)	P.268
FIG. 135	EVAPORATOR ASM	P.270
FIG. 136	CONDENSER	P.272
FIG. 137	STEERING COLUMN COVER (HFJ6371B, HFJ6371C, HFJ6376)	P.274
FIG. 138	STEERING COLUMN COVER (HFJ1011G, HFJ1011H)	P.276
FIG. 139	DASHBOARD	P.278
FIG. 140	DOOR PANEL & WINDOW REGULATOR	P.280
FIG. 141	VAN SLIDING DOOR	P.282
FIG. 142	REAR HATCH DOOR	P.284
FIG. 143	SLIDING DOOR HINGE	P.286
FIG. 144	FRONT DOOR LOCK	P.288
FIG. 145	REAR HATCH LOCK	P.290
FIG. 146	VAN SLIDING DOOR LOCK	P.292
FIG. 147	FRONT & REAR BUMPER	P.294
FIG. 148	FRONT BUMPER (VAN)	P.296
FIG. 149	WINDSHIELD GLASS	P.298
FIG. 150	WHEEL HOUSE	P.300
FIG. 151	HEADLINER (VAN)	P.302

CATALOGUE

FIGURE	TITLE	PAGE
FIG. 152	TRUCK BED	P.306
FIG. 153	TRUCK BED (CREW CAB)	P.308
FIG. 154	FLOOR ACCESSORIES	P.310
FIG. 155	FRONT SEATS (HFJ1011H)	P.312
FIG. 156	FRONT SEATS (HFJ1011G,HFJ1011H)	P.314
FIG. 157	MIDDLE SEATS (VAN)	P.316
FIG. 158	REAR SEATS (3RD ROW)	P.318
FIG. 159	CONSOLE	P.320
FIG. 160	BODY SIDE INNER GARNISH (VAN)	P.322
FIG. 161	BODY SIDE OUTER GARNISH (VAN)	P.324
FIG. 162	SEAT BELT	P.326
FIG. 163	BODY (SHEET METAL-VAN)	P.328
FIG. 164	BODY (SHEET METAL-HFJ1011G)	P.330
FIG. 165	BODY (SHEET METAL-HFJ1011H)	P.332
FIG. 166	REAR GLASS	P.334
FIG. 167	MIRRORS	P.336
FIG. 168	MISC	P.338
FIG. 169	FRONT FOG LAMP ASM LH/RH	P.339

FIGURE 1 CYLINDER HEAD

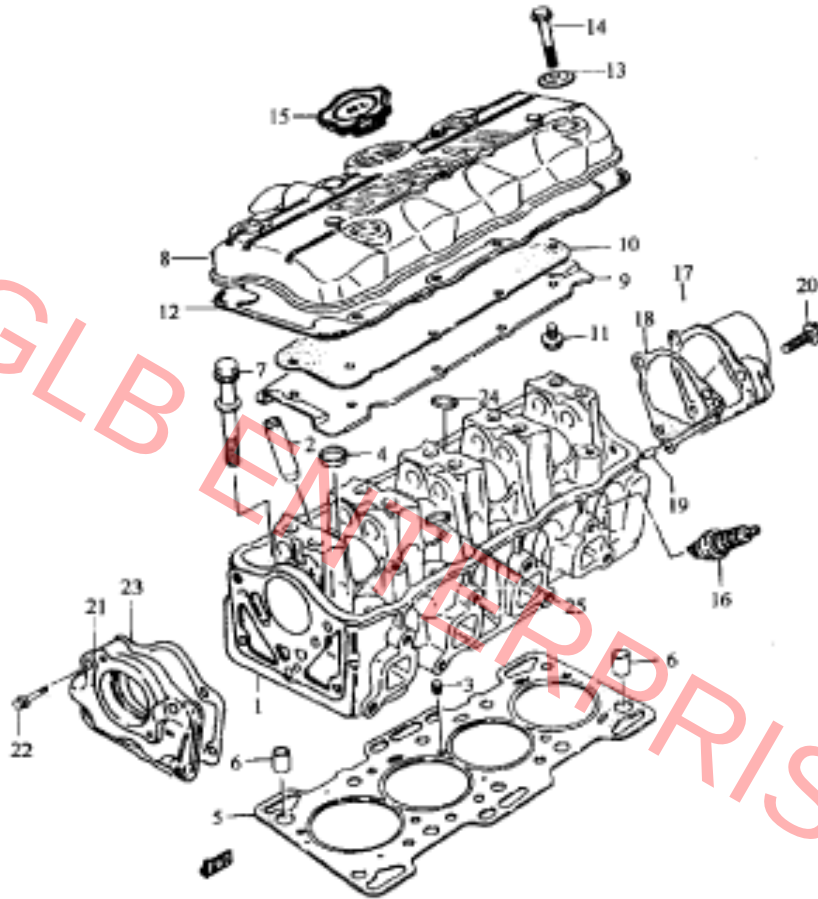


FIGURE 1 CYLINDER HEAD

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	CYLINDER HEAD	462-1A/D-1003001/01	1	
2	VALVE GUIDE	462-1003002-01	8	
3	ORIFICE	462-1003006-A	1	
4	BOWL PLUG	462-1000251	4	
5	CYLINDER HEAD GASKET	462-1000800	1	
6	DOWEL PIN	462-1000015	2	
7	HEAD BOLT	462-1000215-B	10	
	HEAD BOLT WASHER	462-1000214	10	
8	VALVE COVER	462-1007903-B/B2	1	
9	VALVE COVER CLAPBOARD	462-1007015	1	
	VALVE COVER CLAPBOARD GASKET	462-1007016	1	
10	BOLT	462-1000228		
11	VALVE COVER GASKET	462-1000071-A	1	
12	VALVE COVER HOLD DOWN WASHER	462-1007802	4	
13	VALVE COVER HOLD DOWN BOLT	462-1000216		
14	OIL CAP	462-1009800	1	
15	SPARK PLUG	462-1A/D-3707950		
16	CAMSHAFT REAR COVER	462-1A/D-1003011	1	
17	CAMSHAFT REAR COVER GASKET	462-1003010-01	1	
18	DOWEL PIN	462-1003007	2	
19	CAMSHAFT COVER BOLT	462-1000237	3	
20				
21	CAMSHAFT FRONT COVER	462-1003009	1	
	CAMSHAFT FRONT COVER BOLT	462-1000233	5	
22	CAMSHAFT FRONT COVER GASKET	462-1003008-01	1	
23	INTAKE VALVE SEAT	462-1003004	4	
24	EXHAUST VALVE SEAT	462-1003005	4	
25				

FIGURE 2 CYLINDER BLOCK

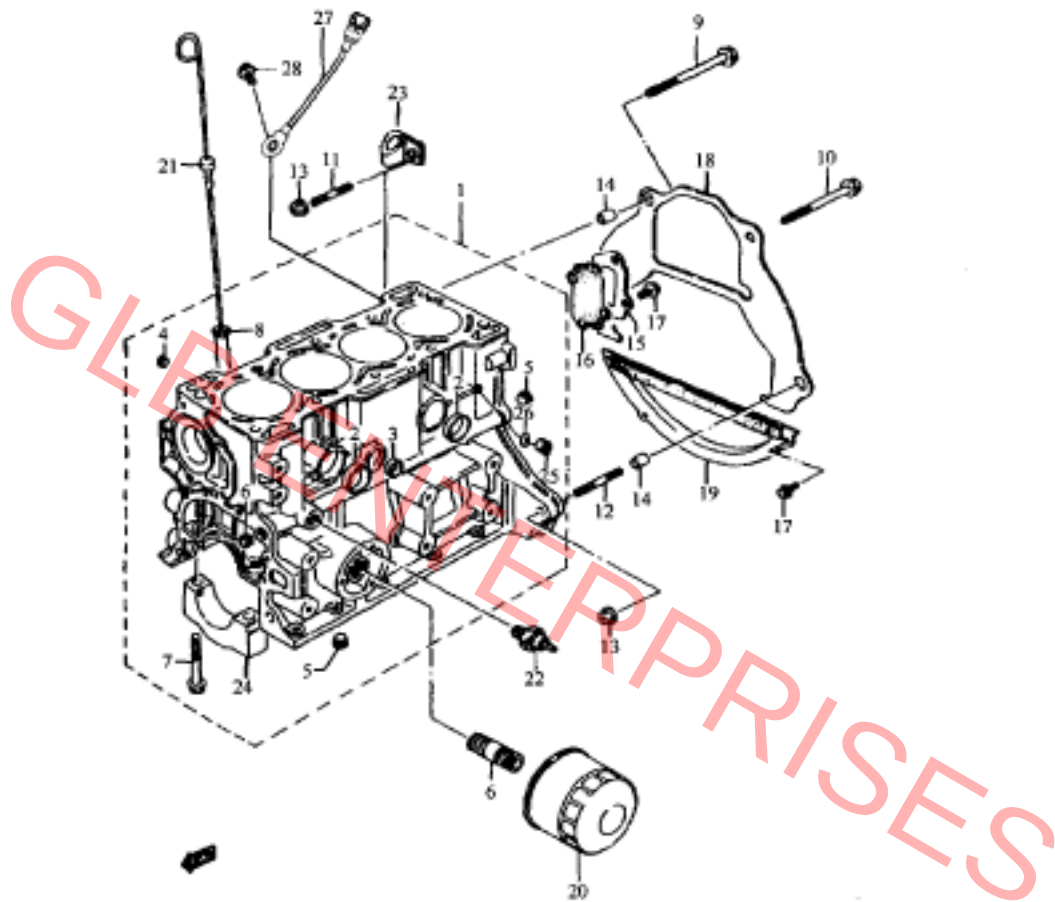


FIGURE 2 CYLINDER BLOCK

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	BLOCK ASM	462-1A-1002900B 465Q-1A/D-1002900-01	A/R A/R	
2	EXPANSION PLUG (BLOCK)	462-1000252	3	
3	EXPANSION PLUG (BLOCK)	462-1000251	2	
4	PIPE PLUG	462-1000250	3	
5	PIPE PLUG	462-1002005-B	1	
6	OIL FILTER ADAPTER	465Q-1000022-C	1	
7	MAIN BEARING CAP BOLTS	462-1002201-01	10	
8	OIL DIPSTICK TUBE	465Q-1A8D1002810	1	
	DIPSTICK TUBE BOLT	462-1000241	1	
9-10	ADAPTER PLATE WASHER	462-1000247	2	
	ADAPTER PLATE WASHER	10GB93-87	2	
	ADAPTER PLATE BOLT	462-1002472	1	
11	STUD BOLT	BS10-1700204	1	
12	STUD BOLT	BS10-1700205	1	
	NUT	462-1000212	1	
13	WASHER	462-1000247	2	
14	ALIGNMENT DOWEL	462-1000015	2	
15	WATER JACKET COVER PLATE	462-1002014	1	
16	JACKET COVER PLATE GASKET	462-1002013	1	
17	WATER JACKET COVER BOLT	462-1000228	6	
18	TRANSMISSION ADAPTER PLATE (UPPER)	462-1000054	1	
19	TRANSMISSION ADAPTER PLATE (LOWER)	462-1701811-A	1	
20	OIL FILTER	1012010D2		
21	DIPSTICK	465Q-1009802 465Q-1A-1009802	A/R A/R	SEE 462-1009802
22	OIL PRESSURE SENSOR	465Q-3810950	1	
23	CLAP	465Q-1000830 462-1000840	A/R A/R	
24	MAIN BEARING CAP #1	462-1002008-1	A/R	
	MAIN BEARING CAP #2	462-1002009-01	A/R	
	MAIN BEARING CAP #3	462-1002010-01	A/R	
	MAIN BEARING CAP #4	462-1002011-01	A/R	
	MAIN BEARING CAP #5	462-1002012-01	A/R	
25	WATER JACKET PLUG	462-100220-3	1	
26	WATER JACKET PLUG GASKET	462-1002801	1	
27	KNOCK SENSOR	465Q-1A/D-3752800	1	
28	BOLT	462-1000244	1	

FIGURE 3 CRANKSHAFT & PISTONS (EGI)

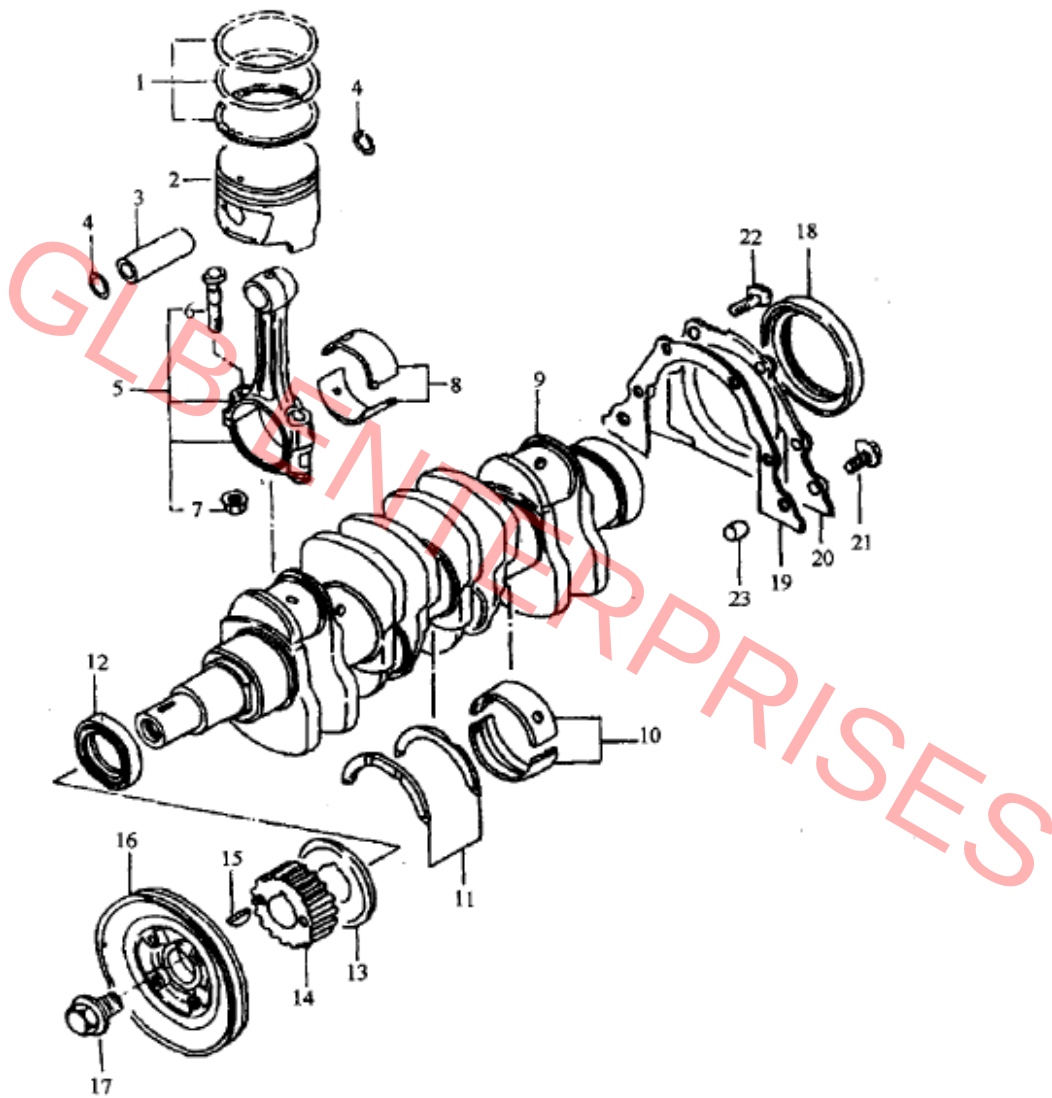


FIGURE 3 CRANKSHAFT & PISTONS (EGI)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	PISTON RING #1	462-1004009-01	4	
	PISTON RING #2	462-1004010-01	4	
	PISTON RING #3	462-1004903-01	4	
2	PISTON	462-1A-1004008	4	
3	PISTON PIN	462-1004001	4	
	PISTON PIN RETAINER			
4	RING	462-1004002	8	
5	CONNECTING ROD	462-1004900-B/01	4	
	CONNECTING ROD			
6	BOLT	462-1004003-01	8	
	CONNCECTING ROD			
7	NUT	462-1004201-01	8	
8	ROD BEARING	462-1004004	8	
9	CRANKSHAFT	465Q-1005001-B2/02	1	
10	MAIN BEARING	462-1002006	10	
	MAIN BEARING THRUST			
11	WASHER	462-1002007	2	
	FRONT CRANKSHAFT			
12	SEAL	462-1006900-A	1	
13	RETAINING RING	462-1000033	1	
	CRANKSHAFT DRIVE			
14	GEAR	462-1000034-01	1	
15	WOODRUFF KEY	462-1000031	1	
16	CRANKSHAFT PULLEY	462-1000038	1	
	CRANKSHAFT PULLEY			
17	BOLT	462-1000227	1	
18	REAR MAIN SEAL	462-1005901-A	1	
	REAR SEAL HOUSING			
19	SPACER	462-1002016-01	1	
20	REAR SEAL HOUSING	462-1002015	1	
	REAR SEAL HOUSING			
21	BOLT	462-1002202	2	
	REAR SEAL HOUSING			
22	BOLT	4692-1000221	4	
23	DOWEL PIN	462-1000017	2	

FIGURE 4 VALVE TRAIN (EGI)

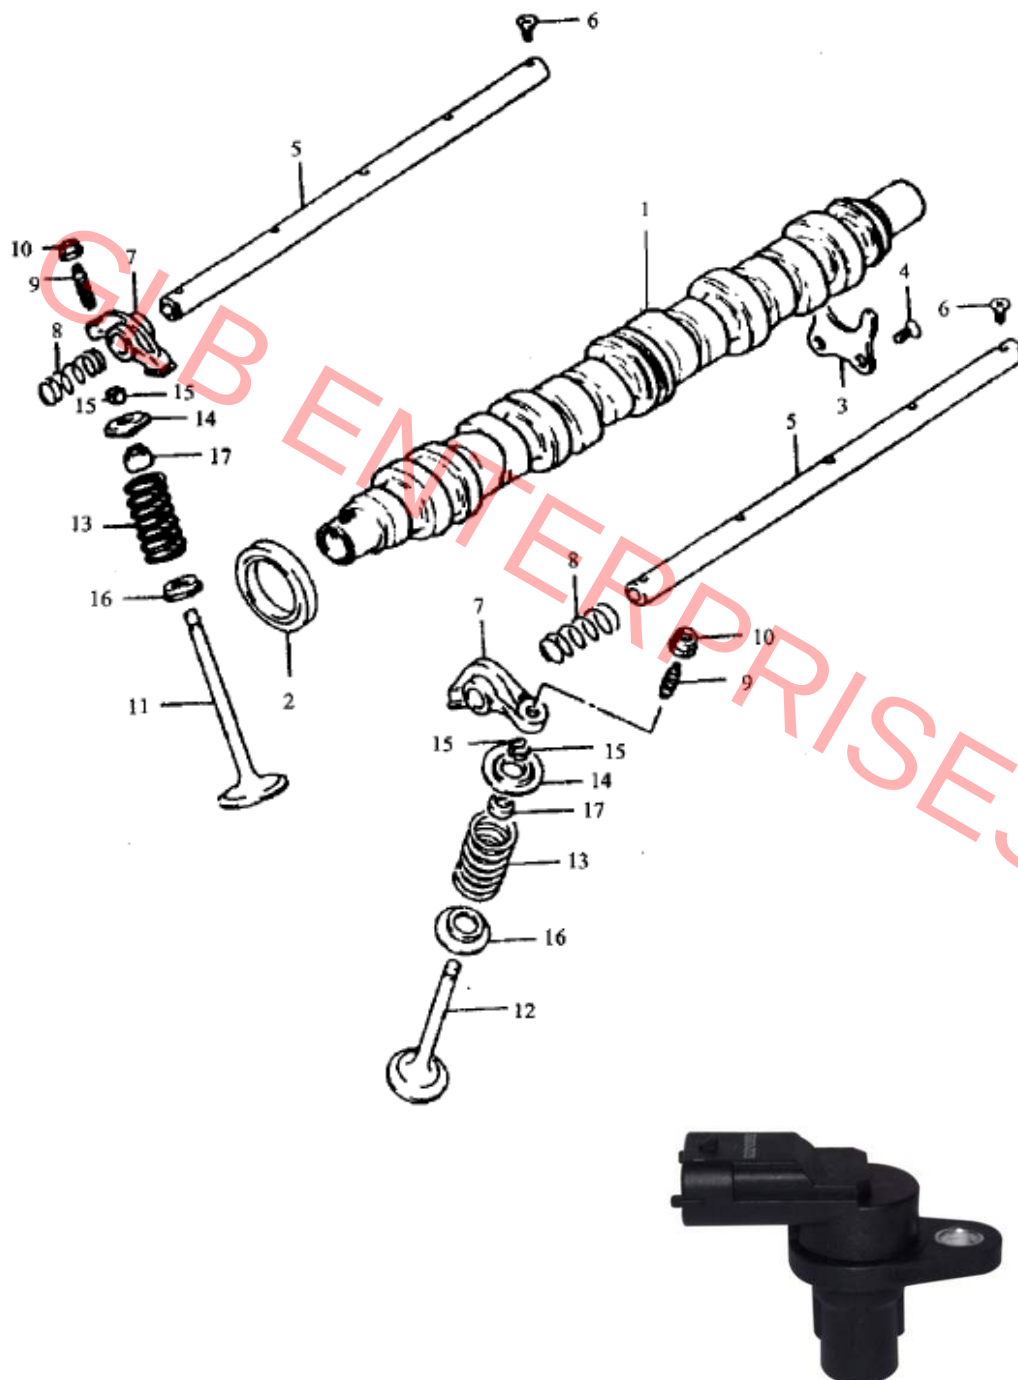


FIGURE 4 VALVE TRAIN (EGI)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	CAMSHAFT	462-1006001/01	1	
2	FRONT CAMSHAFT SEAL	462-1006900-A	1	
3	CAMSHAFT TRHUST SPACER	462-1003013	1	
4	CAMSHAFT TRHUST SPACER BOLT	462-1003206	2	
5	ROCKER ARM SHAFT	462-1007901	2	
6	ROCKER ARM SHAFT BOLT	462-1003205	10	
7	ROCKER ARM	462-1007900	8	
8	ROCKER ARM SHAFT SPRING	462-1007008	8	
9	VALVE ADJUSTMENT SCREW	462-1007001	8	
10	VALVE ADJUSTMENT NUT	462-1007201	8	
11	INTAKE VALVE	462-1007009	4	
12	EXHAUST VALVE	462-1007010	4	
13	VALVE SPRING INT/EXH	462-1007012	8	
14	VALVE SPRING RETAINER	462-1007013	8	
15	VALVE KEEPER	462-1007014	16	
16	VALVE SPRING SEAT	462-1007011	8	
17	VALVE STEM SEAL	462-1007902-01	8	
18	CAMSHAFT SENSOR	465Q-2D3-3700820	1	

FIGURE 5 CYLINDER HEAD

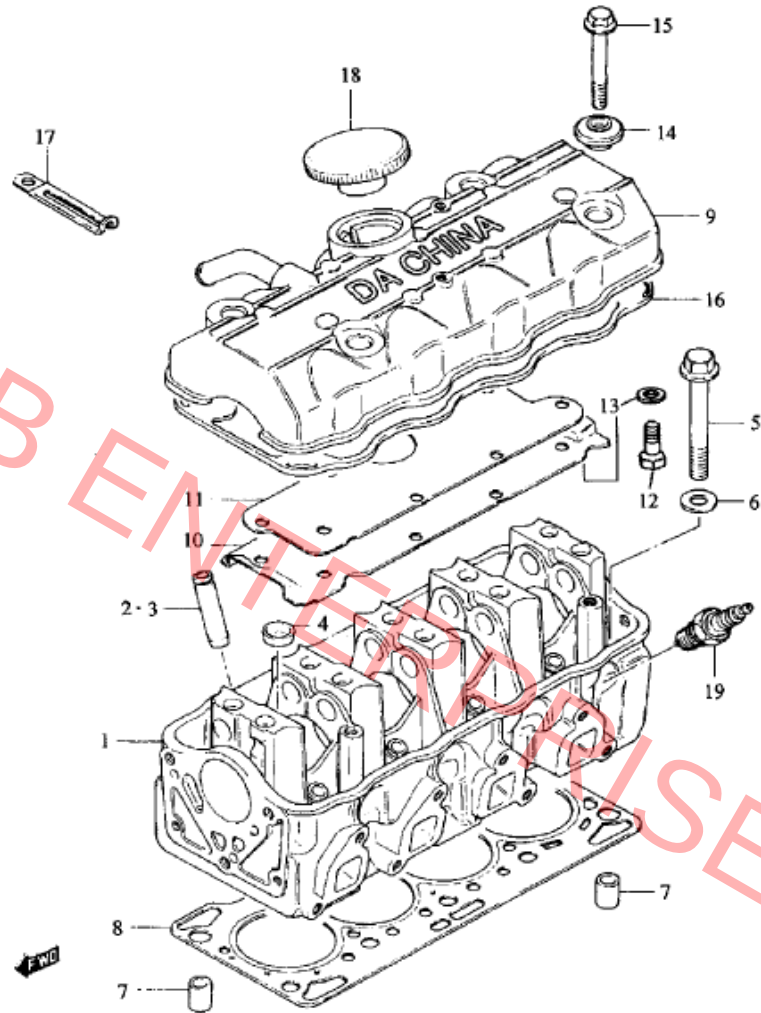


FIGURE 5 CYLINDER HEAD

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	CYLINDER HEAD	462-1003001-B	1	
	CYLINDER HEAD ASM	462-1003800	1	
2	INTAKE VALVE GUIDE	462-1003002-B	4	
3	EXHAUST VALVE GUIDE	462-1002003-B	4	
4	BOWL PLUG	462-1000215	4	
5	CYLINDER HEAD BOLT	462-1000215-B	10	
6	CYLINDER HEAD WASHER	462-1000214	10	
7	DOWEL PIN	462-1000015	2	
8	CYLINDER HEAD GASKET	462-1000800	1	
9	VALVE COVER	462-1007801	1	
10	VALVE COVER CLAPBOARD	462-1007015	1	
11	VALVE COVER CLAPBOARD GASKET	462-1007016	1	
12	BOLT	GB5783-86-M6X10	8	
13	WASHER	GB97.1-85-6-140HV	8	
14	VALVE COVER HOLD DOWN WASHER	462-1007802	4	
15	VALVE COVER BOLT	462-100216	4	
16	VALVE COVER GASKET	462-1000071-A	1	
17	POT HOOK	462-1000045	1	
18	OIL CAP	462-1009800	1	
19	SPARK PLUG	462-3707950	4	

FIGURE 6 CYLINDER HEAD (HFJ6351)

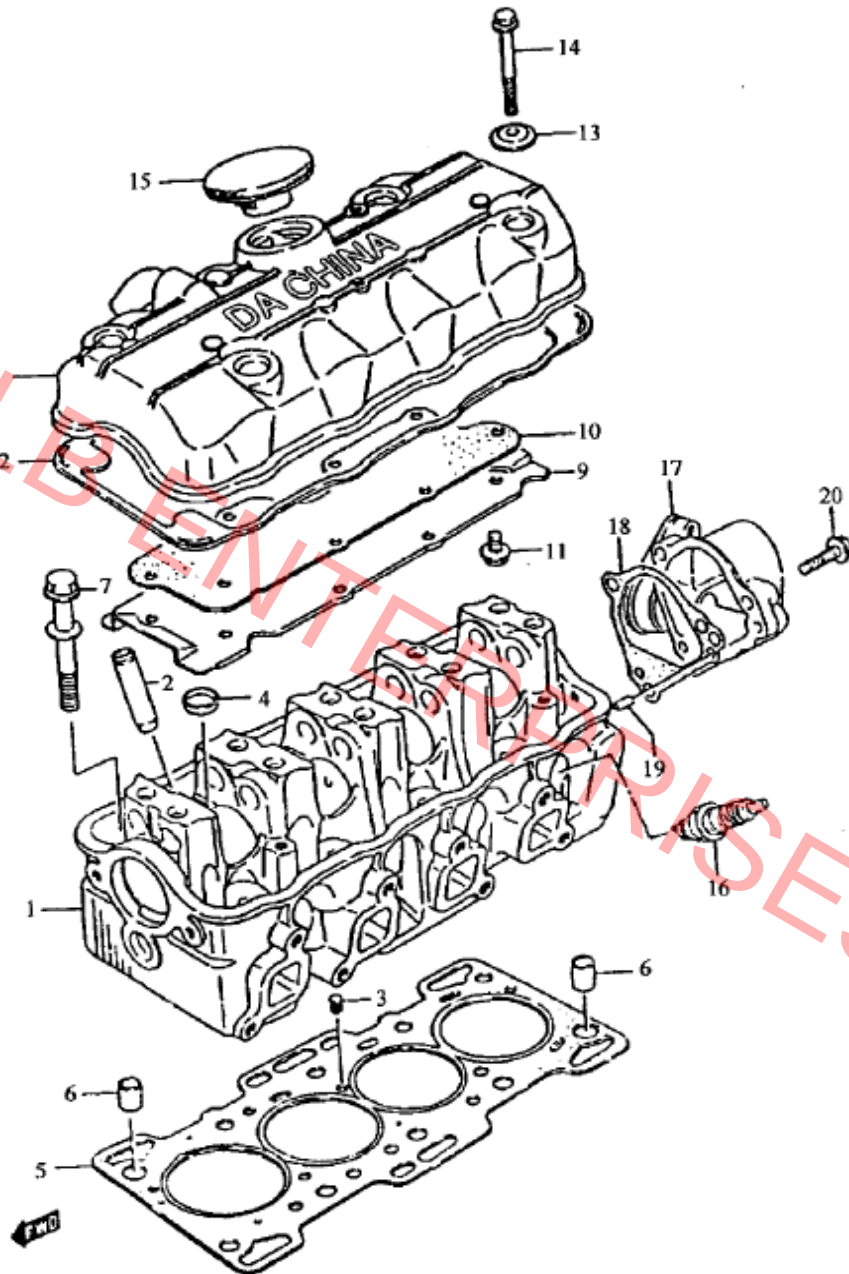


FIGURE 6 CYLINDER HEAD (HFJ6351)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	CYLINDER HEAD	465Q-1003001	1	
2	VALVE GUIDE INT/ EXH	462-1003002-F	5	
3	ORIFICE	462-1003006-A	1	
4	BOWL PLUG	462-1000251	4	
5	CYLINDER HEAD GASKET	462-1000800	1	
6	DOWEL PIN	462-1000015	2	
7	HEAD BOLT	462-1000215-B	10	
8	VALVE COVER	462-1007903-B	1	
9	VALVE COVER CLAPBOARD	462-1007015	1	
10	VALVE COVER CLAPBOARD GASKET	462-1007016	1	
11	BOLT	GB5783-86-M6X10	8	
12	VALVE COVER GASKET	462-1000071-A	1	
13	VALVE COVER HOLD DOWN WASHER	462-1007802	4	
14	VALVE COVER HOLD DOWN BOLT	462-1000216	4	
15	OIL CAP	462-1009800	1	
16	SPARK PLUG	462-3707950	4	
17	CAMSHAFT REAR COVER	462-1A/D-1003011-B	1	
18	CAMSHAFT REAR GASKET	462-1003010	1	
19	DOWEL PIN	462-1003007	2	
20	WASHTER	GB97.1-85-6-140HV	8	

FIGURE 7 ENGINE BLOCK (HFJ6350 & 6351)

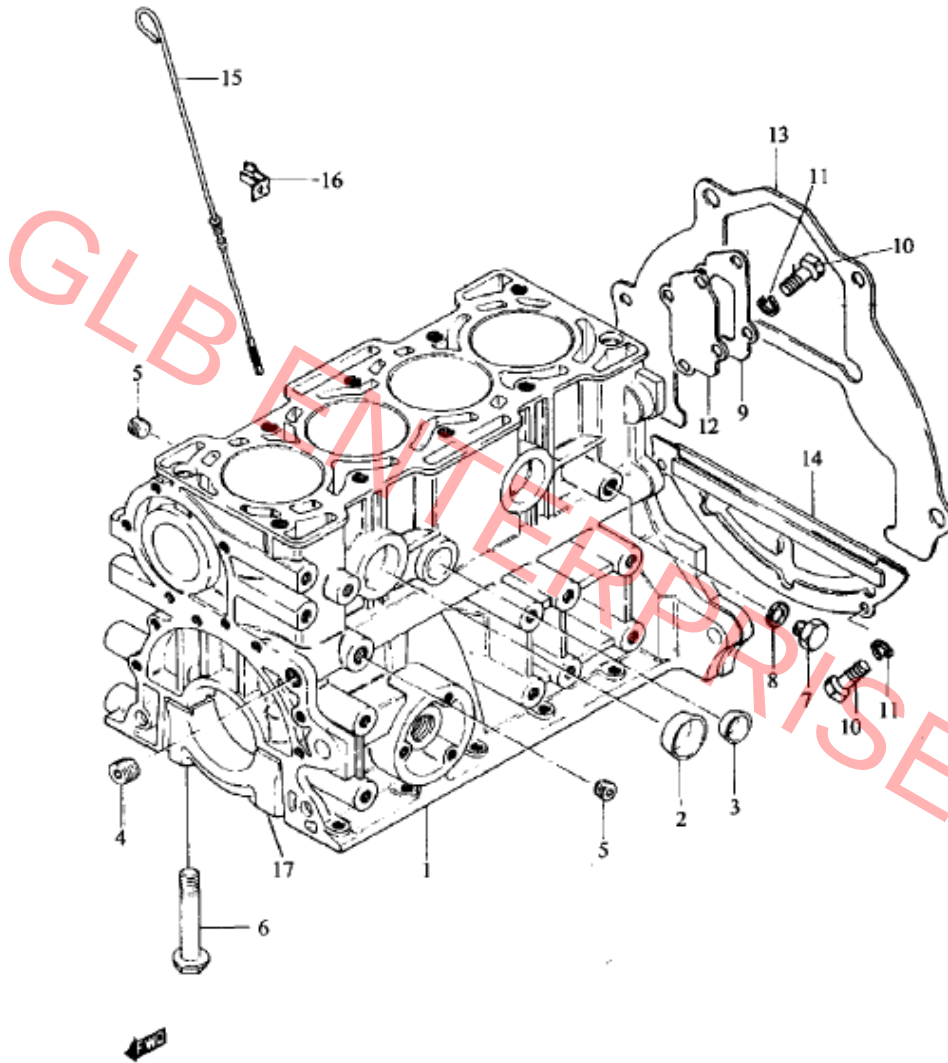


FIGURE 7 ENGINE BLOCK (HFJ6350 & 6351)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	BLOCK ASM (HFJ6350B & HFJ1011GA)	462-1A-1002900	1	
	BLOCK	462-1A-1002001	1	
2	EXPANSION PLUG	462-1000252	3	
3	EXPANSION PLUG	462-1000251	4	
4	PIPE PLUG	462-1000250	3	
5	PIPE PLUG	462-1002005-A	1	
6	MAIN BEARING CAP BOLTS	462-1002201	10	
7	WATER JACKET PLUG	462-1002203	1	
8	WATER JACKET PLUG GASKET	462-1002801	1	
9	WATER JACKET COVER PLATE	462-1002014	1	
10	BOLT	GB5783-86-M6X10	6	
11	GASKET	GB97.1-85-6-140HV	6	
12	WATER JACKET COVER GASKET	462-1002013	1	
13	TRANSMISSION ADAPTER PLATER UPPER	462-1000054	1	
14	TRANSMISSION ADAPTER PLATER LOWER	462-1701811-A	1	
15	DIPSTICK	462-1009802	1	
16	DIPSTICK BRACKET	462-1000046	1	
17	MAIN BEARING CAP #1	462-1002008A	1	
	MAIN BEARING CAP #2	162-1002009-A	1	
	MAIN BEARING CAP #3	462-1002010-A	1	
	MAIN BEARING CAP #4	462-1002011-A	1	
	MAIN BEARING CAP #5	462-1002012-A	1	
N/S	OIL FILTER	1012010D2	1	
N/S	OIL FITLER ADATER	465Q-1000022-C	1	

This exploded view diagram illustrates the assembly of a mechanical component, likely a pump or motor. The parts are numbered 1 through 27. The assembly includes a central shaft (13) with a series of curved vanes (10) mounted on it. A large circular flange (17) is attached to the end of the shaft. A gear (16) is mounted on the shaft, and a small gear (14) is shown nearby. A bracket (21) is shown with various bolts (25, 27) and washers (24, 26) for mounting. A piston (2) and a connecting rod (5) are also shown, along with a spring (1) and a small pin (4). The diagram is overlaid with a large red watermark that reads "GATEWAY TO ENTERPRISES".

FIGURE 8 CRANKSHAFT & PISTONS (HFJ6350B)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	PISTON RING #1	462-1004009-01	4	
	PISTON RING #2	462-1004010-01	4	
	PISTON RING #3	462-1004903-01	4	
2	PISTON	462-1A-1004008	4	
3	PISTON PIN	462-1004001	4	
	PISTON PIN RETAINER			
4	RING	462-1004002	8	
5	CONNECTING ROD	462-1004900	4	
	CONNECTING ROD			
6	BOLT	462-1004003	8	
7	LOCK PIN	462-1004202	8	
8	CONNECTING ROD NUT	462-1004201	8	
9	ROD BEARING	462-1004004	8	
10	CRANKSHAFT	465Q-1005001	1	
11	MAIN BEARING	462-1002006	10	
	MAIN BEARING THRUST			
12	WASHER	462-1002007	2	
	FRONT CRANKSHAFT			
13	SEAL	462-1006900	1	
14	RETAINING RING	462-1000033	1	
	CRANKSHAFT DRIVE			
15	GEAR	462-1000034	1	
16	WOODRUFF KEY	462-1000031	1	
17	CRANKSHAFT PULLEY	462-1000038	1	
	CRANKSHAFT PULLEY			
18	BOLT	462-1000227	1	
19	PILOT BEARING	462-1005804	1	
20	PILOT BEARING SEAL	462-1005900	1	
21	REAR MAIN SEAL	462-1005901	1	
	REAR MAIN SEAL			
22	SPACER	462-1002016	1	
23	REAR SEAL HOUSING	462-1002015	1	
	REAR SEAL HOUSING			
24	BOLT	GB783-86-M6X25	1	
	REAR SEAL HOUSING			
25	BOLT	GB5783-86-M6X25	1	
26	DOWEL PIN	462-1000017	1	
27	WASHER	GB97.1-85-6140HV	1	

FIGURE 9 CRANKSHAFT & PISTONS (HFJ6351B)

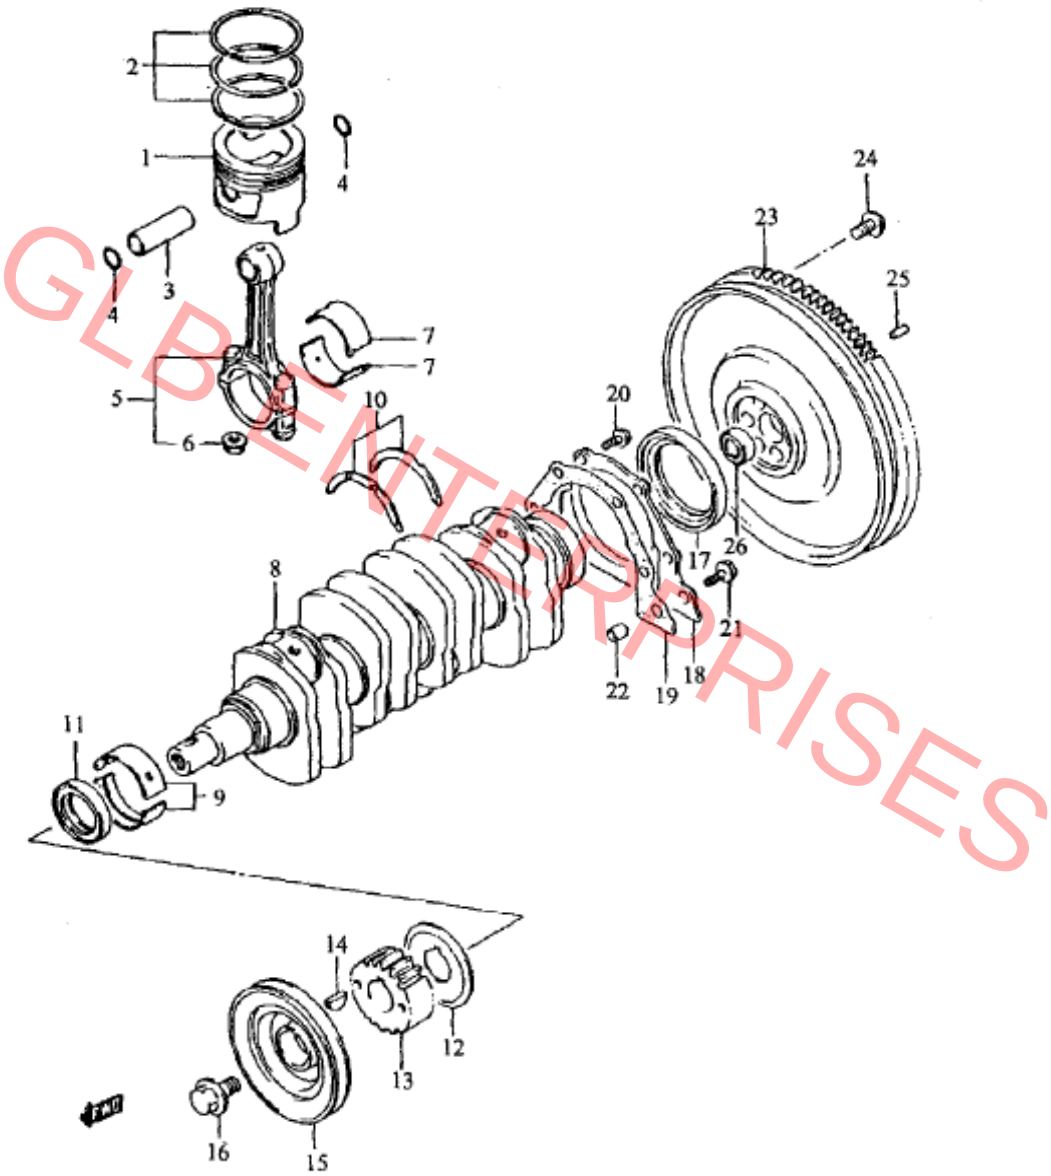


FIGURE 9 CRANKSHAFT & PISTONS (HFJ6351B)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	PISTON	465Q-1004008-01	4	
2	PISTON RING #1	465Q-1004009	4	
	PISTON RING #2	465Q-1004010	4	
	PISTON RING #3	465Q-1004011W	4	
3	PISTON PIN	465Q-1004001	4	
	PISTON PIN RETAINER			
4	RING	462-1004002	4	
5	CONNECTING ROD	462-1004900-01	4	
	CONNECTING ROD BOT	462-1004006-01	8	
	LOCK PIN	462-1004202	8	
6	CONNECTING ROD NUT	462-1004201-1	8	
7	ROD BEARING	462-1004004	4	
8	CRANKSHAFT	465Q-1005001	1	
9	MAIN BEARING	462-1002006	10	
	MAIN BEARING THRUST			
10	WASHER	462-1002007	2	
	FRONT CRANKSHAFT			
11	SEAL	462-1006900	1	
12	RETAINING RING	462-1000033	1	
	CRANKSHAFT DRIVE			
13	GEAR	465Q-1000034	1	
14	WOODRUFF KEY	462-100031	1	
15	CRANKSHAFT PULLEY	462-1000038	1	
	CRANKSHAFT PULLEY			
16	BOLT	462-1000227	1	
17	REAR MAIN SEAL	462-1005901	1	
	REAR MAIN SEAL			
18	HOUSING	462-1002015	1	
	REAR MAIN SEAL			
19	HOUSING SEAL	462-1002016	1	
	REAR SEAL HOUSING			
20	BOLT	GB5783-86-M6X22	1	
	WASHER	GB97.1-85-6-140HV	1	
	REAR SEAL HOUSING			
21	BOLT	GB5783-86-M6X25	1	
		GB97-1-85-6-140HV	1	
22	DOWEL PIN	462-1000017	1	
23	FLYWHEEL	465Q-1005803	1	
24	FLYWHEEL BOLTS	462-1005201-A	6	
25	DOWEL PIN	GB4661 6X10	1	
26	PILOT BEARING	GB/T276-94	1	

FIGURE 10 VALVE TRAIN (HFJ6350B & 6351B)

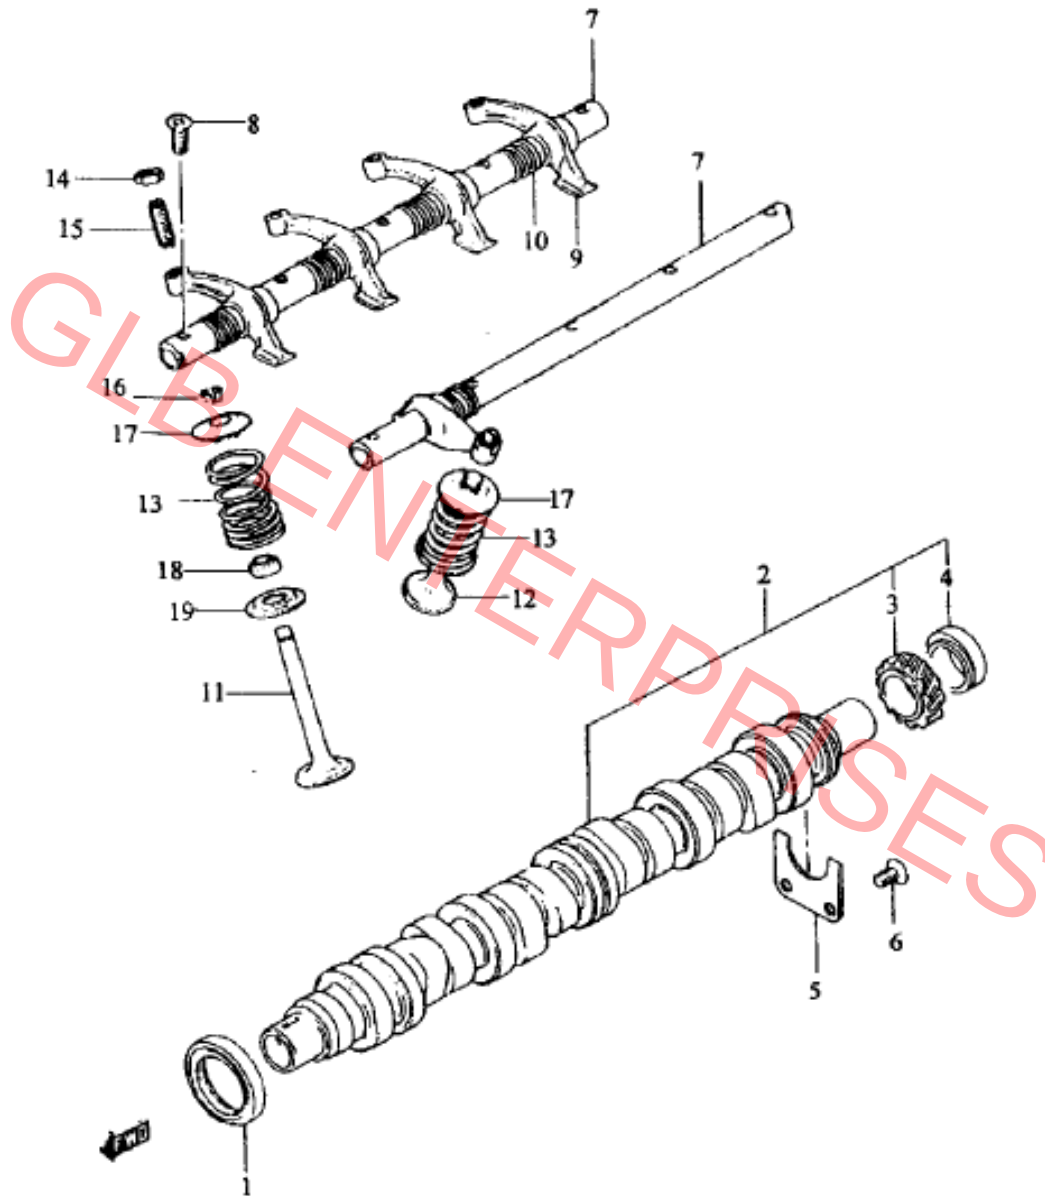


FIGURE 10 VALVE TRAIN (HFJ630B & 6351B)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	FRONT CAMSHAFT SEAL	462-1006900	1	
2	CAMSHAFT	465Q-1006801-B	1	
3	DISTRIBUTOR DRIVE GEAR	462-1006002	1	
4	FUEL PUMP ECENTRIC CAMSHAFT THRUST SPACER	462-1006003	1	
5	CAMSHAFT THRUST SPACER	462-1003013	1	
6	CAMSHAFT THRUST SPACER BOLT	462-1003206	2	
7	ROCKER ARM SHAFT	462-1007901	2	
8	ROCKER ARM SHAFT BOLT	462-1003205	10	
9	ROCKER ARM	462-1007900	8	
10	ROCKER ARM SHAFT SPRING	462-1007008	8	
11	INTAKE VALVE	462-1007009	4	
12	EXHAUST VALVE	462-1007010	4	
13	VALVE SPRING	462-1007012	8	
14	VALVE ADJUSTMENT NUT	462-1007201	8	
15	VALVE ADJUSTMENT SCREW	462-1007001	8	
16	VALVE KEEPER	462-1007014	16	
17	VALVE SPRING RETAINER	462-1007013	8	
18	VALVE STEM SEAL	462-1007902-01	8	
19	VALVE SPRING SEAT	462-1007011	8	

FIGURE 11 TIMING COVER I

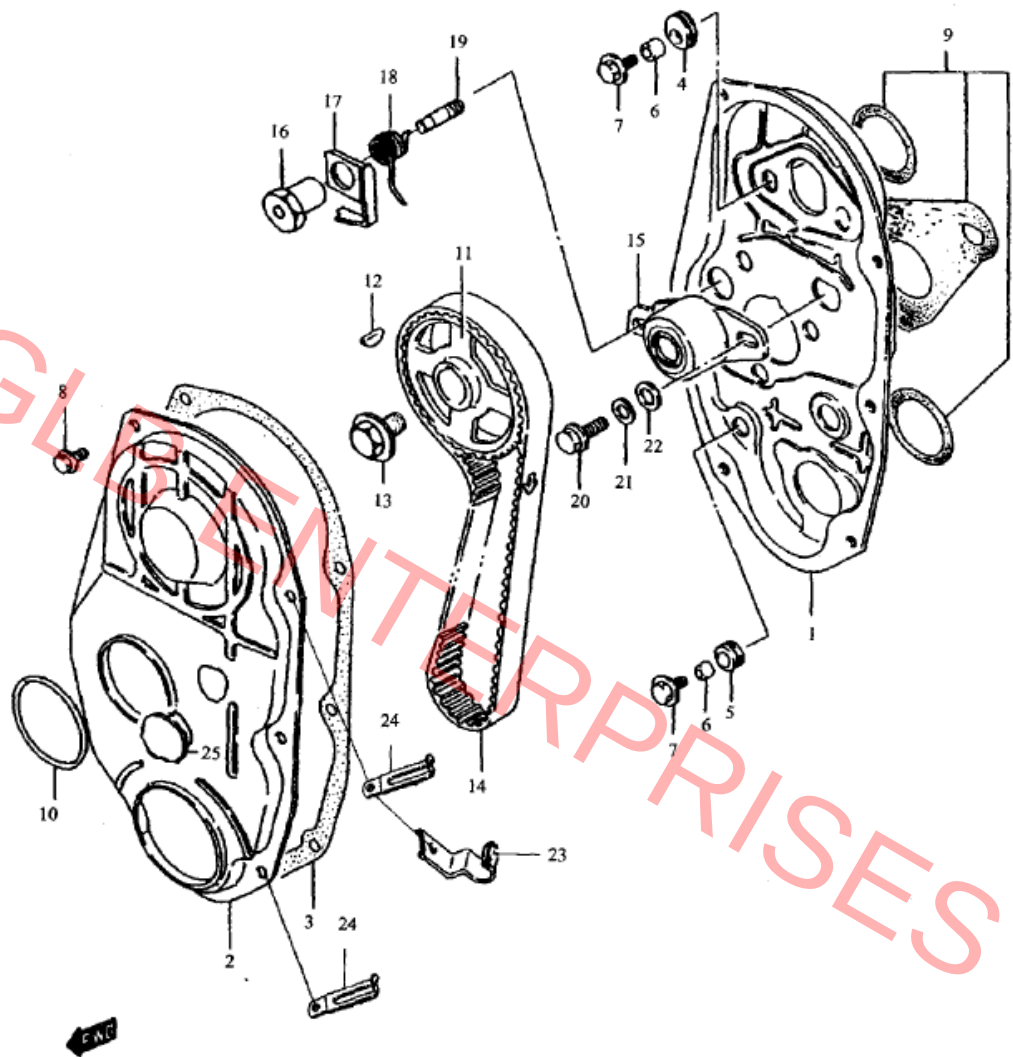


FIGURE 11 TIMING COVER I

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	TIMING COVER INSIDE	465Q-1000803	1	
2	TIMING COVER OUTSIDE	465Q-1A-100900	1	
3	TIMING COVER GASKET	465Q-1A-100036	1	
4	RUBBER BUSHING	462-1000025-A	2	
5	RUBBER BUSHING	462-1000026-A	1	
6	BUSHING	462-1000027	4	
7	INSIDE COVER MOUNTING BOLT	465Q-1000804	4	
8	OUTER COVER MOUNTING BOLT	462-1000228	6	
N/S	SPONGE GASKET	462-1000004	2	
9	SPONGE GASKET	462-1000005	1	
N/S	SPONGE GASKET	462-1000006	1	
10	OUTSIDE COVER SEAL	462-1000011-A	1	
11	CAMAHAFT DRIVE GEAR	465Q-1A-1000032	1	
12	WOODRUFF KEY	462-1000031	1	
13	BOLT	462-1000227	1	
14	TIMING BELT (84A19)	462-1000035	1	
15	TIMING BELT TENSIONER	462-1000901-03	1	
16	STUD BOLT	462-1000030	1	
17	SPRING BRACKET	462-1000029	1	
18	TIMING BELT TENSIONER SPRING	462-1000028	1	
19	STUD BOLT	462-1307201	1	
20	SCREW	462-100224-B	1	
21	SPRING WASHER	8GB93-87	1	
22	GASKET	492-1000226	1	
23	HEATER HOSE CLAMP	465Q-1000073	1	
24	BRACKET	462-1000860	2	
25	BLIND OUTER RUBBER PLUG	462-1000011-A	1	

This technical diagram illustrates the exploded view of a mechanical assembly, likely a pump or motor component. The parts are numbered 1 through 23. The main housing (1) is shown on the right, with internal components like the impeller (11) and shaft (14) visible. The front cover (3) is shown on the left, with a gasket (10) and various fasteners (4, 5, 6, 7, 8, 9, 12, 13, 16, 17, 18, 19, 20, 21, 22, 23) shown in their respective assembly positions. A large red watermark 'GALAXY ENTERPRISES' is overlaid diagonally across the center of the image.

FIGURE 12 TIMING COVER II

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	TIMING COVER INSIDE	465Q-1000803	1	
2	TIMING COVER OUTSIDE	462-1000900	1	
3	TIMING COVER GASKET	462-1000036	1	
4	RUBBER GASKET	462-1000025-A	2	
5	RUBBER GASKET	462-1000026-A	2	
6	BUSHING	462-1000027	4	
7	BOLT	GB5783-86-M6X22	4	
		GB5783-86-M6X16	4	
	WASHER	462-1000204-B	4	
8	BOLT	GB5783-M6X10	5	
		GB5783-86-M6X16	5	
9	SPONGE GASKET	462-1000004	2	
N/S		462-1000005	1	
N/S		462-1000006	1	
10	OUTSIDE COVER GASKET	462-1000011-A	1	
11	CAMSHAFT DRIVE GEAR	465Q-1000032	1	
12	WOODRUFF KEY	462-1000031	1	
13	SCREW	162-1000227	1	
14	TIMING BELT (88ZA19)	465Q-1000035	1	
15	TIMING TENSIONER	462-1000901	1	
		462-1000901-01		
16	STUD BOLT	462-1000030	1	
17	BRACKET	462-1000029	1	
	TIMING TENSIONER			
18	SPRING	462-1000028	1	
19	STUD BOLT	462-1307201	1	
20	SCREW	462-1000224-B	1	
21	SPRING WASHER	GB93-87-8	1	
22	GASKET	462-1000226	1	
23	POTHOOK	462-1000860	1	

FIGURE 13 OIL PAN

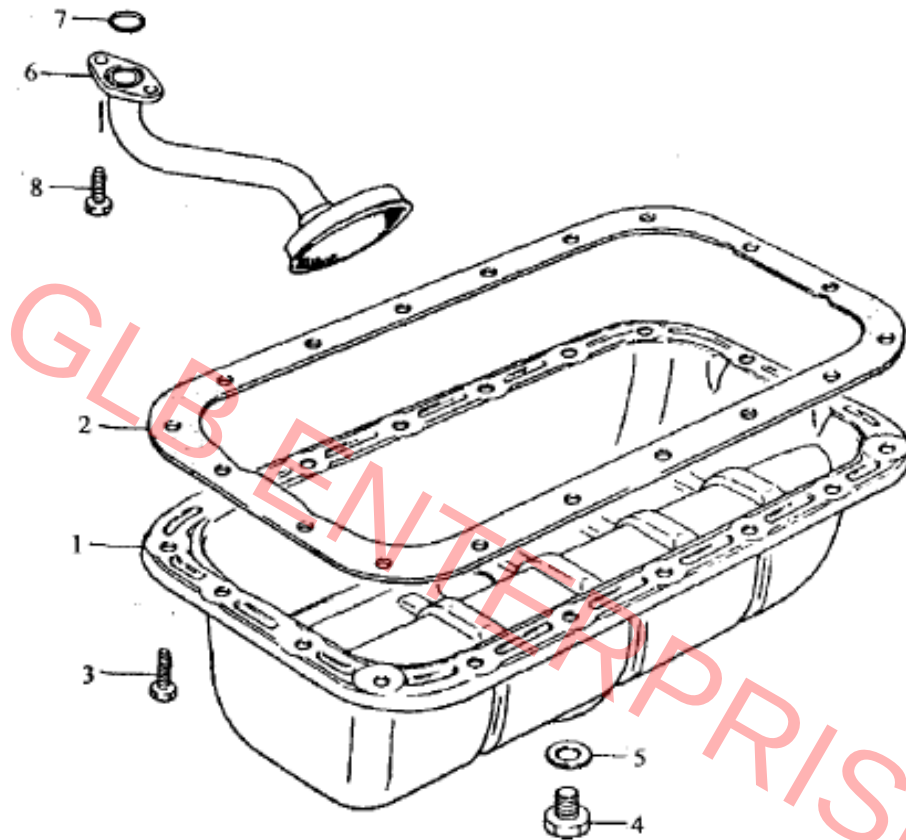


FIGURE 13 OIL PAN

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	OIL PAN	462-1009801-C	1	
2	OIL PAN GASKET	462-1000021-A	1	
3	OIL PAN BOLTS	462-1000801	18	
4	OIL PAN DRAIN PLUG	462-1009202-A	1	
	OIL PAN DRAIN PLUG			
5	GASKET	462-1009203	1	
6	OIL PUMP SCREEN	462-1010950	1	
7	OIL PUMP SCREEN SEAL	462-1000078	1	
	OIL SCREEN MOUNTING			
8	BOLTS	462-1000233	2	

GLB ENTERPRISES

FIGURE 14 INTAKE MANIFOLD (UAES-BOSCH)

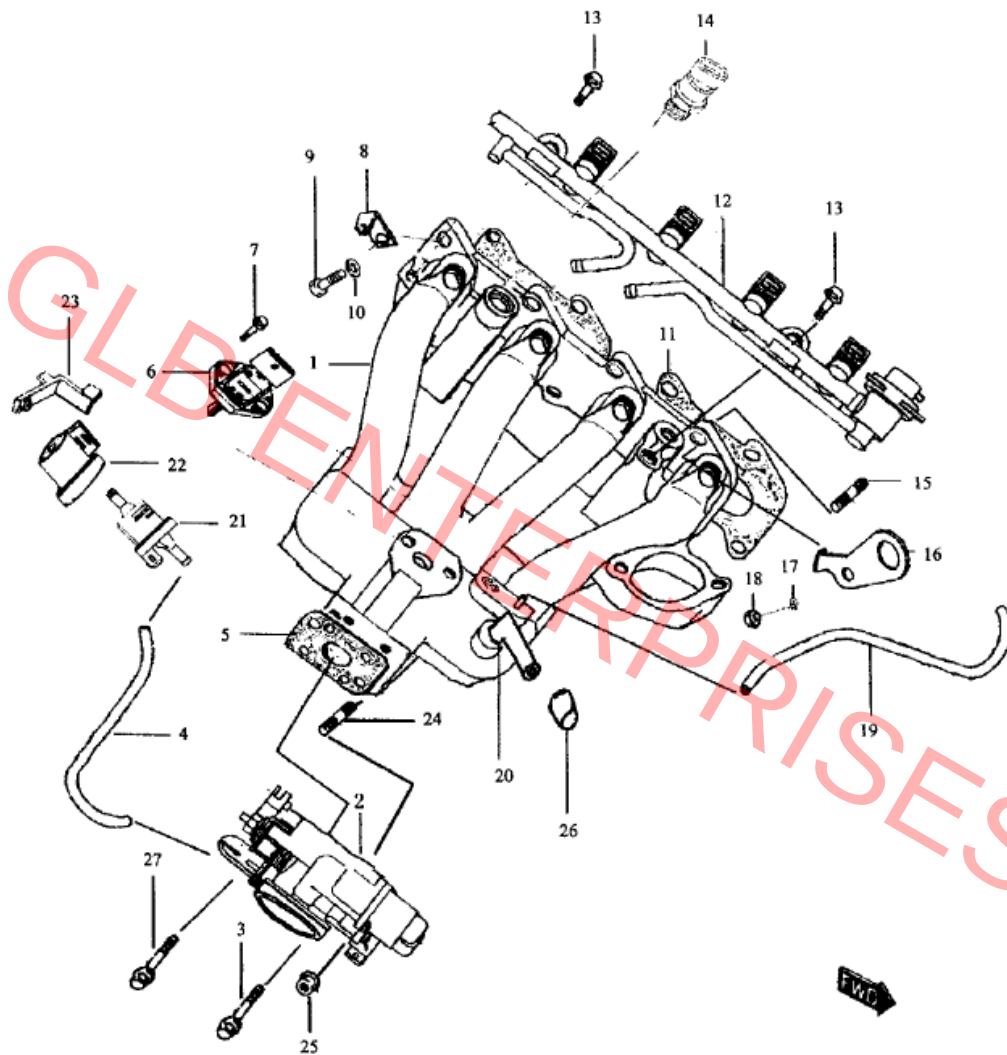


FIGURE 14 INTAKE MANIFOLD (UAES-BOSCH)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	INTAKE MANIFOLD	462-1A/D-1008800-01/02	1	
		465Q-1A/D-1008800-01/02		(HFJ6371B, 6371C)
2	THROTTLE BODY	465Q-1A/D-1107950	1	
N/S	SCREW	462-1000219	1	
4	HOSE	465Q-1A/D-1000113	1	
5	THROTTLE BODY GASKET	465Q-1A/D-1000048	1	
6	AIR INLET TEMP & PRESSURE SENSOR	465Q-1A/D-1100800	1	
7	SCREW	462-1000233	2	
8	GROUND TERMINAL	465Q-1000042	1	
9	SCREW	462-10000209	3	
10	SPRING WASHER	GB859-87-8	3	
11	INTAKE MANIFOLD GASKET	465Q-1A/D-1000041	2	
12	FUEL RAIL ASM	462-1A/D-1104950	1	
13	SCREW	462-1000810	2	
14	COOLANT TEMP. SENSOR	465Q-1A/D-1300800	1	HFJ6350C, HFJ6371C, HFJ6351C, HFJ6371, HFJ6371B
		465Q-1A/D-1300800	1	(HFJ6371B, 6371C)
16	ENGINE LIFT HOOK	462-1A/D-1000047	1	
17	SPRING WASHER	GB859-87-5	1	
18	NUT	M8GB51-76	5	
19	VACUUM HOSE	465Q-1A/D-1000064	1	
20	VACUUM LINE ELBOW	465Q-1A/D-1008003-01	1	
21	CANISTER CONTROL VALVE	465Q-1A/D-1207850	1	
22	CANISTER CONTROL VALVE RING	465Q-1A/D-1000114	1	
23	CANISTER CONTROL VALVE STATOR	462-1A/D-1000109-01	1	
		465Q-1A/D-1008870	2	
24	STUD BOLT	465Q-1A/D-1008201	2	
	NUT	GB6170-86 M6	2	
25	SPRING WASHER	GB859-87-6	2	
26	CAP	462-7-1008014	1	
27	SCREW	462-1000218	1	
N/S	FUEL PRESSURE REGULATOR	462-1A/D-1104901-TJF	1	BOSCH
		25352275	1	DELPHI
N/S	FUEL INJECTOR	465Q-1A/D-1104902	4	BOSCH 2.4150
		25335146	4	DELPHI 2.0905
N/S	IDLE MOTOR	17059524	1	
N/S	THROTTLE POSITION SENSOR	CTS06682	1	06594 06682



FIGURE 15 INTAKE MANIFOLD (DELPHI)

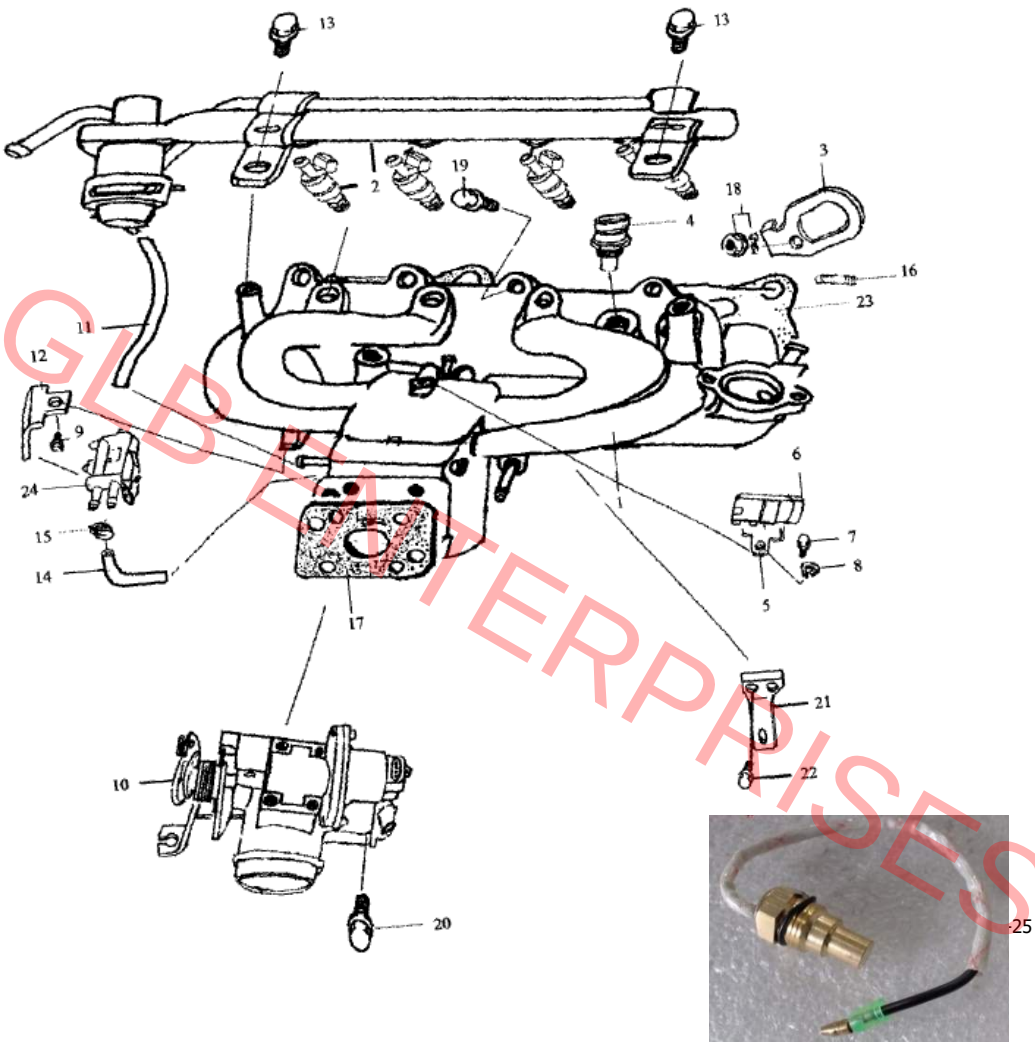


FIGURE 15 INTAKE MANIFOLD (DELPHI)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	INTAKE MANIFOLD	462-1A/D-1008800-01/02	1	
2	FUEL RAIL ASM	462-1A/D-1104950	1	
3	ENGINE LIFT HOOK	462-1A/D-1000047	1	
4	COOLANT TEMP SENSOR	462-1A/D-1300800	1	
5	INTAKE PRESSURE SENSOR STATOR	462-1A/D-1000111	1	
6	INTAKE PRESSURE SENSOR	12232201	1	462-1A/D-1100850
7	SCREW	GB65-85 M5X8	1	
8	SPRING WASHER	GB59-87 5	1	
9	SCREW	462-1000228	1	
10	THROTTLE BODY ASM	462-1A/D1107950-01	1	462-1A/D-1100850
11	VACUUM HOSE	465Q-1A/D-1000064	1	
12	CANISTER CONTROL VALVE STATOR	462-1A/D-1000109-01	1	
13	SCREW	462-1000810	2	
14	HOSE	462-1A/D-1000113	1	
15	HOSE CLAMP	462-1000052	1	
16	STUD BOLT	465Q-0003201	1	
		465Q-1003202	4	
17	THROTTLE BODY GASKET	462-1/AD-1000048	1	
18	NUT	M8GB51-76	5	
	SPRING WASHER	GB93-87 8	5	
19	SCREW	462-10002009	3	
20	SPRING WASHER	GB859-87 8	3	
21	INTAKE MANIFOLD BRACKET	462-1A/D-1008312	1	
22	SCREW	462-1000233	2	
23	INTAKE MANIFOLD GASKET	462-1A/D-1000041	2	
24	CANISTER CONTORL VALVE	462-1A/D-1207850	1	
	FUEL PRESSURE REGULATOR	25342275	1	DELPHI
	FUEL INJECTOR	465Q-1A/D-1104902	4	BOSCH
		25335146	4	DELPHI
	IDLE MOTOR	17059524	1	
N/S	THROTTLE POSITION SENSOR	CTS06682	1	06594 06682
25	TEMPERATURE SENDING UNIT	HFJ3808100FB	1	



FIGURE 16 INTAKE MANIFOLD (CARBURETOR)

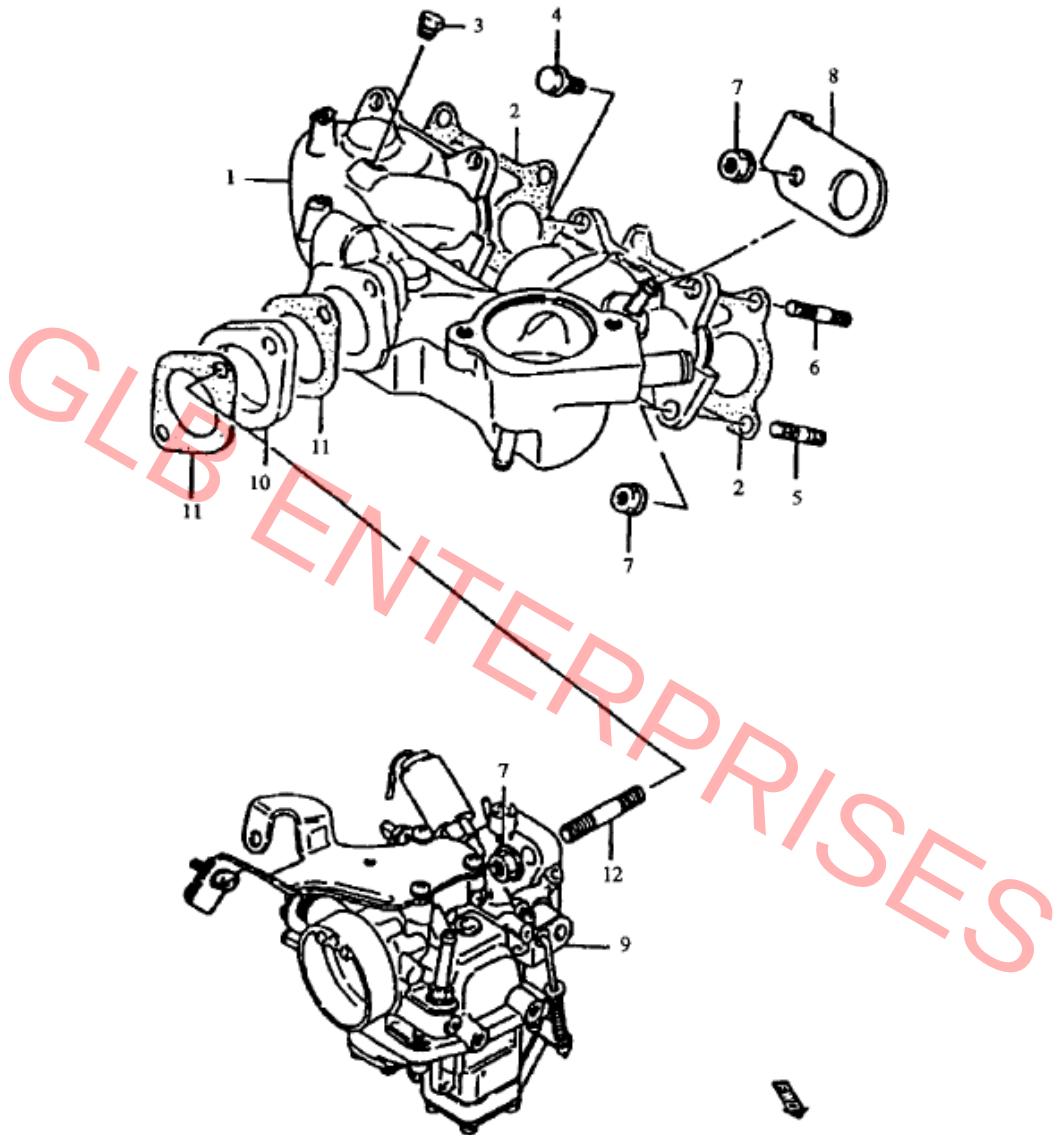


FIGURE 16 INTAKE MANIFOLD (CARBURETOR)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	INTAKE MANIFOLD	462-1008800-B	1	
2	INTAKE MANIFOLD GASKET	462-1000041-01	1	
3	PLUG	462-1002005-B	1	
4	BOLT	462-1000813	1	
	SPRING WASHER	GB8/59-87 8	1	
5	STUD BOLT	462-1003202	1	
6	STUD BOLT	462-1003201	1	
7	NUT	GB51-76 M8	1	
	SPRING WASHER	GB859-87 8	1	
8	ENGINE LIFT HOOK	462-1000047	1	
9	CARBURETOR	465Q-1107950S	1	
10	CARBURETOR HEAT SHIELD	465Q-1000049	1	
		462-1000049	1	
11	CARBURETOR GASKET	465Q-1000048	1	
		462-1000048	1	
12	STUD BOLT	462-1008201	1	

FIGURE 17 PCV VALVE (UAES-BOSCH)

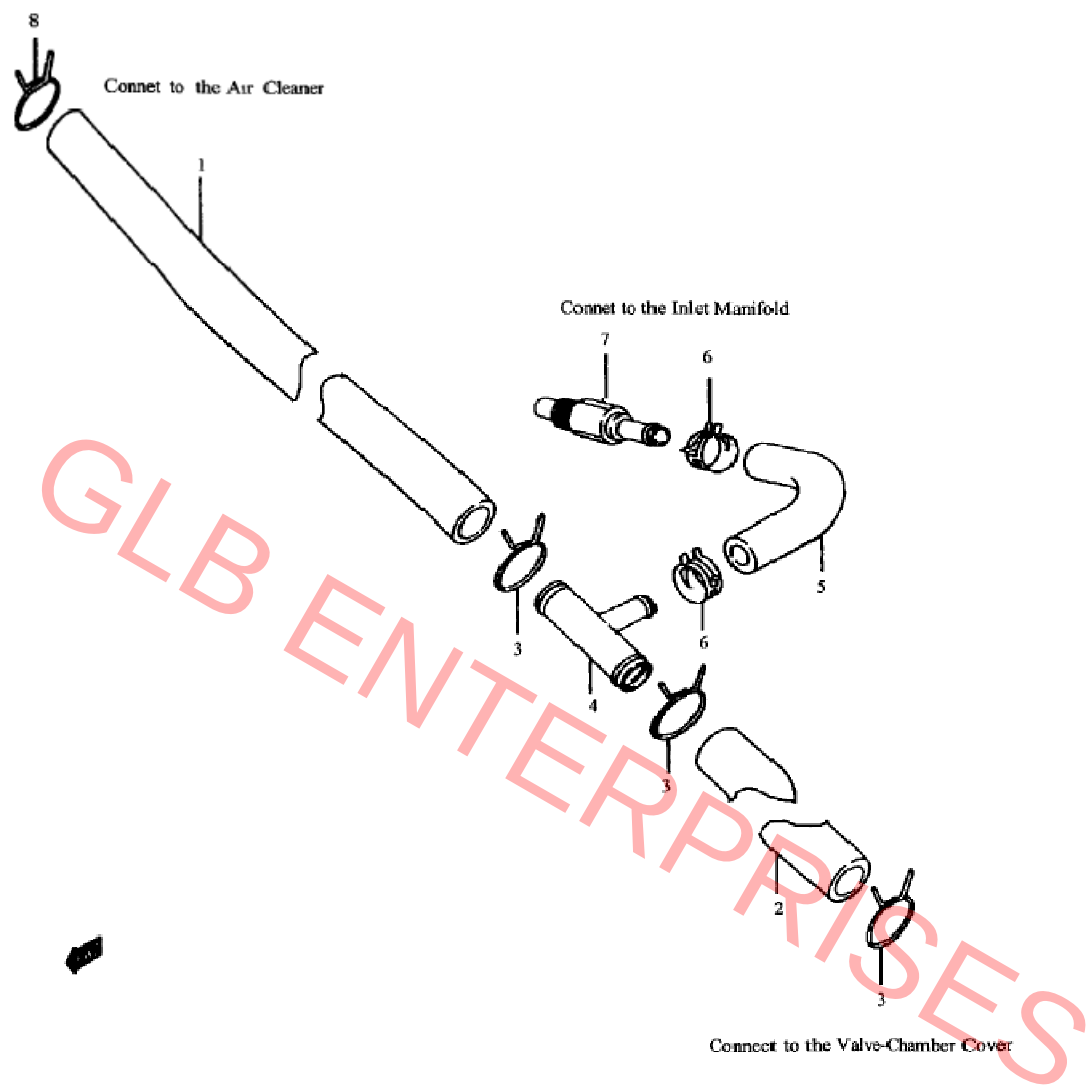


FIGURE 17 PCV VALVE (UAES-BOSCH)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	AIR INLET HOSE	465Q-1A/D-1000079	1	
2	HOSE TO VALVE COVER	465Q-1A/D-1000093	1	
3	HOSE CLAMP	462-1000080	3	
4	3-WAY HOSE	465Q-1000820	1	
5	HOSE	465Q-1A/D-1000094	1	
6	HOSE CLAMP	465Q-1000092	2	
7	PCV VALVE	465Q-1014800	1	
8	HOSE CLAMP	462-1000096	1	

GLB ENTERPRISES

FIGURE 18 PCV VALVE (DELPHI)

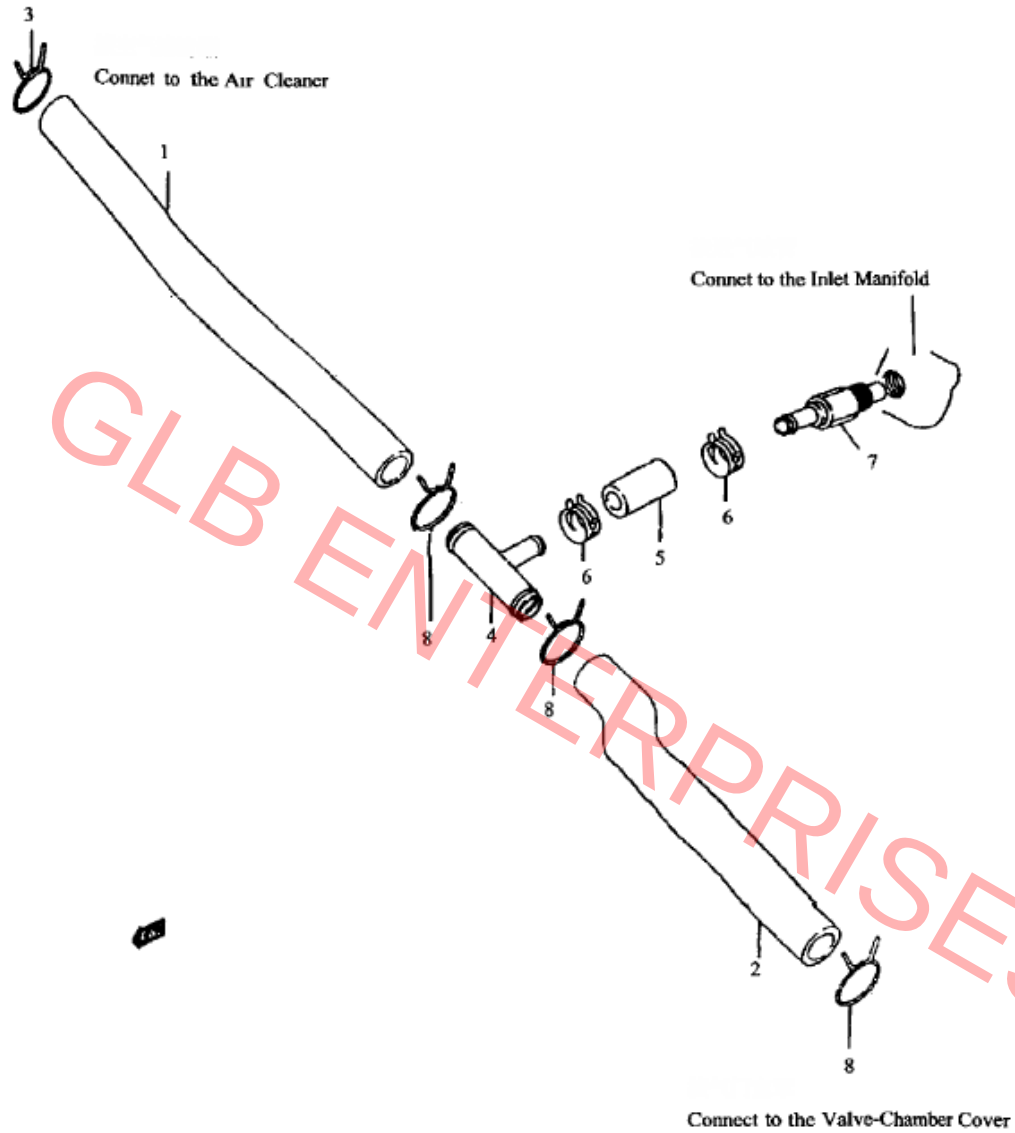


FIGURE 18 PCV VALVE (DELPHI)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	AIR INLET HOSE	465Q-1A/D-1000079	1	
2	HOSE TO VALVE COVER	465Q-1000079-1	1	
3	HOSE CLAMP	462-1000096	3	
4	3-WAY HOSE	465Q-1000820	1	
5	HOSE	465Q-1A/D-1000094	1	
6	HOSE CLAMP	465Q-1000092	2	
7	PCV VALVE	465Q-1014800	1	
8	HOSE CLAMP	462-1000080	1	

GLB ENTERPRISES

FIGURE 19 AIR CLEANER (EGI)

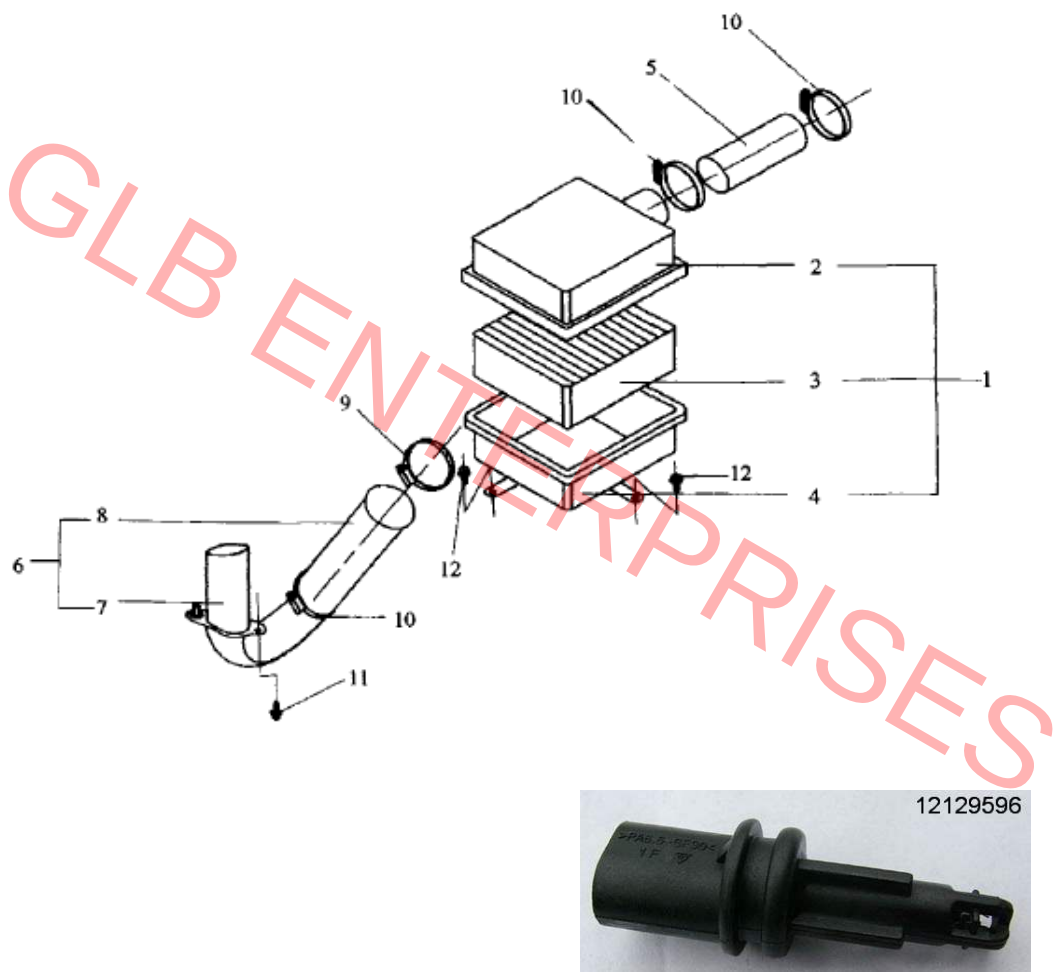


FIGURE 19 AIR CLEANER (EGI)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	AIR FILTER ASM	HFJ1109100DB	1	
		HFJ1109100FC	1	
	TOP FILTER HOUSING			
2	COVER	HFJ1109110DB	1	
3	AIR FILTER	HFJ1109130DB	1	
	LOWER FILTER			
4	HOUSING COVER	HFJ1109120DB	1	
5	AIR INLET HOSE TO TB	HFJ1109101DB	1	
6	AIR DUCT ASM	HFJ1109010DB	1	
7	AIR DUCT PIPE	HFJ1109011DB	1	
8	AIR DUCT HOSE	HFJ1109013DB	1	
9	HOSE CLAMP	HFJ1109007CA	1	
10	HOSE CLAMP	Q/2AM37-56	3	
11	BOLT	Q/2A-CJ-36 M6X16	2	
12	BOLT	Q/2A-CJ-36 M8C30	2	
13	AIR INLET TEMP SENSOR	12129596	1	

GLB ENTERPRISES

FIGURE 20 AIR CLEANER (HFJ6351B)

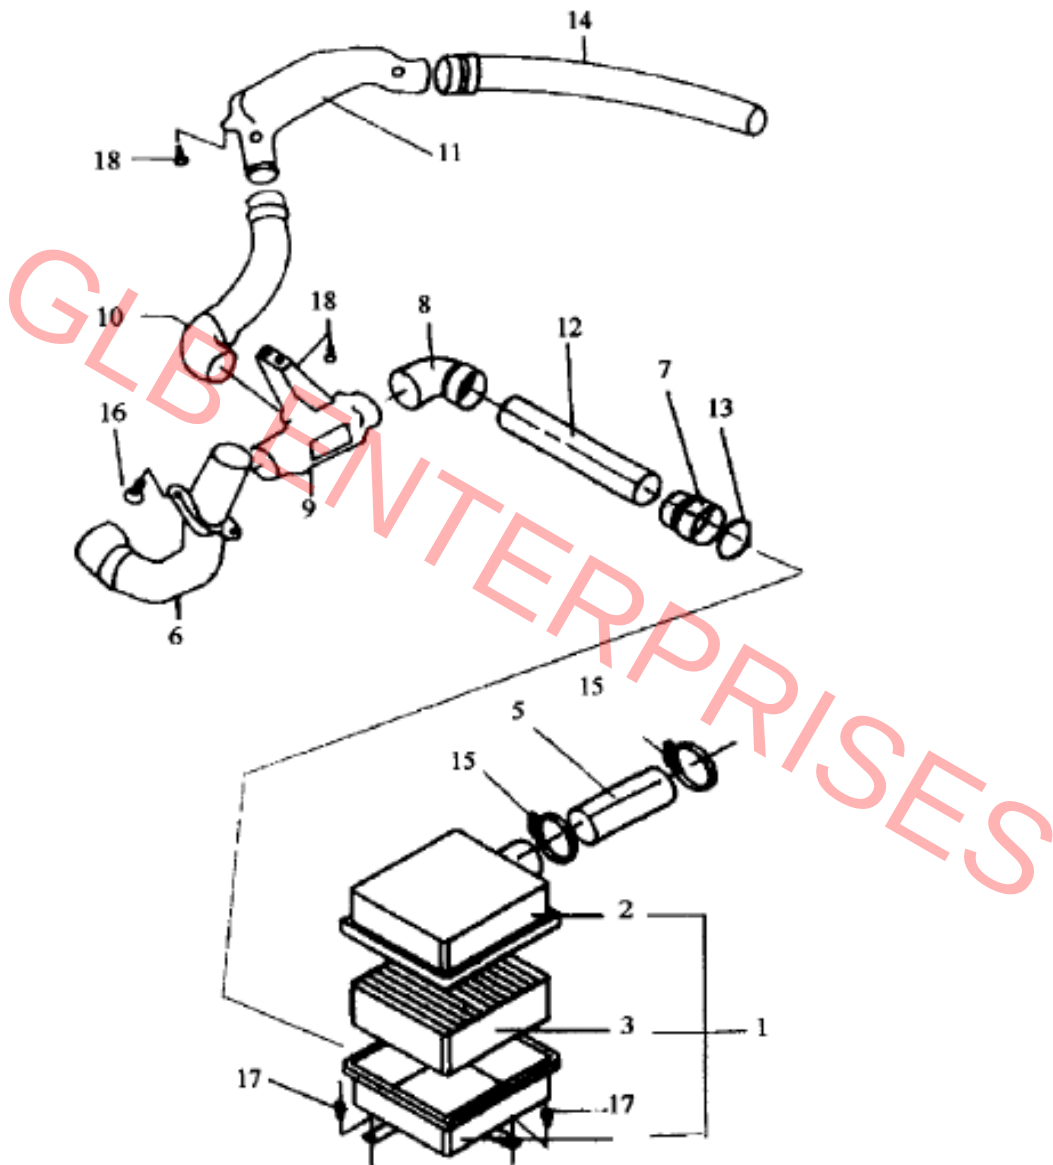


FIGURE 20 AIR CLEANER (HFJ6351B)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	AIR FILTER ASM	HFJ1109100DC	1	
2	TOP FILTER HOUSING COVER	HFJ1109110DB	1	
3	AIR FILTER	HFJ1109130DB	1	
4	LOWER FILTER HOUSING COVER	HFJ1109120DB	1	
5	AIR INLET HOSE TO TB	HFJ1109101DB	1	
6	AIR DUCT ASM	HFJ1109030CA	1	
7	JOINT HOSE	HFJ1109073CA	1	
8	JOINT HOSE	HFJ1109071CA	1	
9	AIR VALVE COVER ASM	HFJ1109200CA	1	
10	AIR VALVE COVER PIPE ASM	HFJ1109040CA	1	
11	HEATED AIR CAVITY ASM	HFJ1109050CA	1	
12	CORRUGATED PIPE	HFJ1109043CA	1	
13	CLAMP	HFJ1109007CA	1	
14	EXHAUST PIPE ASM	HFJ1109060CA	2	
15	CLAMP	Q/2AM37-56	2	
16	BOLT	Q/2A-CJ-36 M6X16	2	
17	BOLT	Q/2A-CJ-36 M8X30	2	
18	SCREW	Q-2A-CJ-47A-ST6 3X16	4	

FIGURE 21 AIR CLEANER (HFJ6350B)

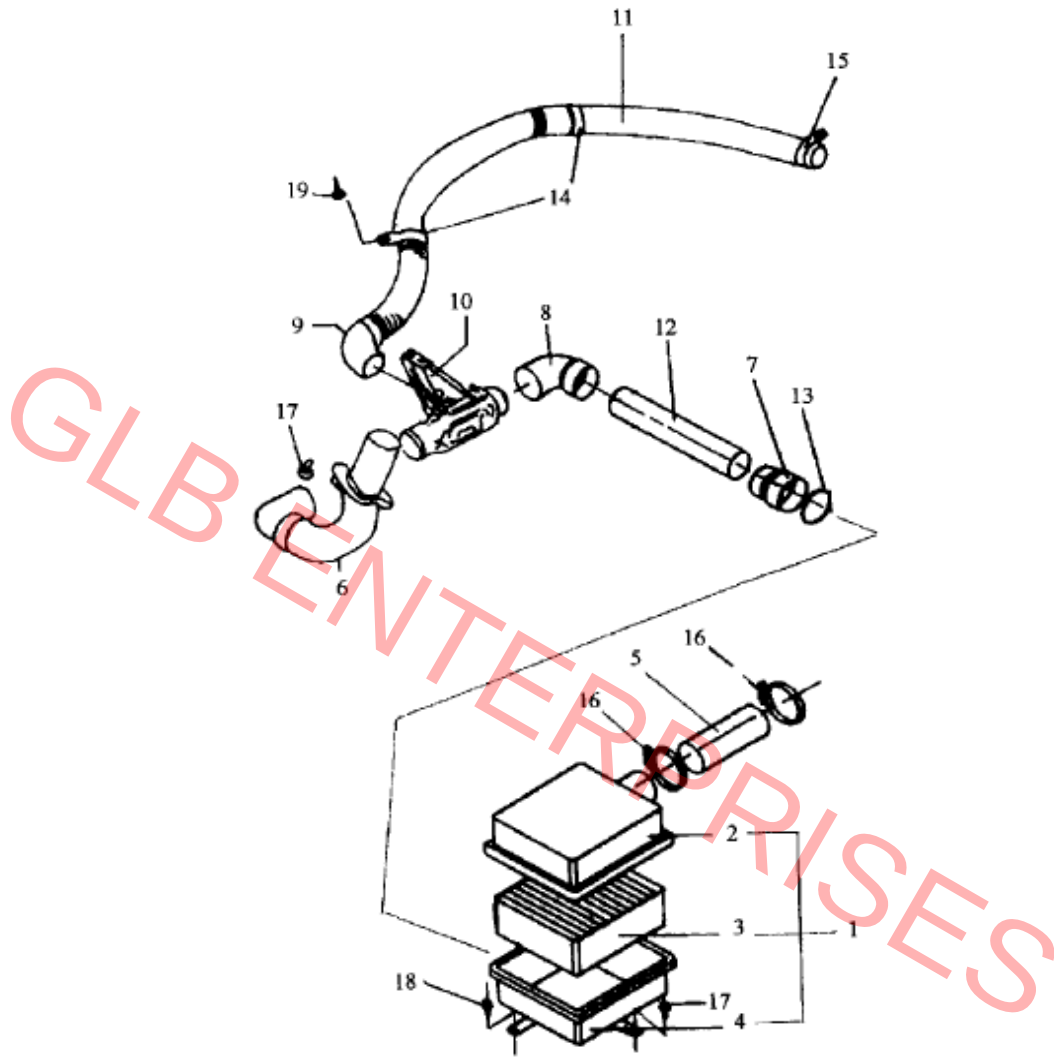


FIGURE 21 AIR CLEANER (HFJ6350B)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	AIR FILTER ASM	HFJ1109100DC	1	
2	TOP FILTER HOUSING COVER	HFJ1109110DB	1	
3	AIR FILTER	HFJ1109130DB	1	
4	LOWER FILTER HOUSING COVER	HFJ1109120DB	1	
5	AIR INLET HOSE TO TB	HFJ1109101DB	1	
6	AIR DUCT ASM	HFJ1109030CA	1	
7	JOINT HOSE	HFJ1109073CA	1	
8	JOINT HOSE	HFJ1109071CA	1	
9	JOINT HOSE	HFJ1109042CA	1	
10	AIR VALVE COVER PIPE ASM	HFJ1109200CA	1	
11	CORRUGATED PIPE	HFJ1109043CA	1	
12	CORRUGATED PIPE	HFJ1109043CA	1	
13	CLAMP	HFJ11090007CA	1	
14	CLAMP	HJF1109005FA	2	
15	CLAMP	Q/2AM37-56	1	
16	CLAMP	Q/2AM37-56	2	
17	BOLT	Q/2A-CJ-36 M6X16	2	
18	BOLT	Q/2A-CJ36 M8X30	2	
19	SCREW	Q/2A-CJ47A-ST6 3X16	4	

FIGURE 22 AIR CLEANER (HFJ1011G)

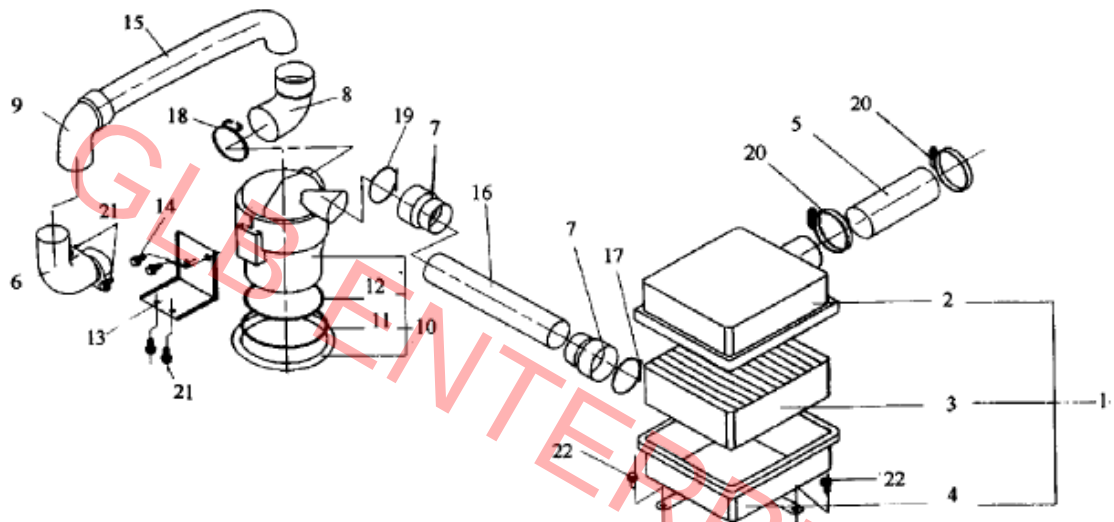


FIGURE 22 AIR CLEANER (HFJ1011G)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	AIR FILTER ASM	HFJ1109100FC	1	
2	TOP FILTER HOUSING COVER	HFJ1109110DB	1	
3	AIR FILTER	HFJ1109130DB	1	
4	LOWER FILTER HOUSING COVER	HFJ1109120DB	1	
5	PIPE	HFJ1109101DB	1	
6	AIR DUCT ASM	HFJ1109030CB	1	
7	JOINT HOSE	HFJ1109073CA	2	
8	JOINT HOSE	HFJ1109071CA	1	
9	JOINT HOSE	HFJ1109072CA	1	
10	PRE-FILTER ASM	HFJ1109100CA	1	
11	SEALING RING	HFJ1109105CA	1	
12	AIR DEFLECTOR	HFJ1109103CA	1	
13	PRE-FILTER BRACKET	HFJ1109006CB	1	
14	BOLT	Q150B0816-6G	2	
15	CORRUGATED PIPE	HFJ1109044CA	1	
16	CORRUGATED PIPE	HFJ1109045CB	1	
17	CLAMP	HFJ1109007CA	1	
18	CLAMP	HFJ1109007FA	1	
19	CLAMP	HFJ11090008FA	1	
20	CLAMP	Q/2AAM37-56	2	
21	BOLT	Q/2A-CJ-36 M6X16	4	
22	BOLT	Q/2A-CJ-36 M8X30	2	

FIGURE 23 AIR CLEANER (HFJ1011H)

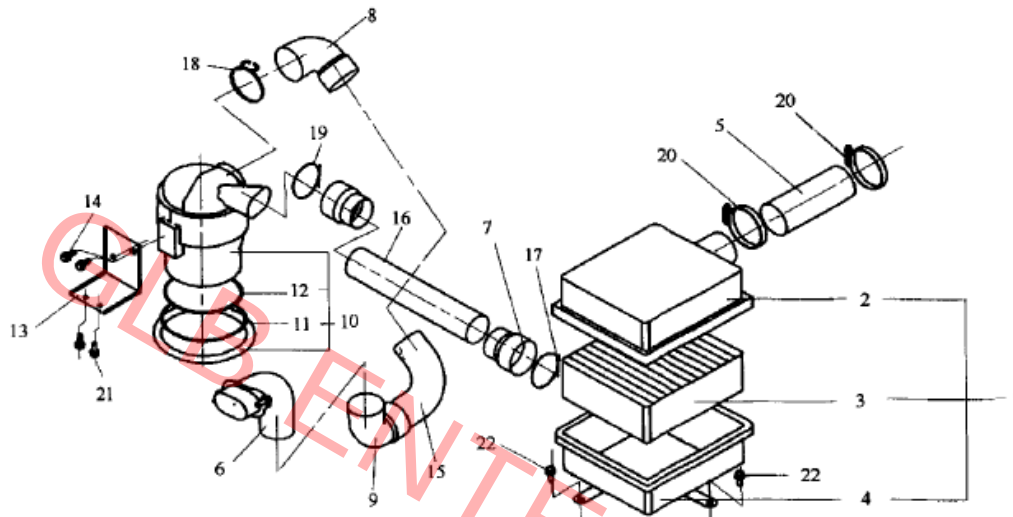


FIGURE 23 AIR CLEANER (HFJ1011H)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	AIR FILTER ASM	HFJ1109100FC	1	
2	TOP FILTER HOUSING COVER	HFJ1109110DB	1	
3	AIR FILTER	HFJ1109130DB	1	
4	LOWER FILTER HOUSING COVER	HFJ1109120DB	1	
5	PIPE	HFJ1109101DB	1	
6	AIR DUCT ASM	HFJ1109030CB	1	
7	JOINT HOSE	HFJ1109073CA	2	
8	JOINT HOSE	HFJ1109071CA	1	
9	JOINT HOSE	HFJ1109072CA	1	
10	PRE-FILTER ASM	HFJ1109100CA	1	
11	SEALING RING	HFJ1109105CA	1	
12	AIR DEFLECTOR	HFJ1109103CA	1	
13	PRE-FILTER BRACKET	HFJ1109006CB	1	
14	BOLT	Q/2A-CJ-22 M8X16	2	
15	CORRUGATED PIPE	HFJ1109007DG	1	
16	CORRUGATED PIPE	HFJ1109008DG	1	
17	CLAMP	HFJ1109007CA	1	
18	CLAMP	HFJ1109007FA	1	
19	CLAMP	HFJ1109008FA	1	
20	CLAMP	Q/2AAM37-56	2	
21	BOLT	Q/2A-CJ-36 M6X16	4	
22	BOLT	Q/2A-CJ-36 M8X30	2	

FIGURE 24 EXHAUST MANIFOLD (EGI)

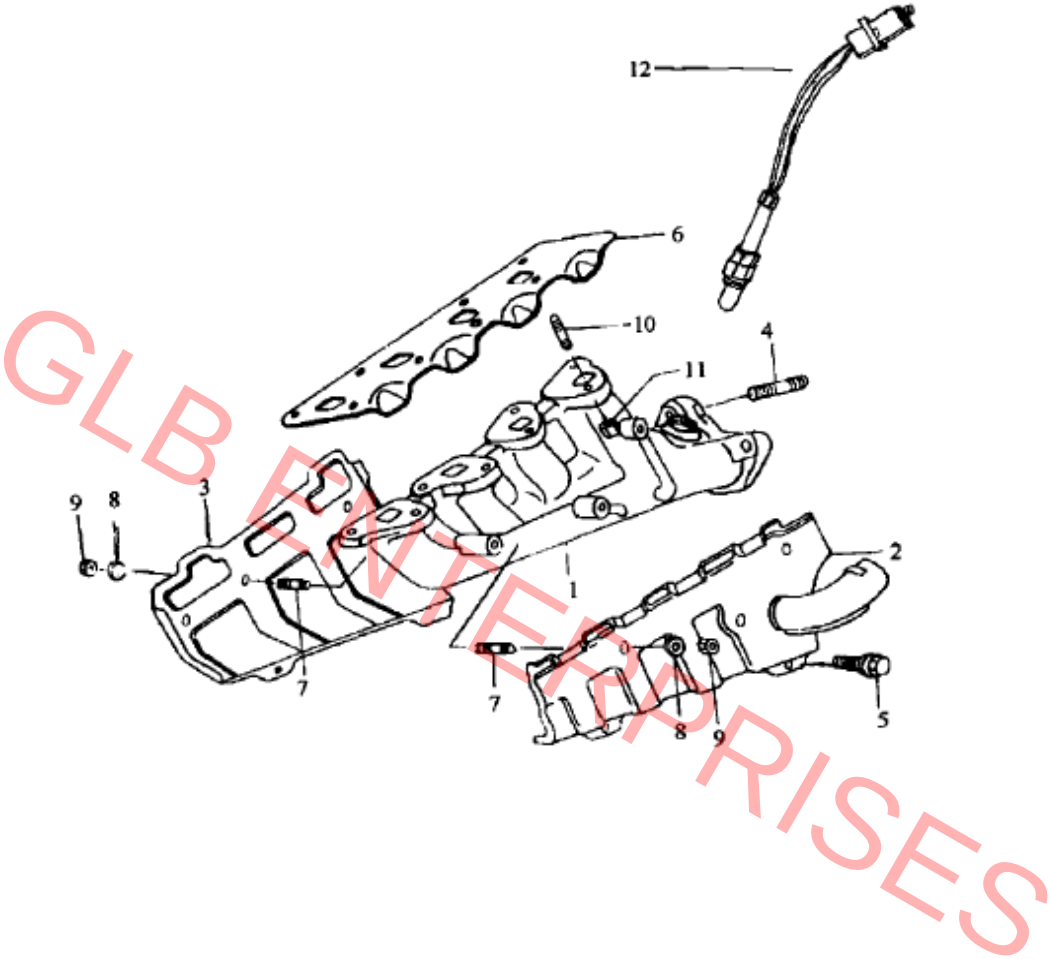


FIGURE 24 EXHAUST MANIFOLD (EGI)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	EXHAUST MANIFOLD ASM	465Q-1A/D-1008810/01	1	DELPHI
		465Q-1A/D1008810	1	UAES
2	HEAT BAFFLE	465Q-1008804	1	
3	LOWER HEAT BAFFLE	465Q-1000821	1	
4	STUD BOLT	465Q-1008203	3	
5	SCREW	462-1000228	2	
6	HEAT SHIELD	462-1A/D-1008802	1	
7	STUD BOLT	462-1008202	6	
8	WASHER	GB97.1-85-6-140HV	6	
9	NUT	GB6170-86-M6	6	
10	STUD BOLT	465Q-1003201	8	
11	NUT	GB6170-86-M8	8	
12	OXYGEN SENOR	462-1A/D-1207800	1	DELPHI
		465Q-1A/D-1207800	1	UAES

GLB ENTERPRISES

FIGURE 25 EXHAUST MANIFOLD (CARBURETOR)

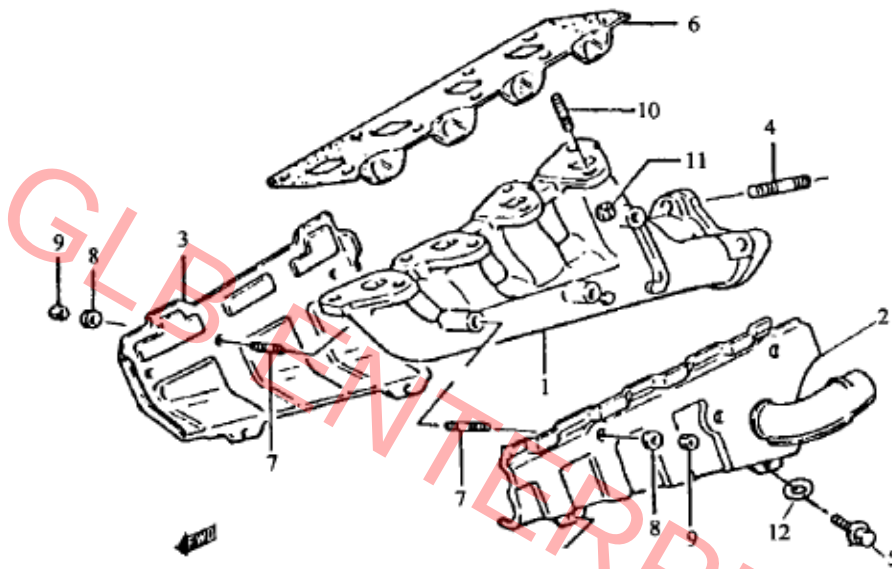


FIGURE 25 EXHAUST MANIFOLD (CARBURETOR)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	EXHAUST MANIFOLD ASM	465Q-1008801	1	HFJ6350B
		465Q-1008006	1	HFJ6351B
2	HEAT BAFFLE	465Q-1008804	1	
3	LOWER HEAT BAFFLE	465Q-1000821	1	HFJ6350B, HFJ6351B
4	STUD BOLT	465Q-1008203	3	
5	SCREW	GB5783-86 M6X10	2	
6	HEAT SHIELD	462-1008802	1	
7	STUD BOLT	462-1008202	6	
8	WASHER	GB97.1-85-6 140HV	6	
9	NUT	BG6170-85-M6	6	
10	STUD BOLT	465Q-1003201	8	
11	NUT	M8 51-86	8	
12	WASHER	GB97.1-85-6 140HV	1	

GLB ENTERPRISES

FIGURE 26 MUFFLER (EGI)

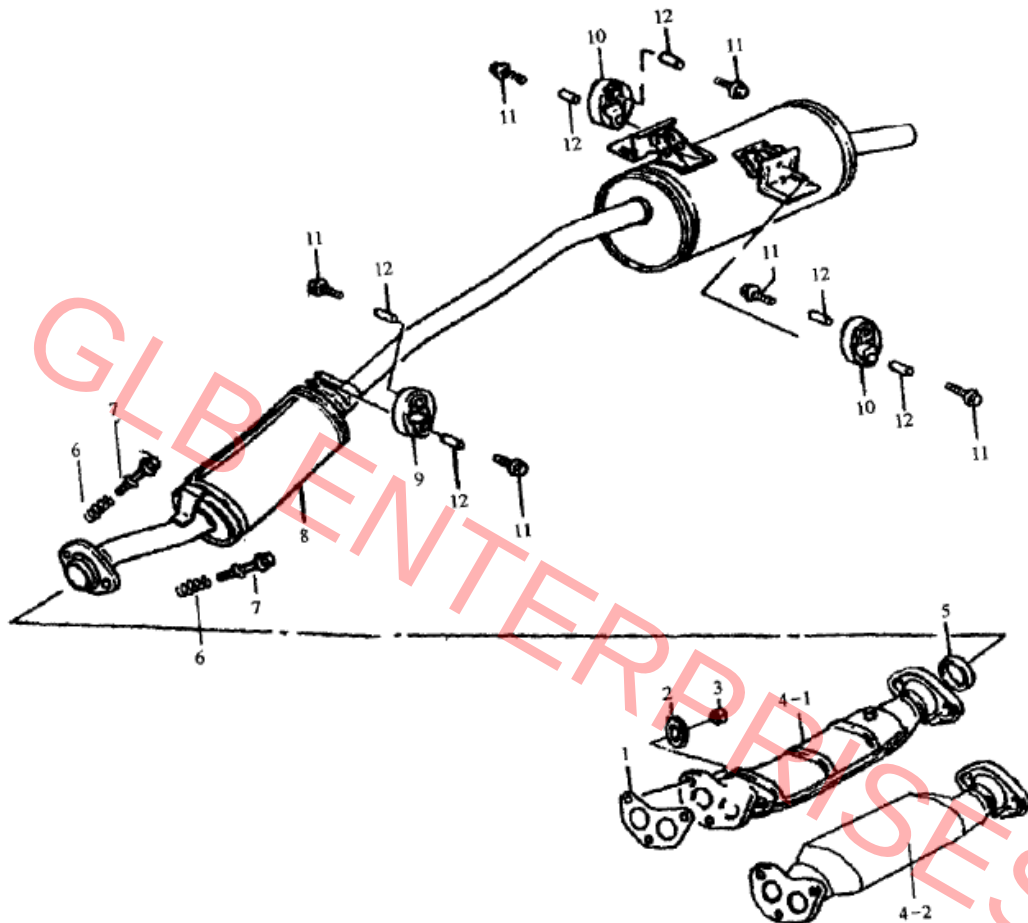


FIGURE 26 MUFFLER (EGI)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	GASKET	HFJ1200010DB	1	
2	SPRING WASHER	Q40410	3	
3	NUT	Q/2A-CJ-250 M10X1.50	3	
4	CATALYSTIC CONVERTER	HFJ1203000DA	1	HFJ6351B
	CATALYSTIC CONVERTER	HFJ1203000DB	1	HFJ6350B
		HFJ1200003DC		
5	SEALING RING	HFJ1200008CA	1	
6	SPRING	HFJ1200007CA	2	
7	BOLT	Q/2A-CJ-455	2	
8	MUFFLER ASM	HFJ1201000FB	1	
		HFJ1201000DC	1	C-VAN
9	MUFFLER HANGER	HFJ1200021CA	1	
10	MUFFLER HANGER	HFJ1200031CA	2	
11	BOLT	Q/2A-CJ-30 M8X38	6	
12	MUFFLER HANGER BUSHING	HFJ1200022CA	6	

GLB ENTERPRISES

FIGURE 27 MUFFLER (HFJ6350B)

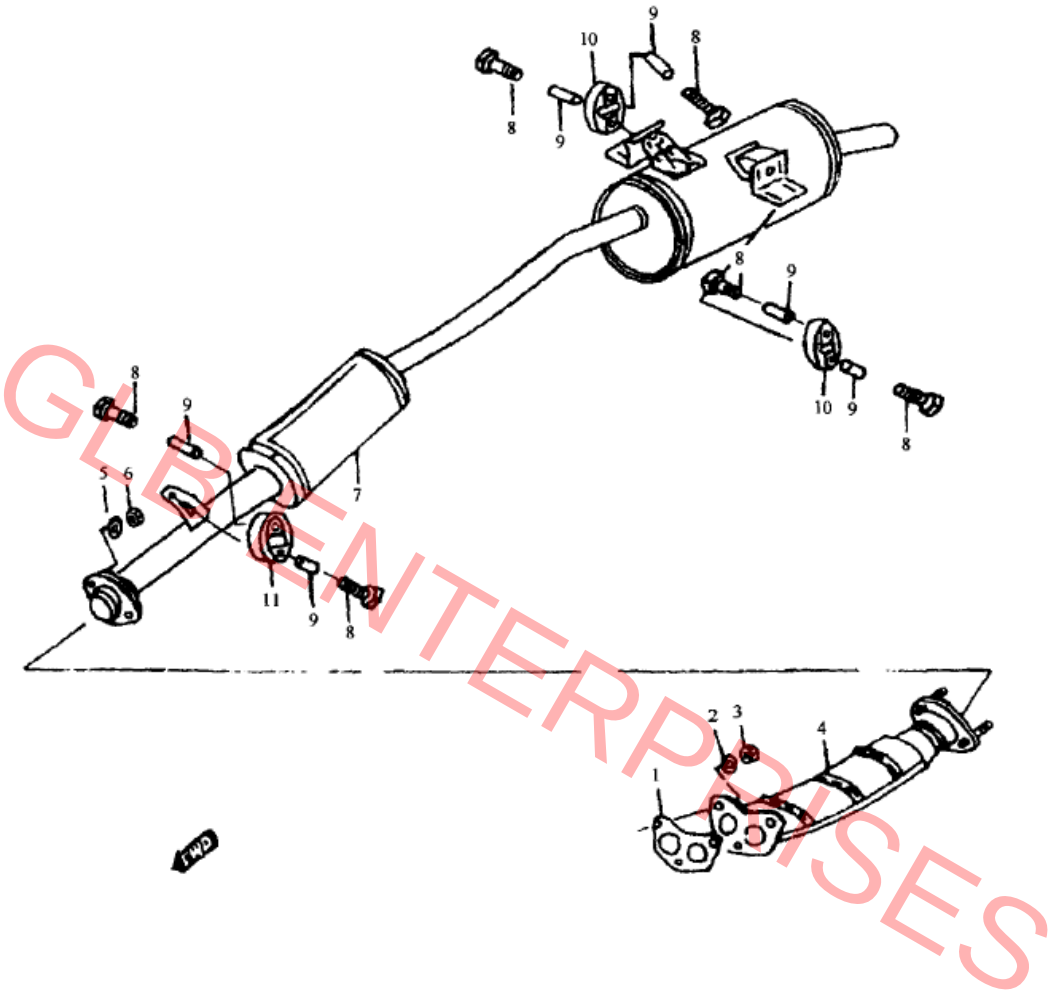


FIGURE 27 MUFFLER (HFJ6350B)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	GASKET	HFJ1001007FA	1	
2	SPRING WASHER	Q40510	3	
3	NUT	Q/2AJ159 M10X1.25	3	
4	CATALYSTIC CONVERTER	HFJ1001008FA	1	
5	SPRING WASHER	Q40410	3	
6	NUT	Q/2A-CJ-250 M10X1.25	2	
7	MUFFLER ASM	HFJ1201000FA	1	P-VAN
8	BOLT	Q/2A-CJ-30 M8X38	6	
9	MUFFLER HANGER BUSHING	HFJ1200022CA	6	
10	MUFFLER HANGER	HFJ1200031CA	2	
11	MUFFLER HANGER	HFJ1200021CA	1	

GLB ENTERPRISES

FIGURE 28 MUFFLER (HFJ1011G, HFJ1011H)

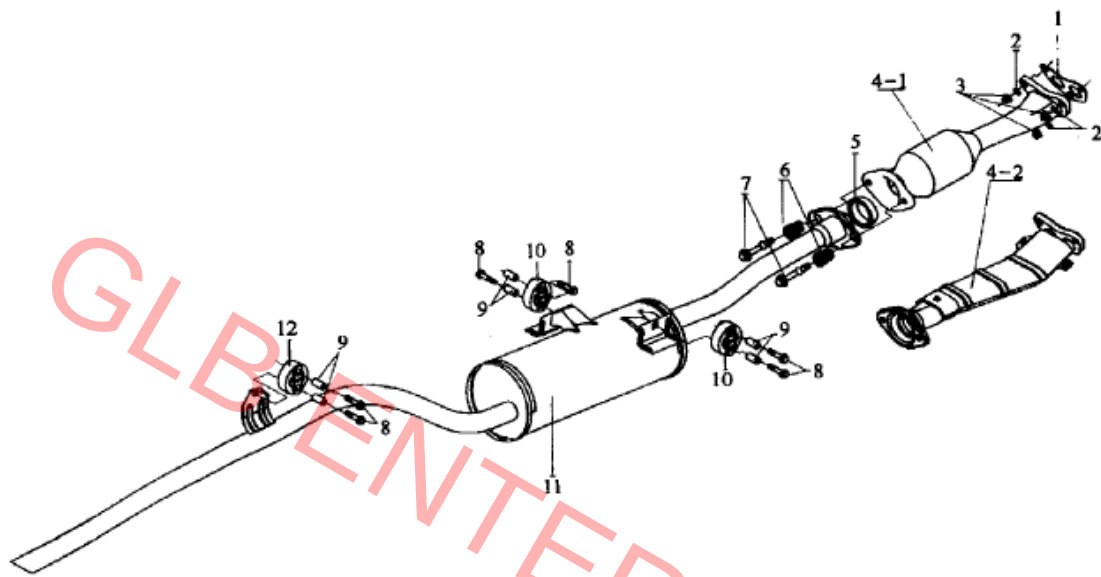


FIGURE 28 MUFFLER (HFJ1011G, HFJ1011H)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	GASKET	HFJ1200010DB	1	1
2	SPRING WASHER	Q40410	3	3
3	NUT	Q/2A-CJ-250 M10X1.25	3	3
4-1	CATALYSTIC CONVERTER	HFJ1203000DC	1	1
4-2		HFJ1203000DA	1	STD. 2-DOOR
5	SEALING RING	HFJ1200008CA	1	1
6	SPRING	HFJ1200007CA	2	2
7	BOLT	Q/2A-CJ-455	2	2
8	BOLT	Q/2A-CJ-30 M8X38	6	6
9	MUFFLER HANGER BUSHING	HFJ1200022CA	6	6
10	MUFFLER HANGER	HFJ1200031CA	2	2
11	MUFFLER ASM	HFJ1201000DG	1	CREW CAB
		HFJ1200000DE	1	STD. 2-DOOR
12	MUFFLER HANGER	HFJ1200021CA	1	1

GLB ENTERPRISES

FIGURE 29 OIL PUMP (EGI)

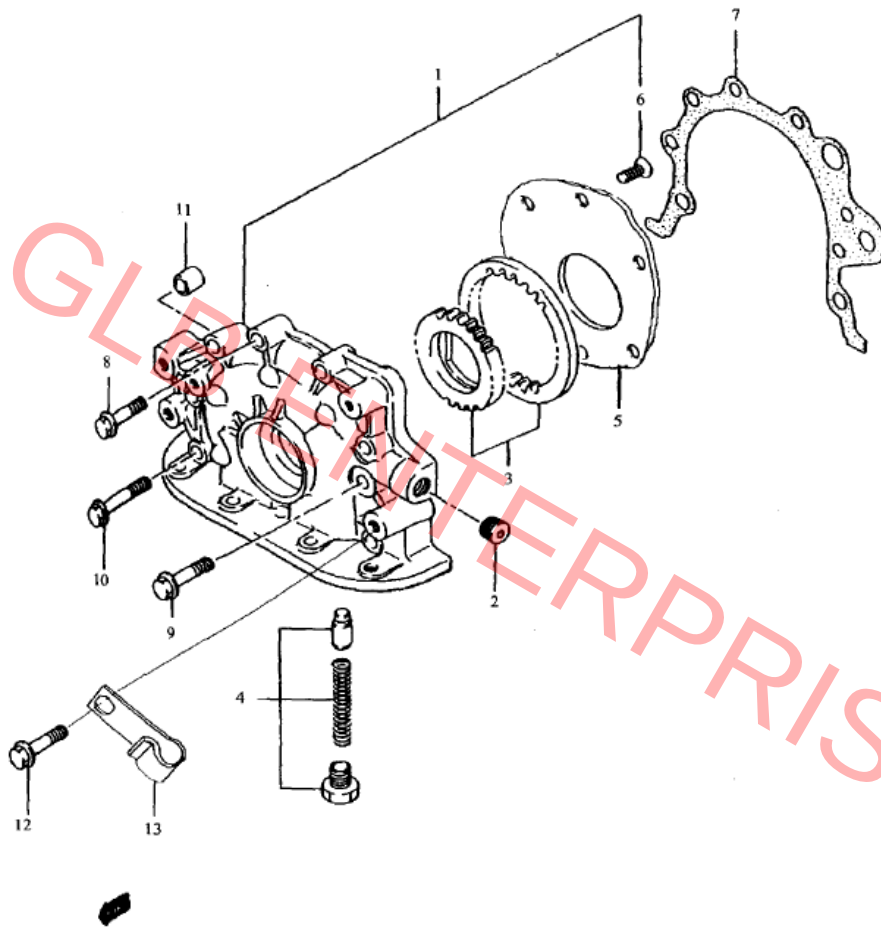


FIGURE 29 OIL PUMP (EGI)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	OIL PUMP ASM	462-1011950	1	
2	PIPE PLUG	462-100025D	1	
3-1	OUTER PUMP GEAR	462-1011006-01	1	
3-2	INNER PUMP GEAR	462-1011007	1	
	PRESSURE RELIEF			
4-1	VALVE	462-1011003	1	
4-2	SPRING	462-1011004	1	
4-3	SPRING SEAT	462-1011005	1	
5	REAR PUMP COVER	462-1011002	1	
6	SCREW	462-1003206	6	
		462-1000018-01	1	1
7	RUBBER GASKET	462-1000018	1	
8	SCREW	462-1000217	1	
		GB5783-86 M6X32		
9	SCREW	462-1000218	5	
		GB5783-86 M6X35		
10	SCREW	462-1000219	2	
		GB5783-86 M6X42		
11	DOWEL PIN	462-1000017	2	
12	SCREW	462-1000812	1	
13	WIRE CLIP	462-1000020	1	
	OIL FILTER	1012010D2	1	

FIGURE 30 OIL PUMP (HFJ6350)

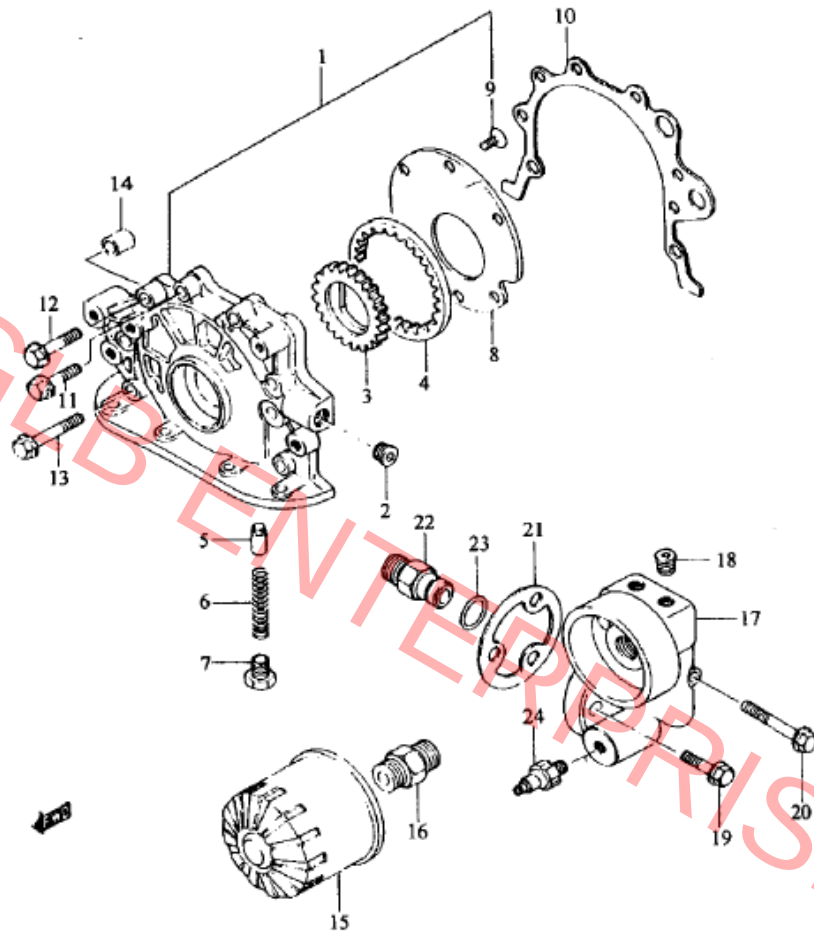


FIGURE 30 OIL PUMP (HFJ6350)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	OIL PUMP ASM	462-10011950	1	
2	PIPE PLUG	462-1000250	3	
3	OUTER PUMP GEAR	462-1011006	1	
4	INNER PUMP GEAR	462-1011007	1	
	PRESSURE RELIEF			
5	VALVE	462-1011003	1	
6	SPRING	462-1011004	1	
7	SPRING SEAT	462-1011005	1	
8	REAR PUMP COVER	462-1011002	1	
9	SCREW	462-1003206	6	
10	RUBBER GASKET	462-1000018	1	
11	SCREW	GB5783-86 M6X32	1	
12	SCREW	GB5783-86 M6X42	2	
13	SCREW	GB5783-86 M6X42	2	
14	DOWEL PIN	462-1000017	2	
15	OIL FILTER	1012010D2	1	

GLB ENTERPRISES

FIGURE 31 CLUTCH (EGI)

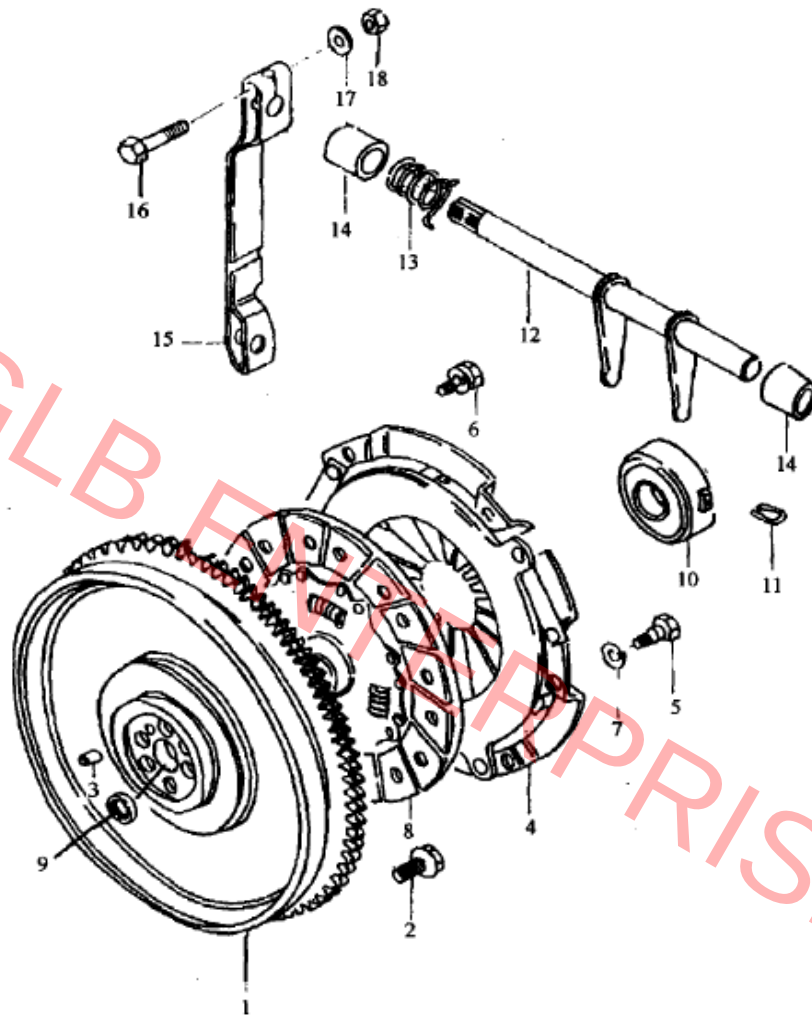


FIGURE 31 CLUTCH (EGI)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	FLYWHEEL ASM	462-1A/D-1005803	1	TRIGGER FIRE
2	FLYWHEEL BOLT	462-1005201-A	6	
3	DOWEL PIN	6X10111BGB4661	1	
4	PRESSURE PLATE	LH10-1601900/01	1	1600010D
5	LOCATING BOLT	462-1000238	2	
6	BOLT	462-1000810	4	
7	SPRING WASER	GB93-87 8	2	
8	CLUTCH DISK	LH10-1601800-01	1	1602010D
9	PILOT BEARING	600DDUR	1	GB/T276-94
10	THROW-OUT BEARING	462-1601860	1	48RCT33001
11	SPRING CLIP	462-1700013	2	
12	CLUTCH RELEASE SHAFT	462-1601806	1	
13	CLUTCH RELEASE SPRING	462-1601022	1	
14	CLUTCH RELEASE SHAFT BUSHING	462-1601021	2	
15	CLUTCH ARM	462-1700012-A	1	
17	WASHER	462-1000235	1	
18	NUT	GB6170-86 M8	1	

FIGURE 32 CLUTCH (4-SPEED)

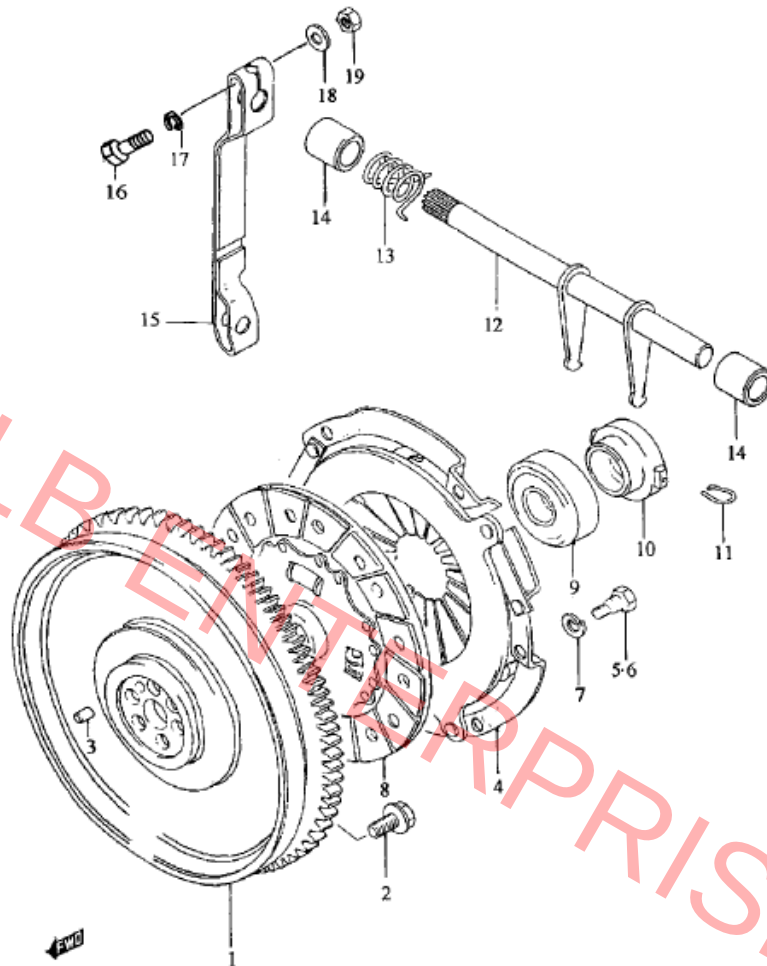


FIGURE 32 CLUTCH (4-SPEED)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	FLYWHEEL ASM	462-1005803	1	
2	FLYWHEEL BOLT	462-1005201	6	
3	DOWEL PIN	462-1003007	1	
4	PRESSURE PLATE	462-161900	1	1600010D
5	LOCATING SCREW	462-1000238	2	
6	SCREW	QGB21-76 M8X16	4	
7	SPRING WASHER	GB859-87 8	6	
8	CLUTCH DISC	462-1601800	1	1602010D
9	THROW-OUT BEARING	462-1601025	1	4MT
10	RELEASE SLEEVE	462-1601026	1	
11	SPRING CLIP	462-1700013	2	
12	CLUTCH RELEASE SHAFT	462-1601806	1	
13	CLUTCH RELEASE SHAFT SPRING	462-1601022	1	
14	CLUTCH RELEASE SHAFT BUSHING	462-1601021-A	1	
15	CLUTCH ARM	462-1700012-A	1	
16	SCREW	GB21-79 M8X38X22	1	
17	WASHER	GB97.1-85-6 140HV	1	
18	WASHER	462-1000235	1	
19	NUT	GB51-76 M8	1	

FIGURE 33 CLUTCH (5-SPEED)

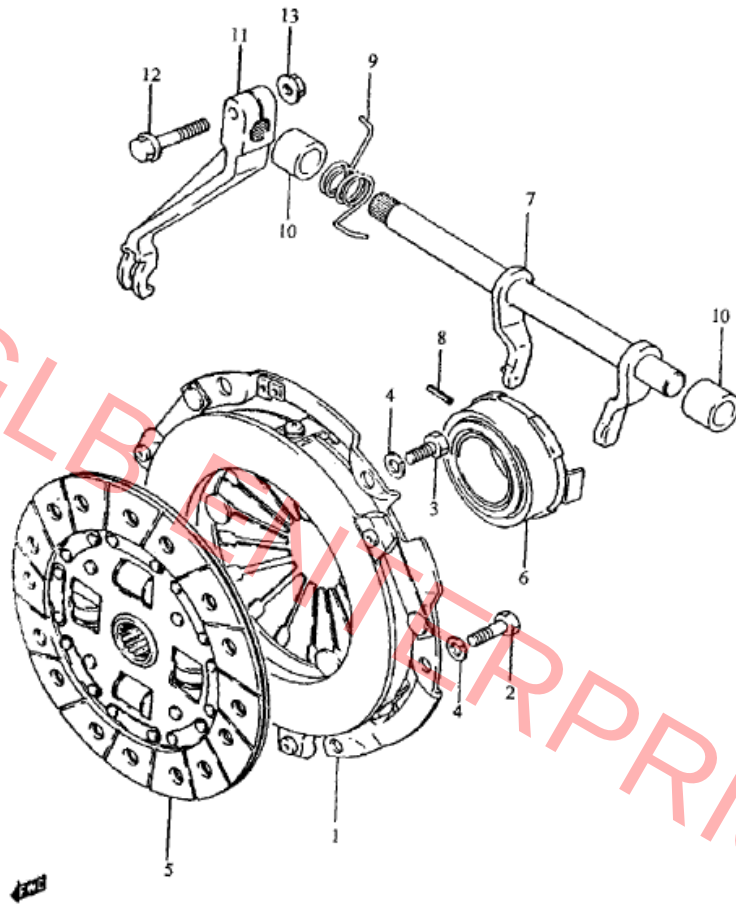


FIGURE 33 CLUTCH (5-SPEED)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	PRESSURE PLATE	LH10-1601900	1	1600010D
2	LOCATING SCREW	462-1000238	2	
3	SCREW	QGB21-76 M8X16	4	
4	SPRING WASHER	SG859-87 8	6	
5	CLUTCH DISC	462-1601800	1	1602010D
6	THROW-OUT BEARING	LH10-1601910-01	1	
7	CLUTCH RELEASE SHAFT	LH10-1601840	1	5MT
8	SPRING PIN	GB879-86 3X10	1	
9	CLUTCH RELEASE SHAFT SPRING	LH10-1601022	1	
10	CLUTCH RELEASE SHAFT BUSHING	LH10-1601035	1	
11	CLUTCH ARM	LH10-1601035	1	
12	SCREW	GB21-76 M8X35	1	
	WASHER	GB97.1-85-8 140HV	1	
13	NUT	GB51-76 M8	1	

GLB ENTERPRISES

FIGURE 34 TRANSMISSION CASE (4-SPEED)

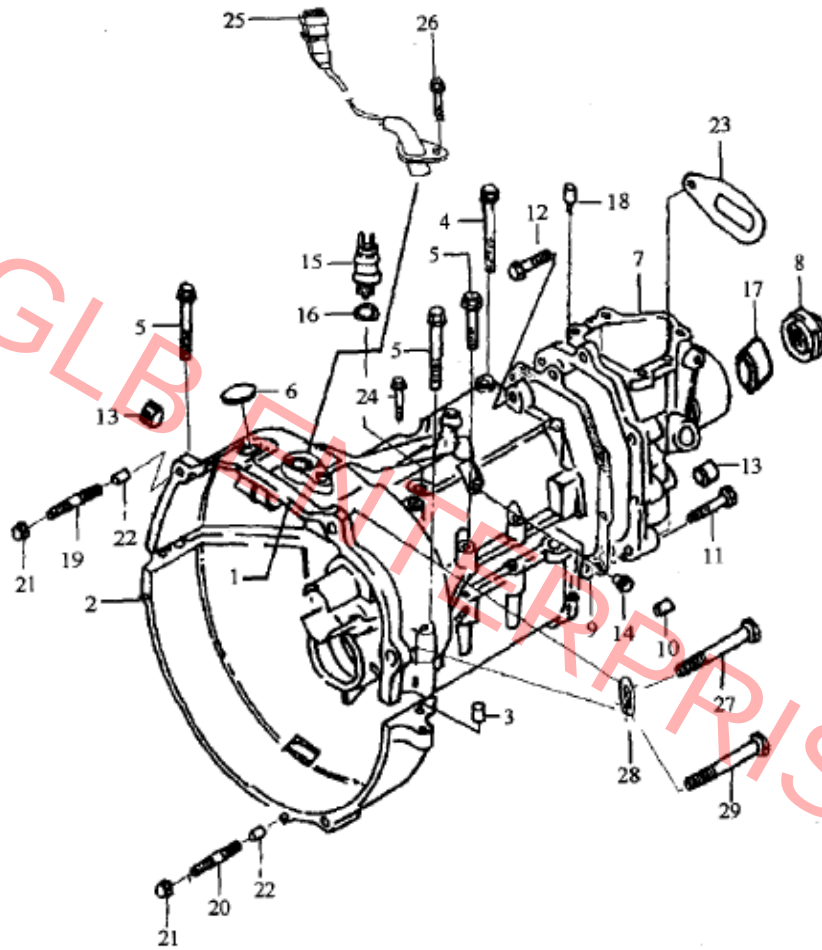


FIGURE 34 TRANSMISSION CASE (4-SPEED)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	TRANS. UPPER CASE ASM	BS09/D-1701005	1	
2	TRANS. LOWER CASE ASM	BS09-1701001	1	
3	SET COLLAR	462-1700018	2	
4	SCREW	462-1700202	4	
5	SCREW	462-100203	4	
6	INSPECTION HOLE RUBBER CAP	462-1701004	1	
7	TAIL HOUSING	462-1701006/01	1	
8	TAIL HOUSING SEAL	462-1701903	1	
9	GASKET	462-1700011	1	
10	SET COLLAR	462-170008	2	
11	SCREW	462-1700205	7	
12	SCREW	462-1000244	1	
13	PIPE PLUG	462-1701206-A	2	
14	RUBBER PLUG	462-1701003-A	1	
15	BACK-UP LAMP SWITCH	462-3729950	1	
16	BACK-UP LAMP SWITCH O-RING	462-1700010	1	
17	BUSHING	462-1701011/01	1	
18	BREATHER VALVE	462-1701804	1	
19	STUD BOLT	462-1701202	1	
20	STUD BOLT	462-1701201	1	
21	NUT	462-1000212	2	
22	DOWEL PIN	462-1000015	2	
23	HOOK	462-1000042	1	
24	BOLT	462-1700204	2	
25	CRANKSHAFT POSITION SENSOR	462-1A/D-3700800	1	
26	SCREW	462-1000801	1	
27	SCREW	462-1000241	1	
28	WASHER	462-1000247	2	
29	SCREW	462-1000242	1	

FIGURE 35 TRANSMISSION (4-SPEED)

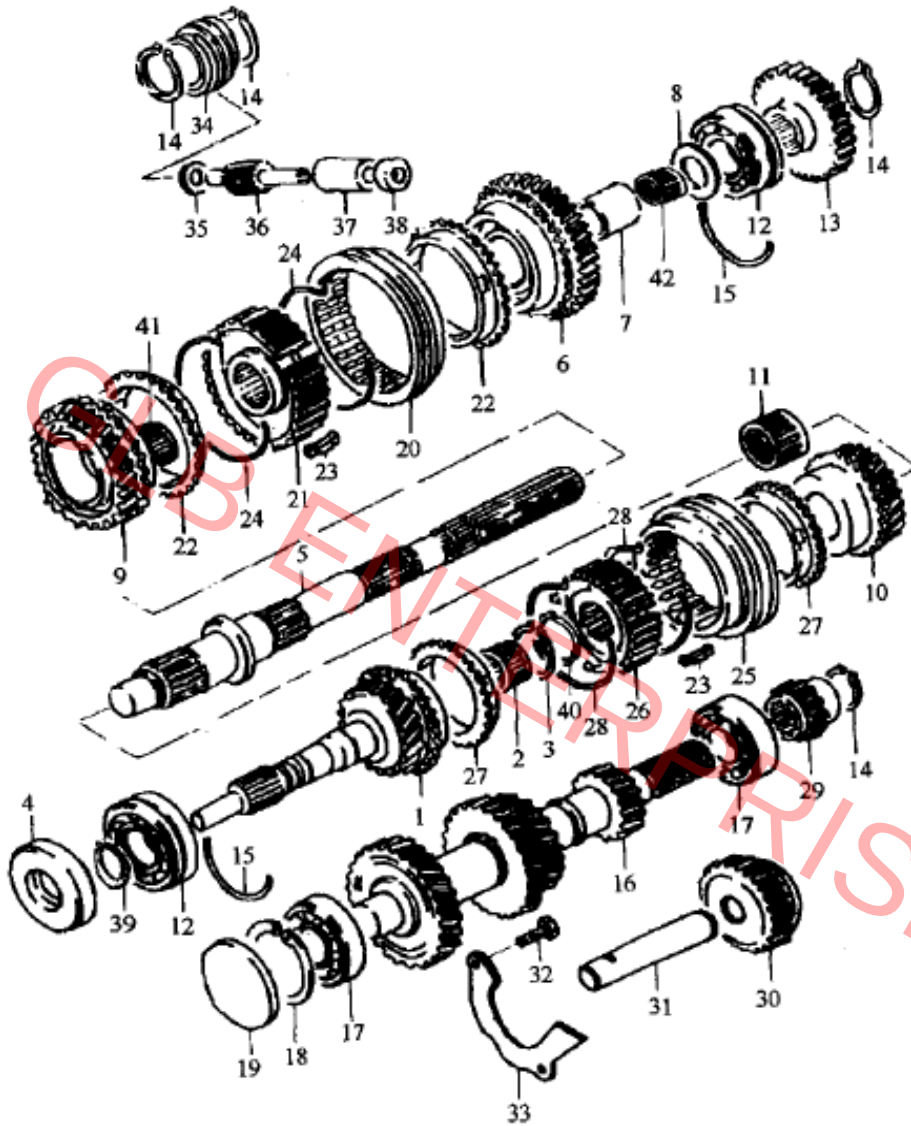


FIGURE 35 TRANSMISSION (4-SPEED)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	NO.1 SHAFT ASM	BS09-1701810	1	
2	ROLLER BEARING	K17.52215.7	1	
3	HOG RING	462-1701061	1	
4	INPUT SHAFT SEAL	BS09-1701940	1	
5	NO.2 SHAFT	BS09-1701027-B	1	
6	GEAR MAIN SHAFT	BS09-1701044	1	
7	GEAR MAIN SHAFT 1st BUSHING	BS09-1701029	1	
8	THRUST WASHER	462-1701034	1	
9	GEAR MAIN SHAFT 2nd	BS09-1701046	1	
10	GEAR MAIN SHAFT 3rd	BS09-1701035	1	
11	ROLLER BEARING	K253028	1	
12	BEARING	6304N/P63	2	
13	REVERSE DRIVEN GEAR	BS09-1701031	1	
14	RETAINING RING	462-1701063	4	
15	"C" CLIP	462-1700002	2	
16	MIDDLE GEAR SHAFT	BS09-1701052	1	
17	BEARING	6204/P63	2	
18	RETAINING RING	47GB893-76, 47GB893.1	1	
19	CAP PLUG	462-1701809-A	1	
20	TOOTHED RING OUTER	462-1701042	1	
21	LOW-SPEED CONNECTING TOOTHED RING	462-1701043-01	1	
22	LOW-SPEED BAULK RING	462-1701045-A2	2	
23	KEY	462-1701038/01	6	
24	SPING HOG RING	462-1701041	2	
25	TOOTHED RING OUTER	462-1701039	1	
26	HIGH-SPEED CONNECTING TOOTHED RING	BS09-1701057	1	
27	HIGH-SPEED BAULK RING	462-1701024-A	2	
28	SPRING HOG RING	462-1701037	2	
29	REVERSE DRIVEN GEAR	462-1700004-A	1	
30	REVRSE MIDDLE GEAR	BS09-1701830	1	
31	REVRSE GEAR SHAFT	462-1700007	1	
32	SCREW	462-100801	2	
33	BEARING BAFFLE	BS09-1700003	1	
34	SPEED CHART WORM	462-1701032-B	1	
35	THRUST WASHER	462-1701009	1	
36	SPEED CHAR DRIVEN GEAR	462-17010008-B2	1	
37	BUSHING	462-1701010	1	
38	OIL SEAL	462-1701902	1	
39	HOG RING	20GB894.1-89	1	
40	RETAINING RING	462-1701033	1	
41	ROLLER BEARING 2nd SHAFT	K253020	1	
42	ROLLER BEARING 1st SHAFT	K253025	1	

FIGURE 36 TRANSMISSION CASE (5-SPEED)

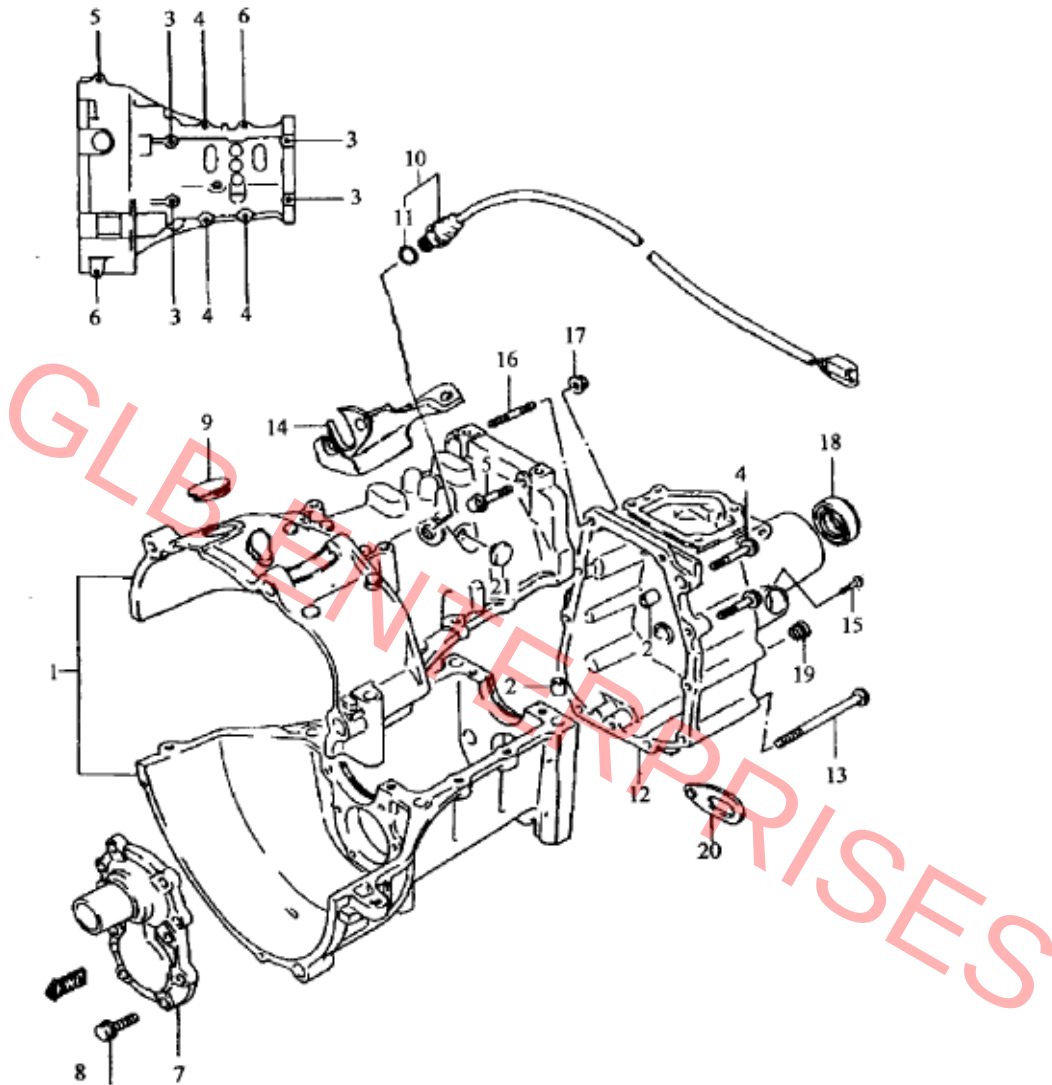


FIGURE 36 TRANSMISSION CASE (5-SPEED)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	TRANSMISSION UPPER CASE ASM	BS09/D-1701005	1	
2	TRANSMISSION LOWER CASE ASM	BS09-1701001	1	
3	SET COLLAR	462-1700018	2	
4	BOLT	462-1700202	4	
5	BOLT	462-1700203	4	
6	INSPECTION CAP	462-1701004	1	
7	INPUT HOUSING ASM	462-1701006/01	1	
8	INPUT HOUSING SEAL	462-1702045	1	462-1701903
9	GASKET	462-1700011	1	
10	BACKUP LAMP/NEUTRAL SAFETY	462-1700008	2	
11	BOLT	462-1700205	7	
12	BOLT	462-1000244	1	
13	PIPE PLUG	462-1701003-A	2	
14	PLUG	462-1701003-A	1	
15	BACK-UP LIGHT SWITCH	462-3729950	1	
16	BACK-UP LIGHT SWITCH SEAL	462-1700010	1	
17	BUSHING	462-1701011/01	1	
18	BREATHER VALVE ASM	BS10-2200900-A	1	
19	STUD BOLT	462-1701202	1	
20	HOOK	462-1000042	1	
21	PLUG	BS10-1700013	1	

FIGURE 37 TRANSMISSION (5-SPEED)

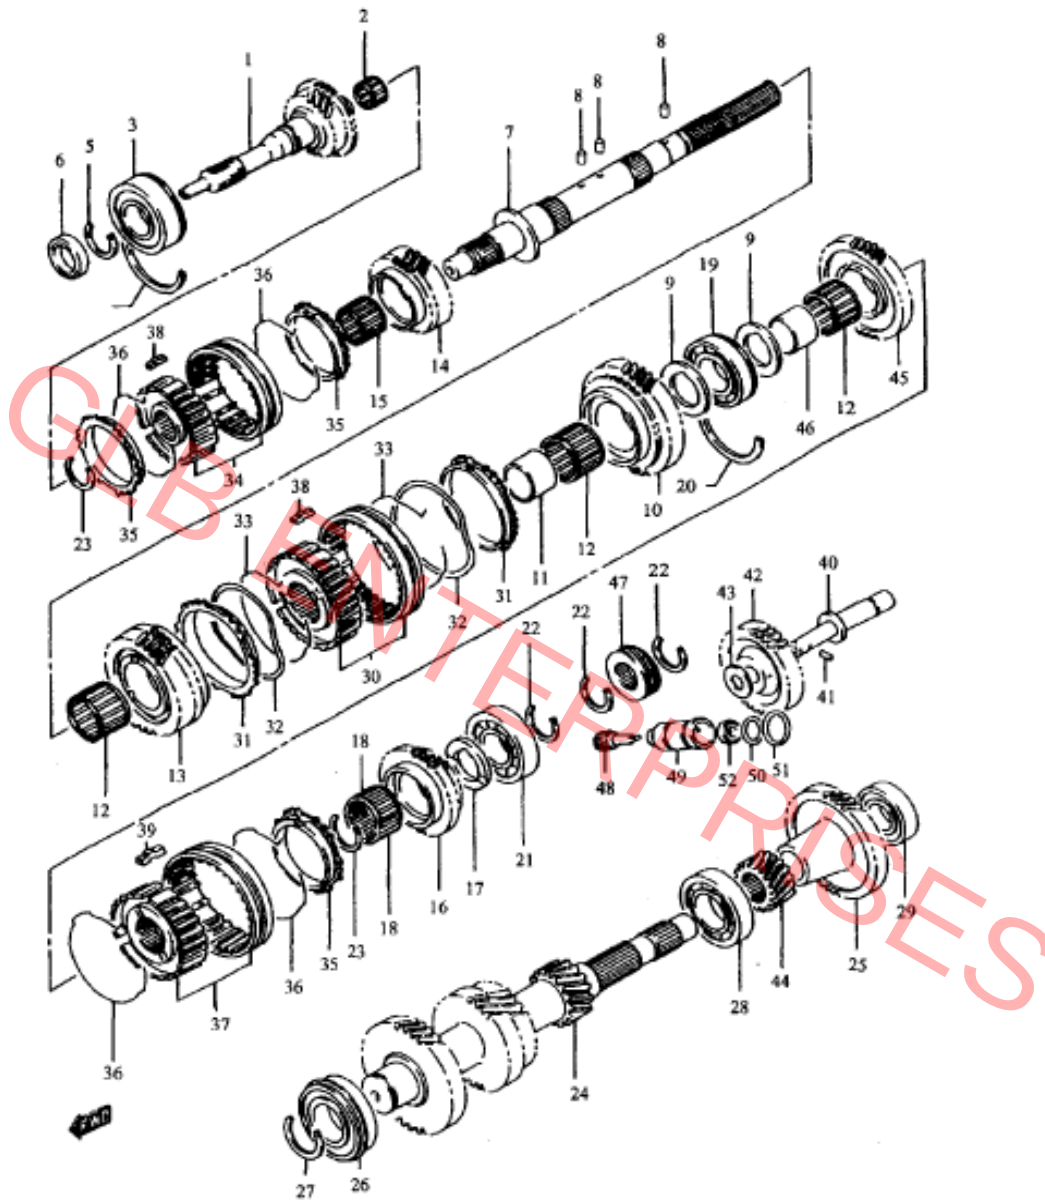


FIGURE 37 TRANSMISSION (5-SPEED)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	NO.1 SHAFT ASM	BS10-2-1701810	1	
2	ROLLER BEARING	K202617	1	
3	NO.1 SHAFT BEARING	63/28-2RSN/P63	1	
4	"C" CLIP	BS10-2-1701067	1	
5	HOG RING	BS10-2-1701207	1	
6	INPUT SHAFT SEAL	BS10-1701930	1	
7	NO.2 SHAFT	BS10-2-1701027	1	
8	PIN	GB4661-84 3X5	3	
9	THRUST WASHER	BS10-2-1701034	2	
10	1st GEAR MAIN SHAFT	BS10-2-1701044	1	
11	BUSHING	BS10-2-1701065	1	
12	ROLLER BEARING	K354027	3	
13	2nd GEAR MAIN SHAFT	BS10-2-1701046	1	
14	3rd GEAR MAIN SHAFT	BS10-2-1701035	1	
15	ROLLER BEARING	K303527	1	
16	5th GEAR MAIN SHAFT	BS10-2-1701062	1	
17	RETAING RING	BS10-2-1701063	1	
18	ROLLER BEARING	K27.533.522.7	1	
19	BEARING	6206N/P63	1	
20	"C" CLIP	BS10-1701015	1	
21	BEARING	6305/P63	1	
22	HOG RING	BS10-1701204	3	
23	HOG RING	BS10-1701208	2	
24	MIDDLE GEAR SHAFT	BS10-2-1701052	1	
25	5th GEAR INITIATIVE GEAR	BS10-2-1701064	1	
	STOPPING RING	BS10-2-1701066	1	
26	MIDDLE SHAFT FRONT BEARING	62/28N/P63	1	
27	HOG RING	BS10-2-1701207	1	
28	MIDDLE SHAFT MIDDLE BEARING	62/28N/P63	1	
29	BEARING	6304/P63	1	
	LOW-SPEED CONNECTING TOOTHED RING	BS10-1701043	1	
30	LOW TOOTHED RING, OUTER	BS10-2-1701042	1	
31	LOW SPEED BAULK RING	BS10-1701045	2	
32	SPRING HOG RING	BS10-1701035	2	
33	SPRING HOG RING	BS10-1701041	2	
	HIGH SPEED CONNECTING TOOTHED RING	BS10-1701061	1	
34	HIGH SPEED CONNECTING TOOTHED RING	BS10-2-1701059	1	
35	HIGH SPD SYN	BS10-1701024	3	
36	SPRING HOG RING	BS10-1701037	4	
37	JOININGG GEAR REV. 5th GEAR	BS10-1-1701058	1	
	HIGH SPEED OUTER GEAR RING	BS10-2-1701059	1	

FIGURE 37 TRANSMISSION (5-SPEED)

NO	DESCRIPTION	PART NO.	ALL	NOTE
38	KEY	BS10-2-1701038	6	
39	5th GEAR KEY	BS10-1-1701057	3	
	REVERSE MIDDLE			
40	SHAFT	BS10-2-1701033	1	
41	PIN	BG4661-84 6X10	1	
	REVERSE MIDDLE GEAR			
42	ASM	BS10-2-1701830	1	
43	REATING RING	BS1701017	1	
	REVERSE INITIATIVE			
44	GEAR	BS10-1701032	1	
45	REVERSE DRIVE GEAR	BS10-1701031	1	
46	BUSHING	BS10-1701029	1	
	ODOMETER WORM			
47	GEAR	BS10-3802011	1	
	ODOMETER DRIVE			
48	GEAR	BS10-3802012	1	
49	BUSHING	BS10-3802012	1	
50	O'RING	BS10-3802014	1	
51	O'RING	BS10-2-3802015	1	
52	OIL SEAL	462-1701902	1	

FIGURE 38 GEAR SHIFTER LEVER CASE

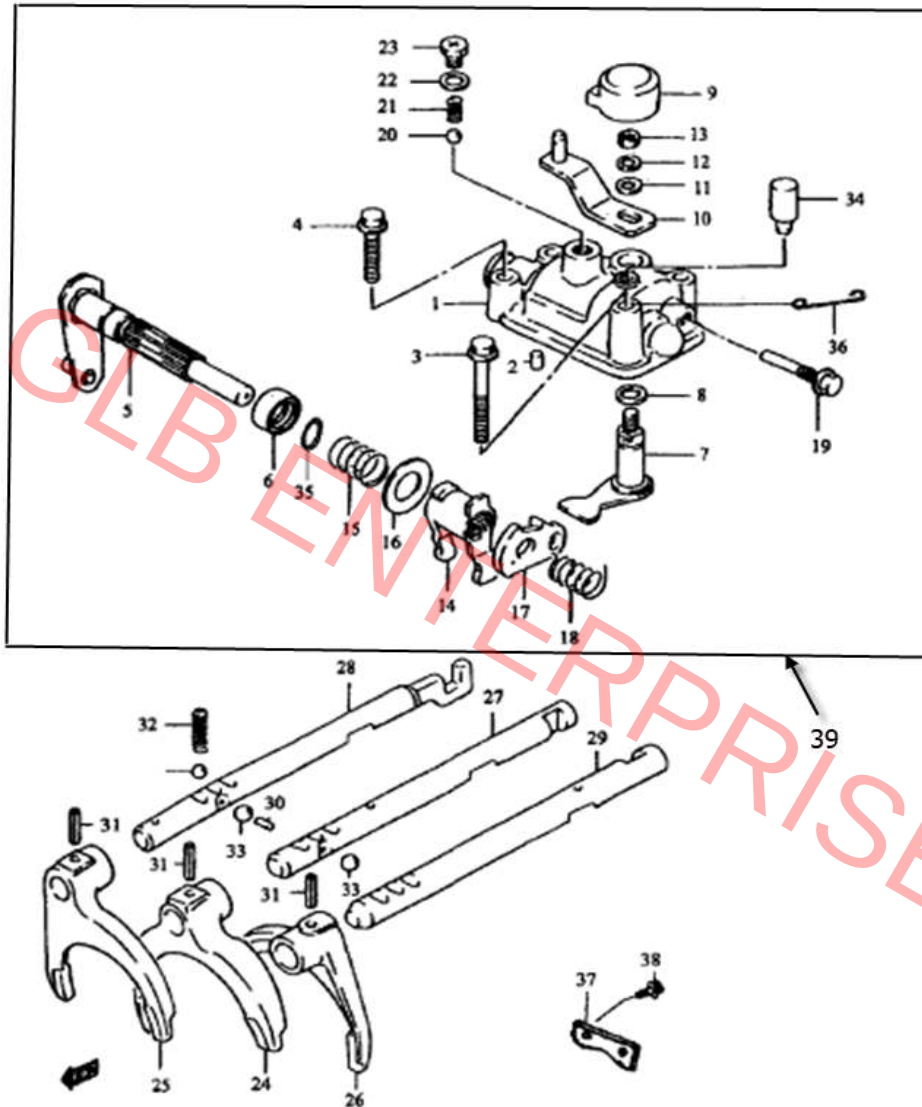


FIGURE 38 GEAR SHIFTER LEVER CASE

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	SHIFTER CASE	BS10-2-1702014*	1	
2	DOWEL	GB4661-84 6X10	1	
3	STUD BOLT	BS10-1700212	1	
4	BOLT	462-1700203	3	
5	SHIFTER LEVER	BS10-1702810	1	
		462-1AB-1702810	1	
6	BUSHING	462-1702015	1	
7	SHIFTER ARM SHAFT ASM	462-1702805	1	
8	GASKET	462-1702020	1	
9	GASKET	BS10-1702022	1	
10	SHIFTER ARM	BS10-1702830	1	
11	SPRING	462-1000235	1	
12	SPRING WASHER	GB93-87 8	1	
13	NUT	GB6170-86 M8	1	
14	SHIFTING FORK	BS10-2-1702019	1	
15	SPRING	462-1702017	1	
16	WASHER	462-1702203	1	
17	LIMITING STOPPER	BS10-1-1702038	1	
18	LIMITING SPRING	BS10-1-1702018	1	
19	LIMITING SCREW	BS10-1-1702203*	1	
20	STEEL BALL	GB308-77 5/16"	1	
21	SPRING	BS10-1702027	1	
22	WASHER	BS10-1702202	1	
23	GASKET	462-1002203	1	
24	FORK GEAR NO.1 & NO.3	BS10-10-1702013	1	
25	FORK GEAR NO.3 & NO.4	BS10-1702011	1	
26	REVERSE FORK	BS10-1702034	1	
27	SHAFT ASM GEAR FORK NO.1 & NO.2	BS10-2-1702033	1	
28	SHAFT ASM GEAR FORK NO.3 & NO.4	BS10-2-1702800	1	
29	SHAFT FORK ASM REVERSE & NO.5	BS10-2-1702035	1	
30	SELFLOCKING PIN	GB309-84 3X12.7	1	
31	SPRING PIN	GB879-86 5X24	3	
32	SPRING	BS10-1702031	3	
33	STEEL BALL	GB308-77 3/8"	5	
34	BREATHER VALVE ASM	462-1701804	1	
35	GASKER	462-1702016	1	
	ODOMETER FLEXIBLE SHAFT CLASP	462-1700014-A	1	
37	BAFFLE	BS10-2-1702041	1	
38	BOLT	462-1000812	2	
39	SHIFTER CASE (INC. #1 & #19)	BS10-2-1702014/19	1	BOSCH TRANSMISSION
		BS09-2-1702014/19	1	DELPHI TRANSMISSION

FIGURE 39 SHIFTER & SHIFT CABLES

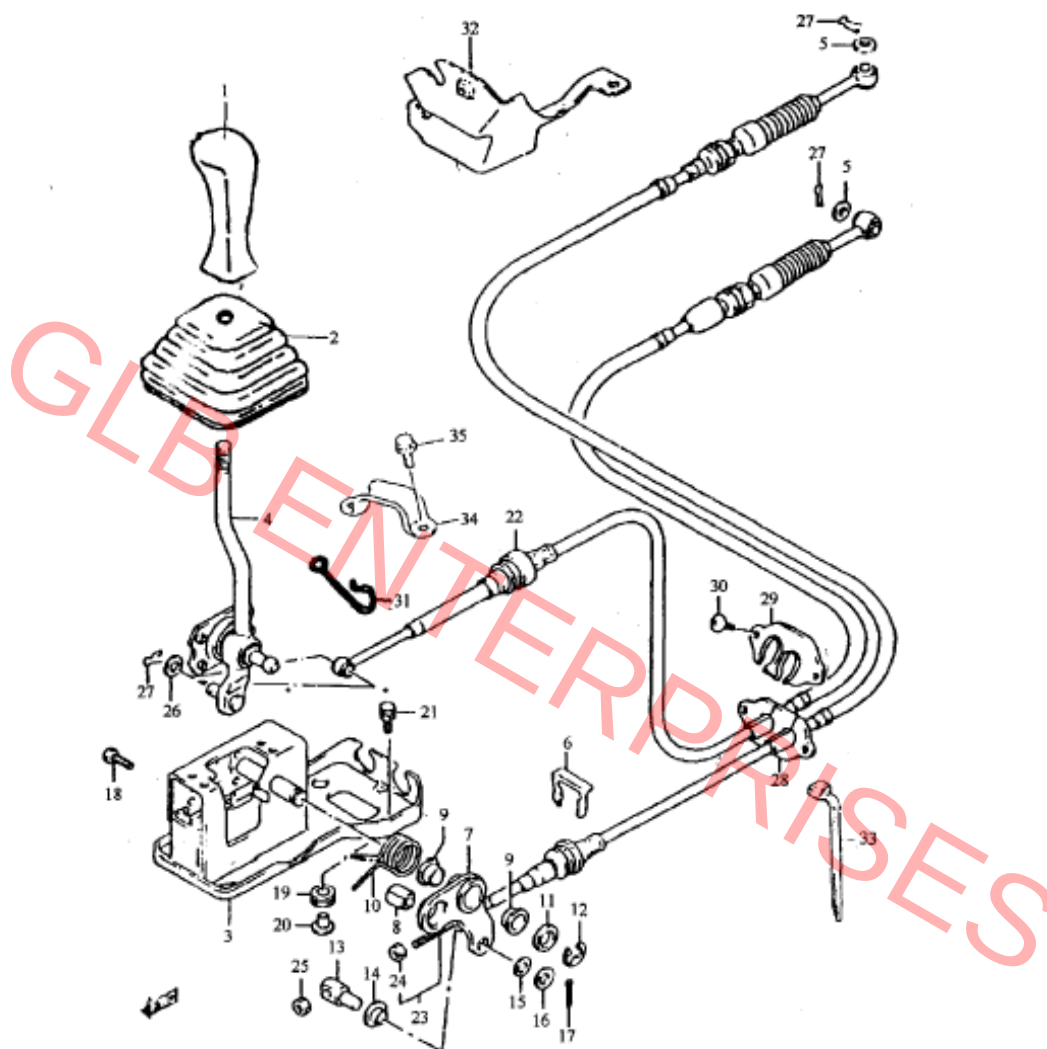


FIGURE 39 SHIFTER & SHIFT CABLES

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	SHIFTER KNOB 4MT	HFJ1703310FA	1	
	SHIFTER KNOB 5MT	HFJ1703120DA	1	
2	SHIFTER BOOT	HFJ1703101DA	1	
3	SHIFTING CONTROL BRACKET	HFJ1703120CA	1	
4	SHIFTING LEVER ASM	HFJ1703110DA	1	5MT
5	WASHER	Q/2A-CJ-476	2	
6	CABLE CLIP	Q/2A-CJ-424	2	
7	ROCKET ARM ASM	HFJ1703130CA	1	
8	BUSHING	HFJ1703103CA	1	
9	BUSHING	HFJ1703101CA	2	
10	RETURN SPRING	Q/2A-CJ-435	1	
11	WASHER	Q40112	1	
12	RETAINER	Q43690	1	
13	FITTING	HFJ1703105CA	1	
14	SHAFT BUSHING	HFJ1703105CA	1	
15	WASHER	Q40108	2	
	SADDLE SPRING			
16	WASHER	Q/2AM26-8	1	
17	PIN SNAP	Q5002020	1	
18	BOLT/WASHER	Q/2A-CJ-29 M5X12	4	
19	BUMPER SPACER	HFJ1703106CA	4	
20	BUSHING	HFJ1703107CA	4	
21	BOLT/WASHER	Q/2A-CJ-29 M6X30	4	
22	SHIFT CABLE 4MT	HFJ1703200FA	1	
	SHIFT CABLE 5MT	HFJ1703300CA	1	HFJ1011H
	SHIFT CABLE 5MT	HFJ1703300DA	1	(CARB. ENGINE)
23	SELECT CABLE 4MT	HFJ1703100FA	1	
	SELECT CABLE 5MT	HFJ1703200CA	1	HFJ1011H
	SELECT CABLE 5MT	HFJ1703200DA	1	(CARB. ENGINE)
24	NUT	Q/2A-CJ-437 M6	1	
25	NUT	Q/2A-CJ-437 M6	1	
26	WASHER	Q/2A-J22 M8X14X1.5	1	
27	PIN SNAP	Q/2A-CK-462 M8	3	
28	CABLE GUIDE GASKET	HFJ1703013CA	1	
29	CABLE GUIDE	HFJ1703012CA	1	
30	SCREW	Q271B6316	2	
31	HOOK	Q/2A-CJ-467 120	1	
32	REAR CABLE BRACKET	HFJ1703010FA	1	
33	CLIP	Q/2A-CJ-415	2	
34	GUIDE PLATE	HFJ1703006CA	1	
35	WASER	Q/2A-CJ-30 M6X12	1	

FIGURE 40 WATER PUMP (EGI)

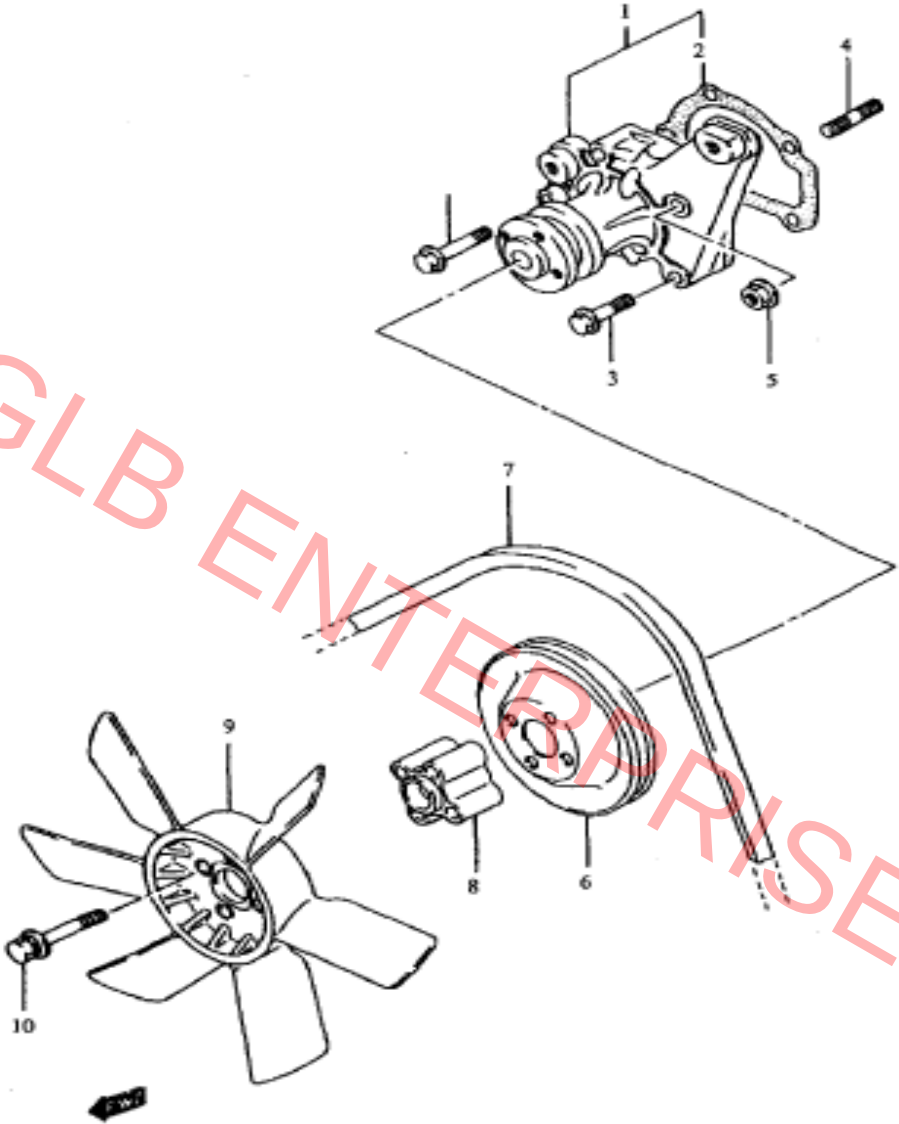


FIGURE 40 WATER PUMP (EGI)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	WATER PUMP	462-1307950-02/01	1	1307010A1(Z)
2	WATER PUMP GASKET	462-1000024	1	
3	BOLT	462-100217	3	
4	STUD BOLT	462-1002205	2	
5	NUT	GB6170-86 M6	2	
6	FAN PULLEY	462-1000034	1	
7	WATER PUMP BELT	462-1000229/01	1	
		465Q-2/D-100229	1	SERPENTINE
		462-1000039	1	HFJ6371C, HFJ6371, HFJ6371B, HFJ1011G
8	COOLING FAN SPACER RING	465Q-1000039	1	
9	COOLING FAN	465Q-1308800	1	
		462-1000808		1
10	BOLT	465Q-1000808		

GLB ENTERPRISES

FIGURE 41 WATER PUMP (CARBURETOR)


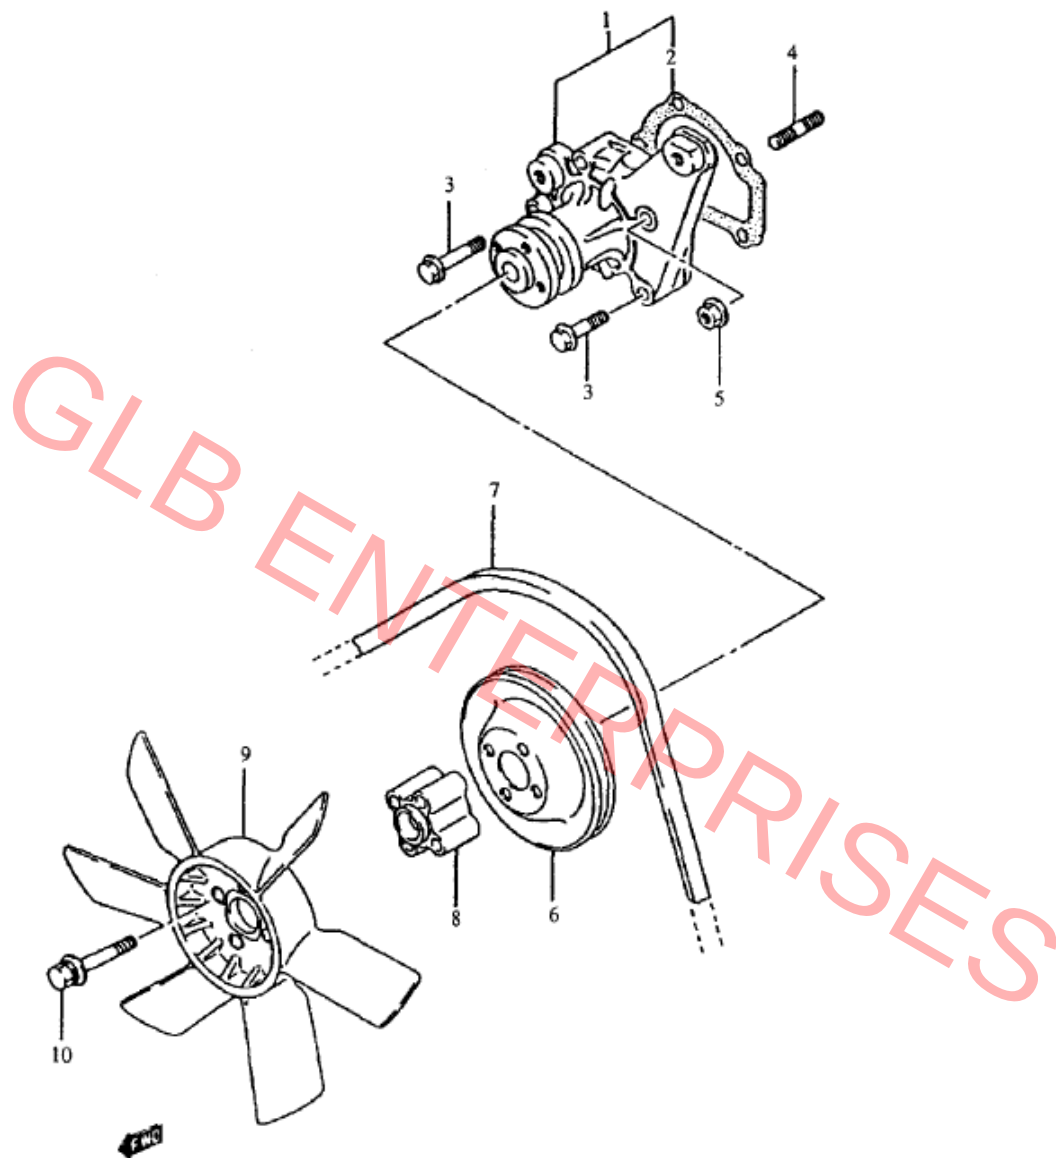


FIGURE 41 WATER PUMP (CARBURETOR)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	WATER PUMP	462-1307950	1	
		462-1307950-A2	1	
2	WATER PUMP GASKET	462-1000024	1	
3	BOLT	GB5783-86	3	
4	WASHER	GB97.1-85-1 140HV	3	
5	STUD BOLT	462-1002205	2	
6	FAN PULLEY	462-1000037	1	
7	WATER PUMP BLET	462-1000229/01	1	
8	COOLING FAN SPACER	462-1000039	1	
9	COOLING FAN	462-1308800	1	
		465Q-1308800	1	
10	BOLT	GB5783-86 M6X32	4	
		GB5783-86 M6X50	4	
		GB97.1-85-6 140HV	4	
		GB859-87 6	4	

GLB ENTERPRISES

FIGURE 42 RADIATOR

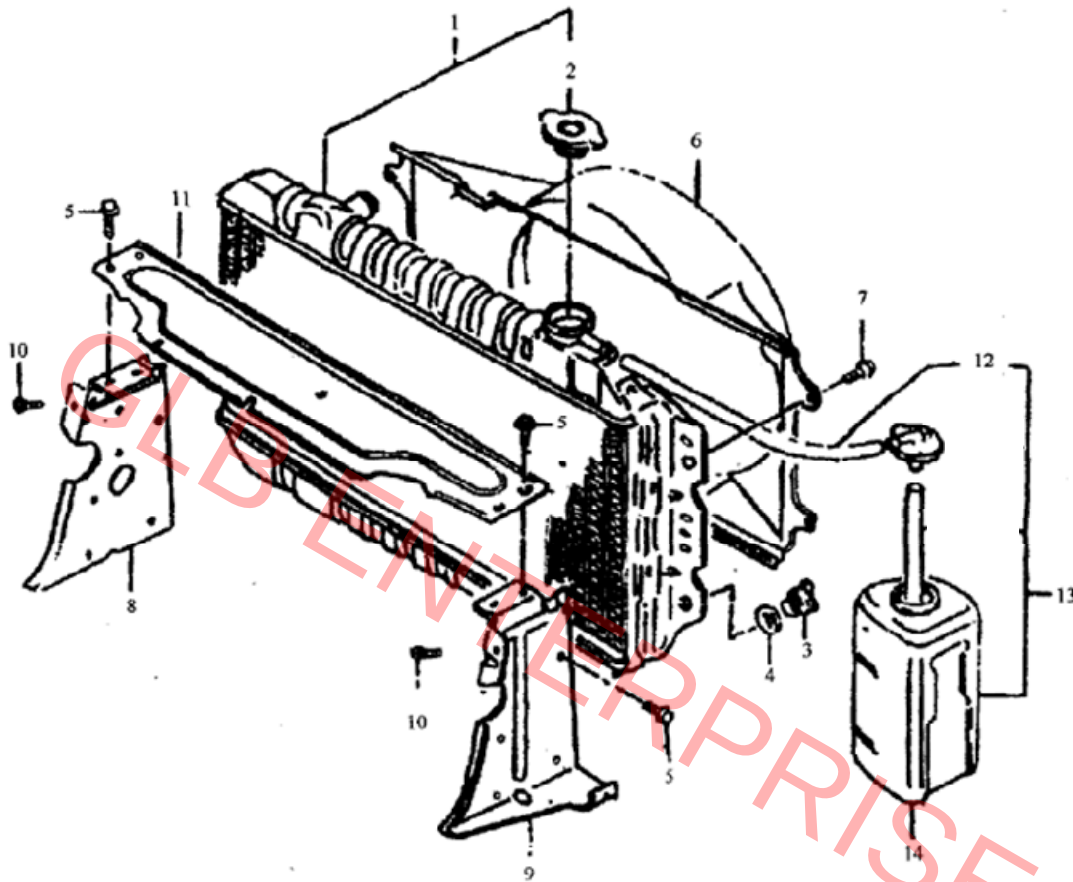

FWC

FIGURE 42 RADIATOR

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	HFJ1301000DB	RADIATOR ASM W/O AC	1	
	HFJ1301000DC	RADIATOR ASM W/ AC	1	
2	HFJ1304000CA	RADIATOR CAP	1	AC13000026
3	HFJ1305100CA	RADIATOR DRAIN VALVE	1	
		RADIATOR DRAIN VALVE		
4	HFJ1305005CA	SEAL	1	
5	Q/2A-CJ-28 M6X14	BOLT	8	
6	HFJ1309000CA	FAN SHROUD	1	
	HFJ1309000CB	FAN SHROUD	1	
7	Q/2A-CJ-101 M6X12	BOLT	4	
8	HFJ1300020CA	RADIATOR BRACKET RH	1	
9	HFJ1300010CA	RADIATOR BRACKET LH	1	
10	Q/2A-CJ-63 M6X16	BOLT	4	
11	HFJ1300030CA	RADIATOR BRACKET UPPER	1	
12	HFJ1311008CA	OVERFLOW HOSE	1	
13	HFJ1311000CA	RADIATOR OVERFLOW TANK ASM	1	

FIGURE 43 RADIATOR HOSE (DA462-1A/D)

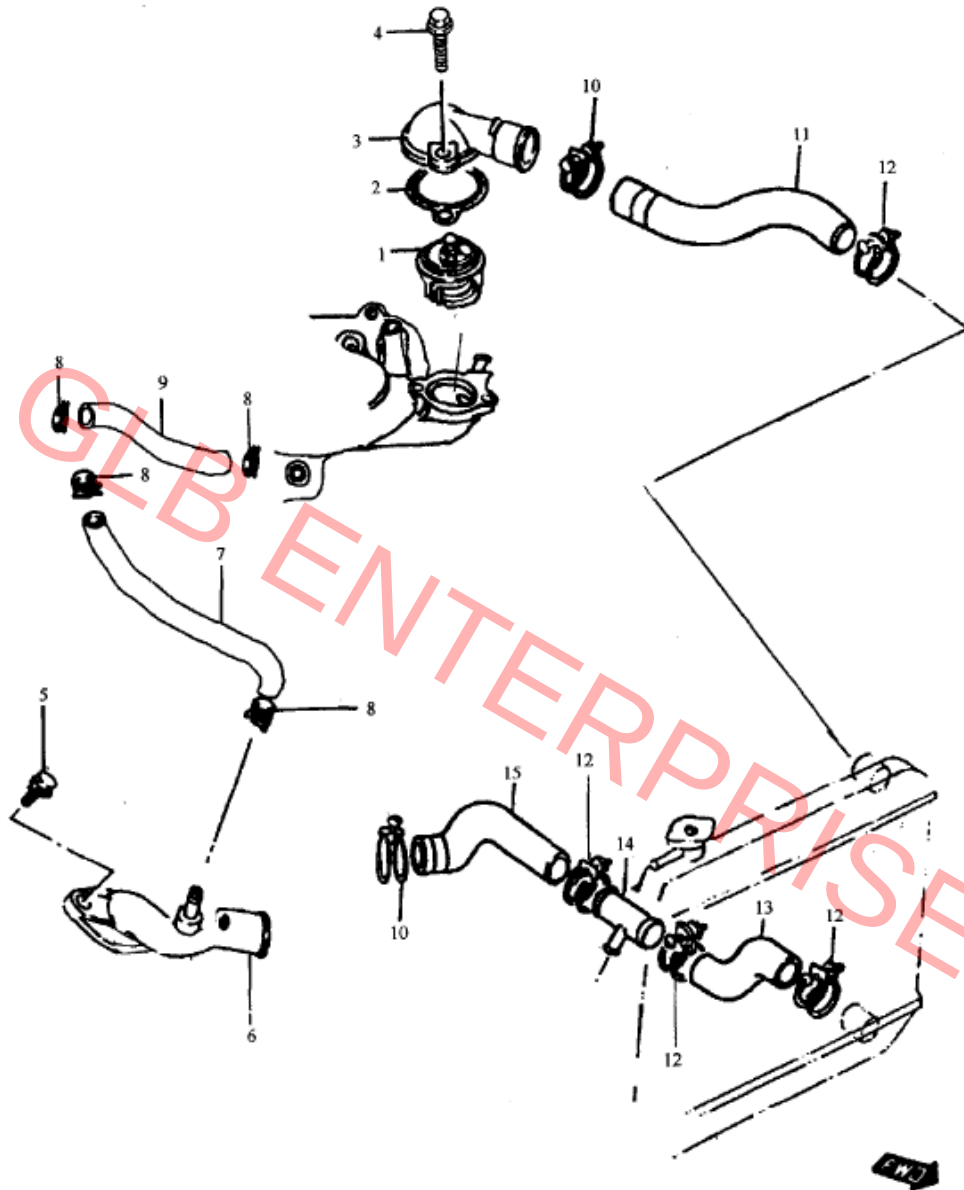


FIGURE 43 RADIATOR HOSE (DA462-1A/D)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	462-1306950	THERMOSTAT	1	
2	462-1000043	THERMOSTAT GASKET	1	1008031D
3	462-1000044	THERMOSTAT HOUSING	1	
4	462-1000812	BOLT	2	
5	462-1000814	BOLT	2	
6	462-1303800	INFALL SEAT ASM	1	
7	463-1A/D-1000051	BY-PASS HOSE LOWER	1	
8	462-1000052	CLAMP	4	
9	463-1A/D-1000113	BY-PASS HOSE UPPER	1	
10	Q67240	CLAMP	2	
11	HFJ1300005DB	UPPER RADIATOR HOSE	1	
	HFJ1303005CA	UPPER RADIATOR HOSE	1	(UAES SYSTEM)
12	Q37238	CLAMP	4	
13	HFJ1300006DB	LOWER RADIATOR HOSE #1	1	
14	HFJ1300010FA	LOWER RADIATOR T-PIPE	1	
15	HFJ1300007DB	LOWER RADIATOR HOSE #2	1	

GLB ENTERPRISES

This diagram illustrates the exploded view of a car engine and transmission assembly. The components are numbered as follows:

- 1**: Main engine block
- 2**: Piston and connecting rod assembly
- 3**: Piston pin
- 4**: Piston pin clip
- 5**: Piston pin clip
- 6**: Piston pin clip
- 7**: Piston pin clip
- 8**: Piston pin clip
- 9**: Piston pin clip
- 10**: Piston pin clip
- 11**: Piston pin clip
- 12**: Piston pin clip
- 13**: Piston pin clip
- 14**: Piston pin clip
- 15**: Piston pin clip

FIGURE 44 RADIATOR HOSE (DA465-1A)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	462-1306950	THERMOSTAT	1	
2	462-1000043	THERMOSTAT GASKET	1	1008031D
3	465Q-1000044	THERMOSTAT HOUSING	1	W/O AC
	462-1A2/D-1000044	THERMOSTAT CAP	1	W/ AC
4	462-1000815	BOLT	2	
5	465Q-1303800	INFALL SEAT ASM	1	
6	465Q-1000059	HOSE	1	
7	462-1000814	BOLT	2	
8	HFJ1303005DG	UPPER RADIATOR HOSE	1	HFJ6351C-6371-6376-6351B (VAN)
	HFJ1300005DB	UPPER RADIATOR HOSE	1	HFJ1011G-1011GB (TRUCK)
	HFJ1303005DN	UPPER RADIATOR HOSE	1	HFJ6351CA-6371B (VAN)
9	HFJ1303006CA	LOWER RADIATOR HOSE	1	
10	Q67240	CLAMP	1	W/O AC
	Q67238	CLAMP	3	W/ AC
11	465Q-1A-1000051	CLAMP	2	
12	462-1000051	BY-PASS HOSE	1	
13	462-1000052	CLAMP	2	
14	465Q-1000066	CLAMP	2	
15	465Q-1000073	HOSE CLIP	1	

FIGURE 45 RADIATOR HOSE (DA462)

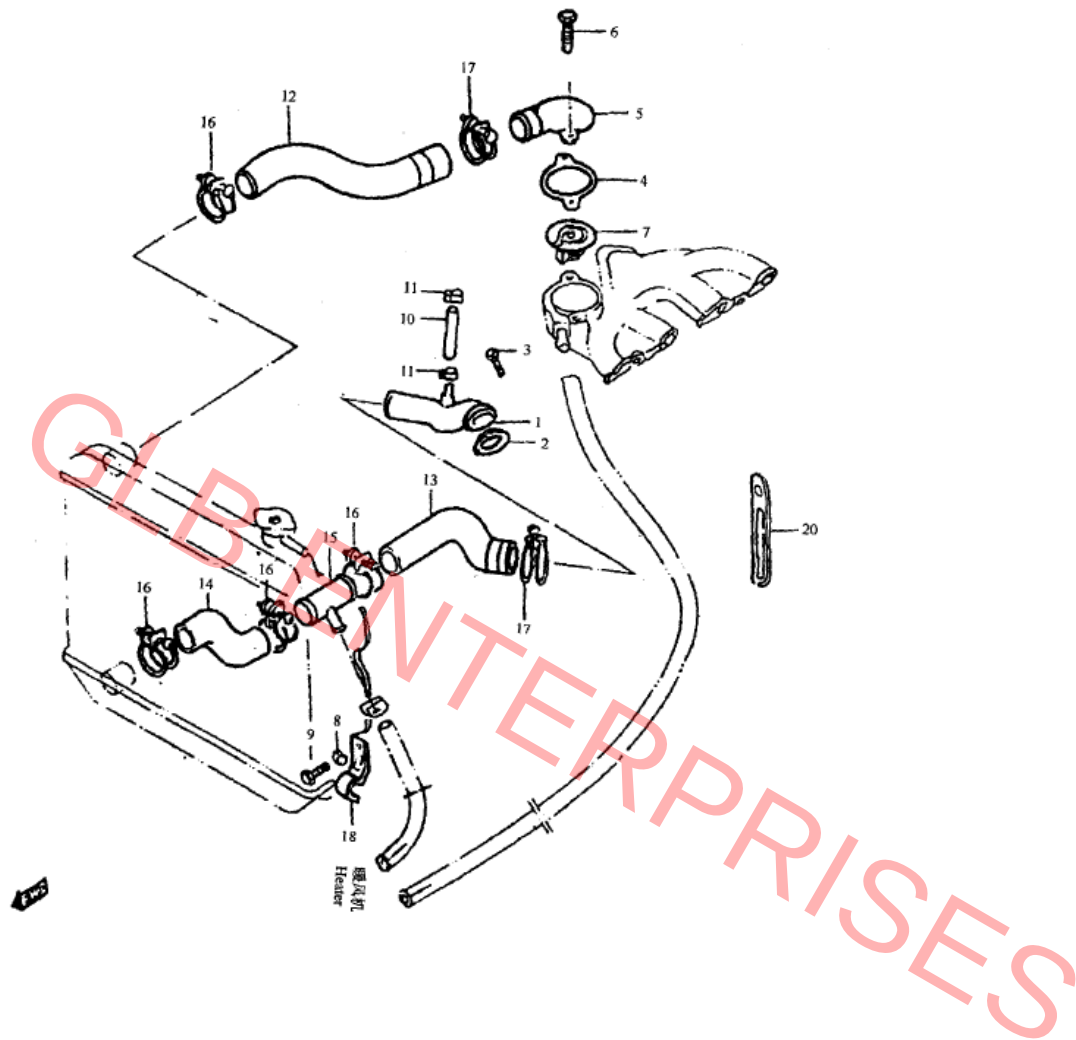


FIGURE 45 RADIATOR HOSE (DA462)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	462-1303800	INFALL SEAT ASM	1	
2	462-1000050	INFALL SEAT WASHER	1	
3	462-1000814	BOLT	2	
4	462-1000044	THERMOSTAT GASKET	1	
5	462-1000043	THERMOSTAT CAP	1	1008031D
6	462-1000815	BOLT	2	
7	462-1306950	THERMOSTAT	1	
8	GB859-87 M8	BOLT	1	
9	QGB21-76 M8X22	BOLT	2	
10	462-1000051	BY-PASS HOSE	2	
11	462-1000052	CLAMP	2	
12	HFJ1300005FA	WATER INLET HOSE	1	
13	HFJ1300007FA	WATER OUTLET HOSE NO.2	1	
14	HFJ1300006FA	WATER OUTLET HOSE NO.1	1	
15	HFJ1300010FA	3-WAY TUBE	1	
16	Q67238	CLAMP	1	
17	Q67240	CLAMP	1	
18	462-100020	BACKSTOP	2	
19	462-1000073	HOOK	2	

FIGURE 46 RADIATOR FAN

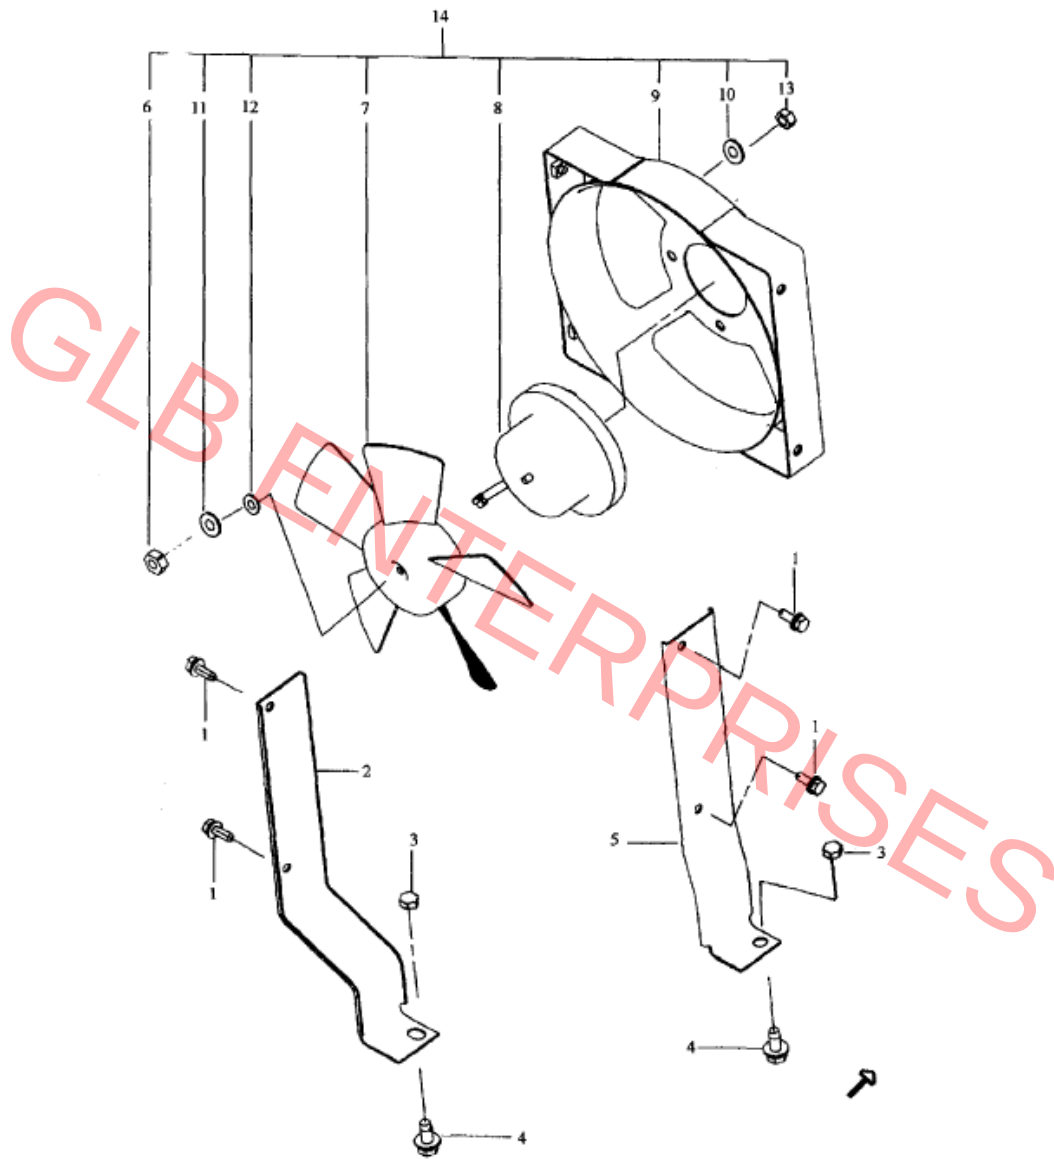


FIGURE 46 RADIATOR FAN

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	BOLT	Q/2A-CJ-35 M6X16	4	
2	FAN BRACKET LH	HFJ1308005DB	1	
3	NUT	Q340B08T12	2	
4	BOLT	Q/2A-CJ-35 M6X16	2	
5	FAN BRACKET RH	HFJ1308006DB	1	
6	NUT	GB41-86 M5	1	
7	HFJ1308110DA	FAN ASM	1	
8	HFJ1308120DA	FAN MOTOR	1	
9	HFJ1308130DA	FAN CAP	1	
10	NUT	GB818-86 M4	4	
11	WASHER	GB95-85	1	
12	SPRING WASHER	GB93-87	4	
13	WASHER	GB95-85	4	
14	HFJ1308100DA	RADIATOR FAN ASM	1	

GLB ENTERPRISES

FIGURE 47 ENGINE MOUNTS (4MT)

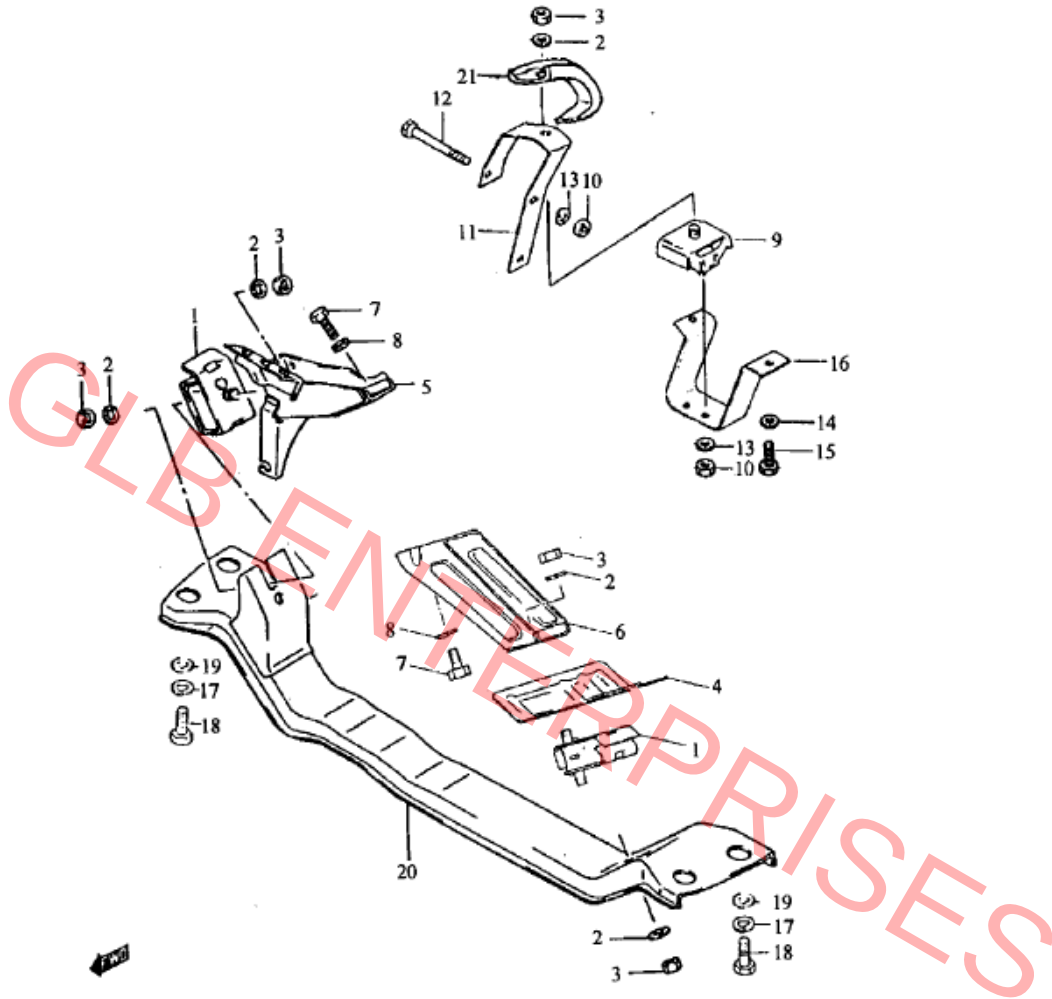


FIGURE 47 ENGINE MOUNTS (4MT)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	FRONT ENGINE MOUNT	462-1001802	2	
2	SPRING WASHER	GB93-87 10	5	
3	NUT	462-1000212	5	
4	ENGINE MOUNT COVER LH	462-1000070	1	
5	FRONT MOUNTING BRACKET RH	462-1A/D-1001800	1	
6	FRONT MOUNTING BRACKET LH	462-1001801-B	1	
7	BOLT	462-1000253	3	
8	SPRING WASHER	GB859-87 8	4	
9	REAR ENGINE MOUNT	462-1001805	1	
10	NUT	GB6170-86 M8	3	
11	ENGINE REAR BRACKET	462-1000069	1	
12	NUT	462-1000213	1	
13	WASHER	GB93-87 8	3	
14	BOLT	462-1000815	1	
15	BOLT	Q/2A-CJ-17 M8X22	2	
16	REAR MOUNTING BRACKET	HFJ1001005FA	1	
17	SPRING WASHER	Q40510	4	
18	WASHER	Q40110	4	
19	BOLT	25-6G	4	
20	CROSS MEMBER	HFJ1001200FA	1	
		HFJ1001200FB	1	
21	REAR MOUNTING BOW	HFJ1001006FA	1	

FIGURE 48 ENGINE MOUNTS (5MT)

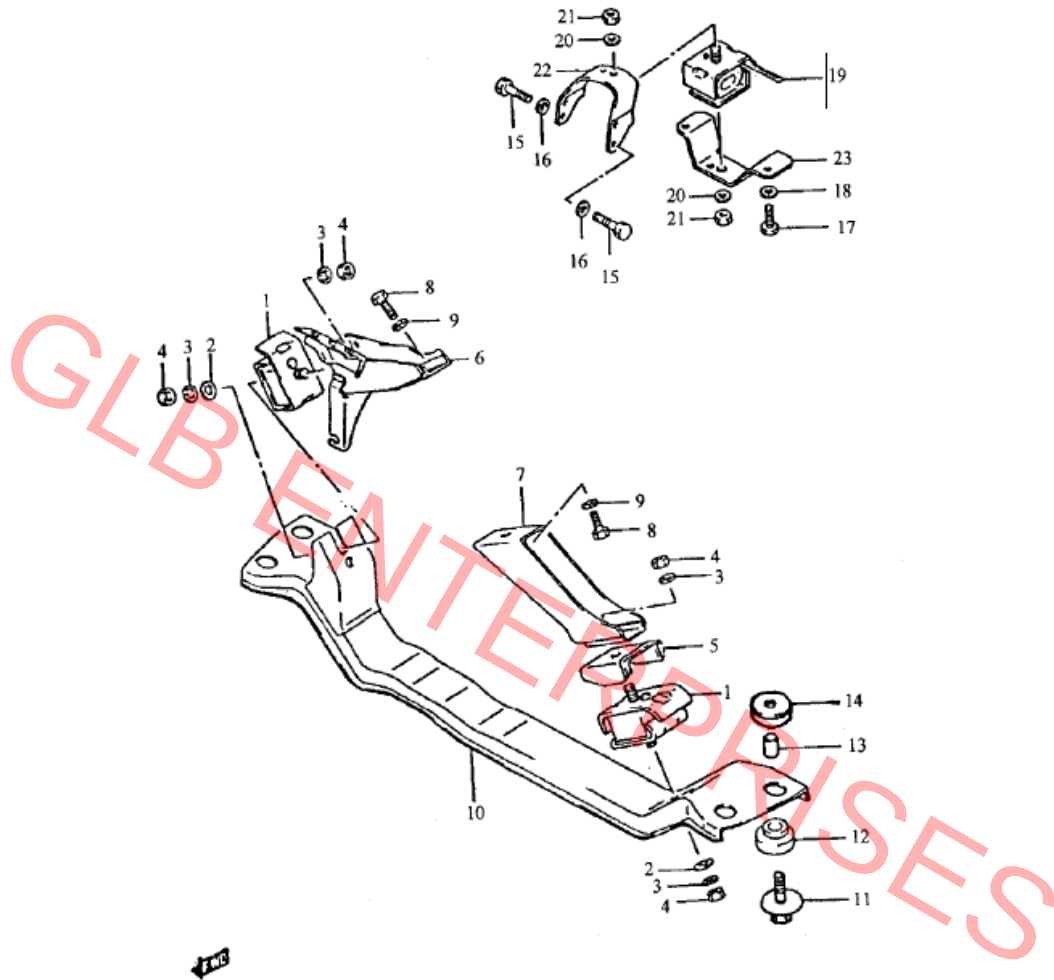


FIGURE 48 ENGINE MOUNTS (5MT)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	FRONT ENGINE MOUNT	465Q-1001802	2	
2	WASHER	Q40110	2	
3	SPRING WASHER	Q40510	2	
4	NUT	Q341C10	2	
5	ENGINE MOUNT COVER LH	465Q-1000070	1	
6	FRONT ENGINE MOUNT BRACKET RH	465Q-1001800	1	
7	FRONT ENGINE MOUNT BRACKET LH	465Q-1001801	1	
8	BOLT	465Q-1001805	4	
9	SPRING WASHER	GB859-87 8	4	
10	CROSS MEMBER	HFJ1001100CA	1	
		HFJ1001100DA	1	
11	NUT	Q/2A-CJ-89 M10X1.25X55	4	
12	CROSS MEMBER BUMPER LOWER	HFJ1001006CA	4	
13	BUSHING	HFJ1001010DA	4	
	CROSS MEMBER			
14	BUMPER UPPER	HFJ1001010DA	4	
15	BOLT	462-1000209	4	
16	SPRING WASHER	GB859-87 8	4	
17	BOLT	Q2/A-CJ-178 M8X28X8.8	2	
18	WASHER	Q40108	2	
19	REAR ENGINE MOUNT	465Q-1001805	1	
20	SPRING WASHER	GB93-87 10	2	
21	NUT	462-1000212	2	
22	REAR ENGINE MOUNTING BRACKET UPPER	465Q-1000069	1	
23	REAR ENGINE MOUNTING BRACKET LOWER	HFJ1001011CA	1	

FIGURE 49 FUEL LINE SYSTEM (UAES-BOSCH)

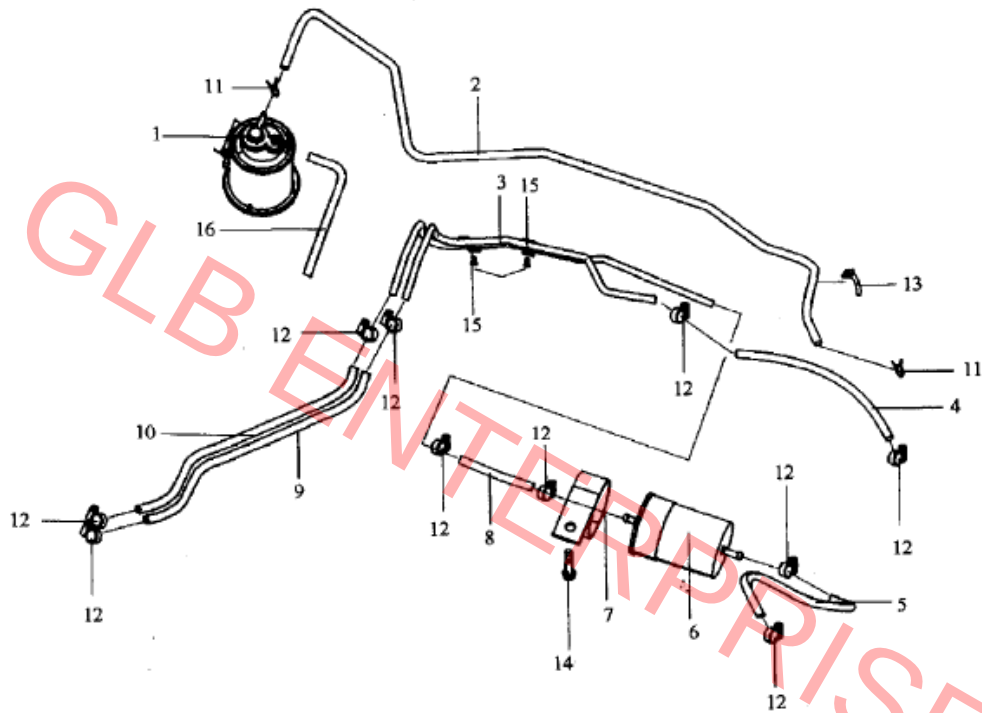


FIGURE 49 FUEL LINE SYSTEM (UAES-BOSCH)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	EVAP CANISTER	HFJ1104000DD	1	
2	EVAP HOSE	HFJ1104008DD	1	
3	FUEL LINE SUB ASM	HFJ1104030DJ	1	
4	FUEL RETURN HOSE	HFJ1104011DD	1	
5	FUEL INLET HOSE	HFJ1104009DJ	1	
6	FUEL FILTER	HFJ1105000DC	1	
7	FUEL FILTER CLAMP	HFJ1100010DB	1	
8	FUEL INLET HOSE	HFJ1104007DD	1	
9	FUEL RAIL RETURN HOSE	HFJ1104013DD	1	
10	FUEL RAIL INLET HOSE	HFJ11040114DD	1	
11	CLAMP	Q67111	2	
12	CLAMP	HFJ1104040DB	10	
13	TIE	HFJ3724101EA	1	
14	SCREW	Q/2A-CJ-29 M6X16-8.8	1	
15	SCREW	Q/2A-CJ-47A	2	
16	PURGE HOSE		1	

Part Number	Part Name
1	Fuel Tank
2	Fuel Line
3	Fuel Filter
4	Fuel Line
5	Fuel Injector
6	Fuel Pump
7	Fuel Line
8	Fuel Line
9	Fuel Line
10	Fuel Line
11	Fuel Line
12	Fuel Line
13	Fuel Line
14	Fuel Line
15	Fuel Line
16	Fuel Line
17	Fuel Line

FIGURE 50 FUEL LINE SYSTEM (DEPHI)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	EVAP CANISTER	HFJ1104100DD	1	
2	EVAP HOSE	HFJ1104008DD	1	
3	FUEL LINE SUB ASM	HFJ1104030DJ	1	
4	FUEL TANK RETURN HOSE	HFJ1104018DB	1	
5	FUEL TANK INLE HOSE	HFJ1104009DK	1	
6	FUEL FILTER	HFJ1105000DB	1	
7	FUEL FILTER CLAMP	HFJ1100010DB	1	
8	INLET HOSE	HFJ1104013DB	1	
9	FUEL RAIL RETURN HOSE	HFJ1104019DB	1	
10	FUEL RAIL INLET HOSE	HFJ1104021DB	1	
11	CLAMP	Q67111	2	
12	CLAMP	HFJ3724101EA	8	
13	TIE	HFJ3724101EA	1	
14	SCREW	Q/2A-CJ-29 M6X16	1	
15	SCRW	Q/2A-CJ-47A	2	
16	CLAMP	HFJ1104050DB	2	
17	PURGE HOSE	HFJ1104024DB	1	

FIGURE 51 FUEL LINE SYSTEM (HFJ6350B, HFJ6351B)

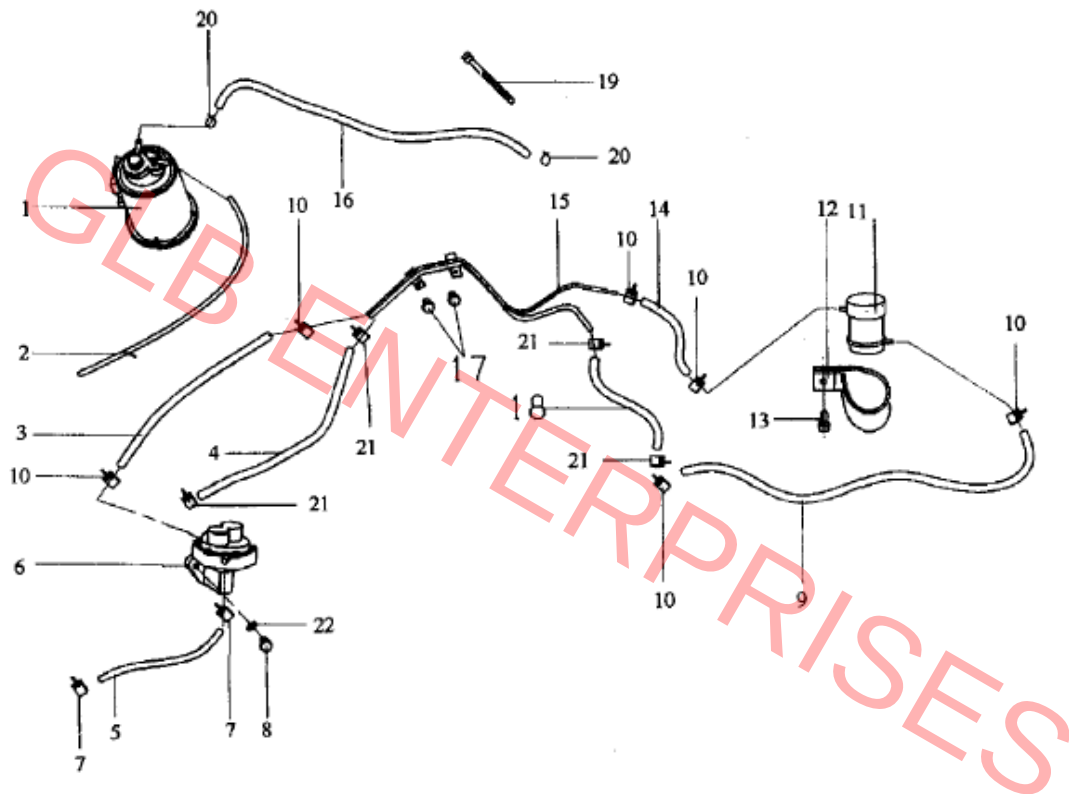


FIGURE 51 FUEL LINE SYSTEM (HFJ6350B, HFJ6351B)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	EVAP CANISTER	HFJ1100100CA	1	
2	PURGE HOSE	HFJ1104024CA	1	
3	FUEL INLET HOSE	HFJ1104019CA	1	
4	CARBURETOR FUEL RETURN HOSE	HFJ1104013CA	1	
5	CARBURETOR INLET HOSE	HFJ1104021CA	1	
6	FUEL PUMP	462-1106950	1	
7	CLAMP	462-1000060	1	
8	SCREW	GB21-76 M8X32	1	
9	FUEL TANK FILTER HOSE	HFJ1104014CA	1	
10	CLAMP	Q67214	1	
11	FUEL FILTER	HFJ1106000CA	1	
12	CLAMP	HFJ1100009CA	1	
13	SCREW	Q/2A-CJ-35 M6X16X8.8	1	
14	FUEL PUMP HOSE	HFJ1104013CA	1	
15	FUEL HOSE SUB ASM	HFJ1100030FA	1	
16	EVAP HOSE	HFJ1104023CA	1	
17	SCREW	Q/2A-CJ-47A	2	
18	FUEL TANKE RETURN HOSE	HFJ1104018CA	1	
19	CLAMP	HFJ1703011CA	1	
20	CLIP	Q67111	1	
21	WASHER	GB97.1-85-8-140HV	1	

FIGURE 52 FUEL LINE SYSTEM (HFJ1011G, HFJ1011H & EGI)

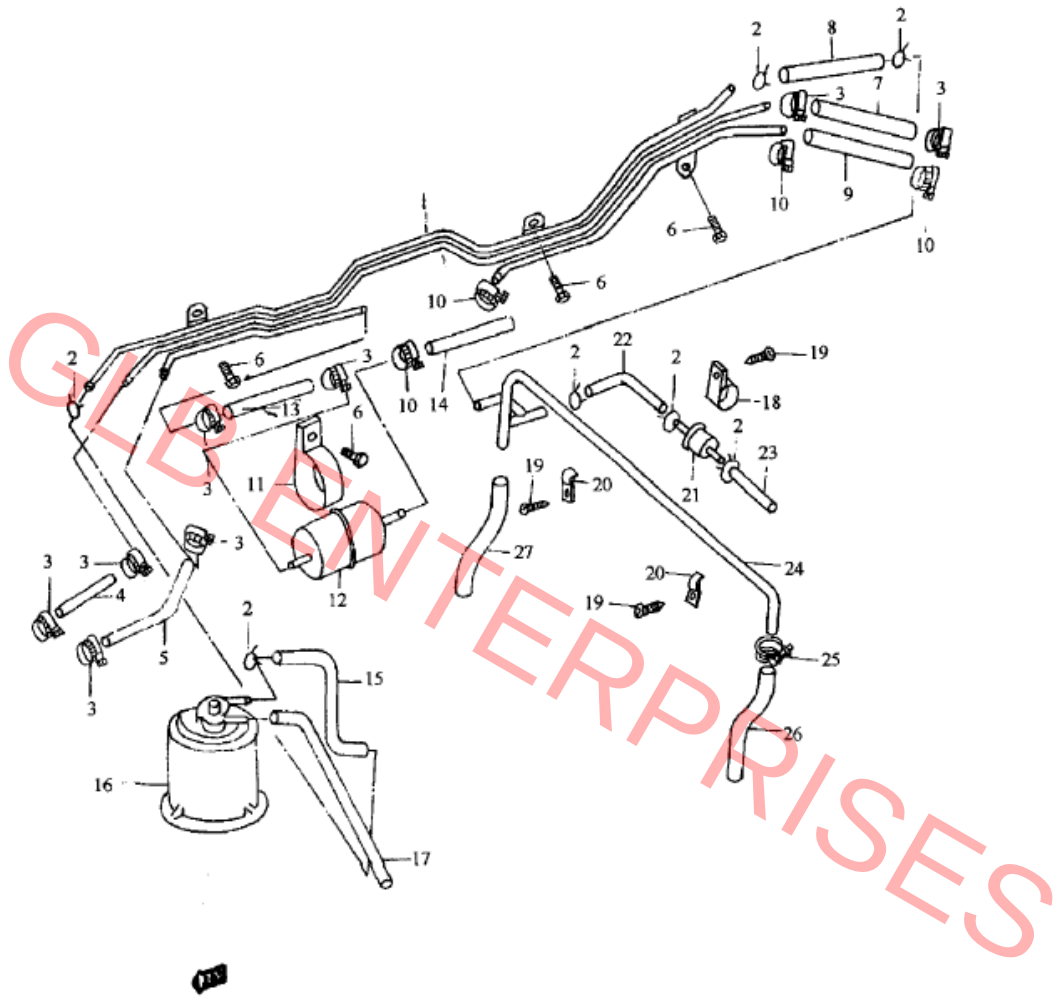


FIGURE 52 FUEL LINE SYSTEM (HFJ1011G, HFJ1011H & EGI)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	FUEL HOSE SUB ASM	HFJ1104030DF	1	
		HFJ1104030DP	1	
2	CLAMP	Q67111	7	
3	CLAMP	Q/2A-CJ-489-15	8	
4	FUEL RAIL RETURN HOSE	HFJ1104018DG	1	
5	FUEL RAIL INLET HOSE	HFJ1104017DG	1	
6	SCREW	Q/2A-CJ-29 M6X16	1	
7	FUEL RETURN HOSE	HFJ1104015DG	1	
8	EVAP HOSE	HFJ1104016DG	1	
9	FUEL SUPPORT HOSE	HFJ1104014DF	1	
10	CLAMP	Q/2A-CJ-489-16	4	
11	FUEL FILTER CLAMP	HFJ1104010DB	1	
12	FUEL FILTER	HFJ1105000DB	1	
13	FUEL HOSE #1	HFJ11040009DF	1	
14	FUEL HOSE #2	HFJ1104011DG	1	
15	EVAP HOSE	HFJ1104012DF	1	
16	EVAP CANISTER	HFJ1104100DD	1	
17	PURGE HOSE	HFJ1104013DF	1	
18	CHECK VALVE CLAMP	HFJ1104018DE	1	
19	SCREW	Q271B6313	3	
20	CLAMP	HFJ1104017DE	2	
21	DUAL WAY CHECK VALVE	HFJ1100200CA	1	
22	CHECK VALVE AIR INLET HOSE	HFJ1104016DE	1	
23	CHECK VALVE AIR OUTLET HOSE	HFJ1100005DA	1	
24	BREATHING TUBE	HFJ1104030DE	1	
25	CLAMP	Q67214	4	
26	BREATHING TUBE #1	HFJ1104014DE	1	
27	BREATHING TUBE #2	HFJ1104015DE	1	

FIGURE 53 FUEL LINE SYSTEM (HFJ1011G,- CARBURETOR)

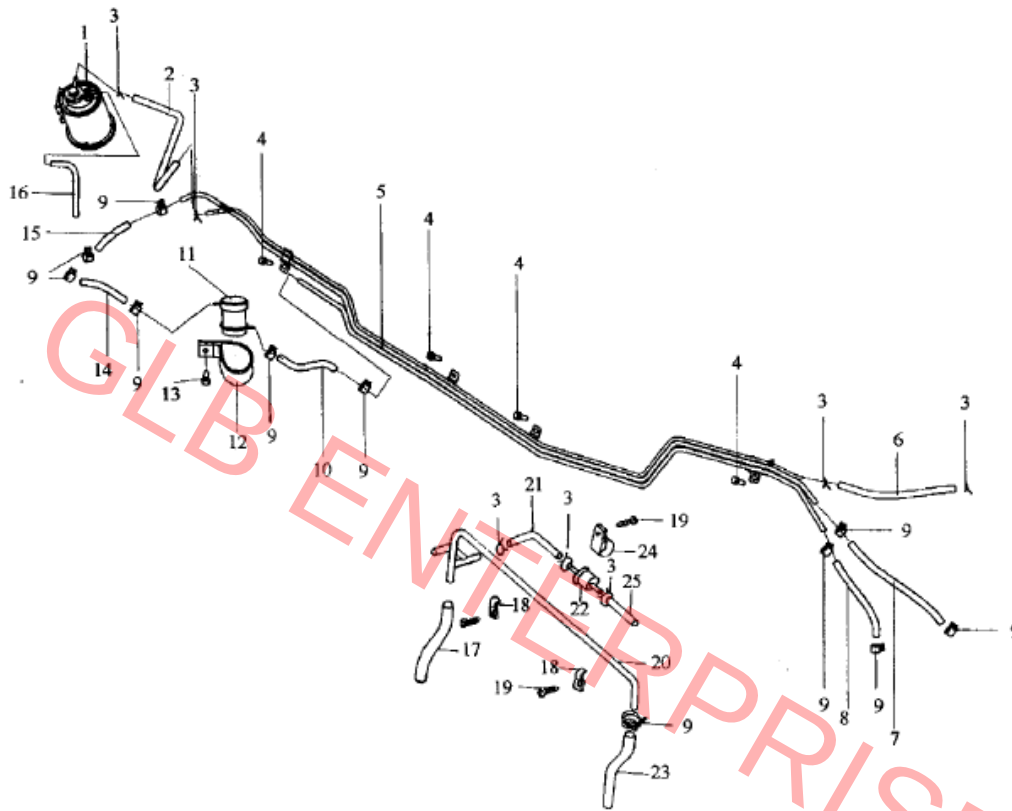


FIGURE 53 FUEL LINE SYSTEM (HFJ1011G,- CARBURETOR)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	FUEL HOSE SUB ASM	HFJ1104030DF	1	
1	EVAP CANISTER	HFJ1104100DD	1	
2	EVAP HOSE	HFJ1104012DF	1	
3	CLAMP	Q67111	2	
4	SCREW	Q/2A-CJ-29 M6X16	4	
5	FUEL HOSE SUB ASM	HFJ1104030DG	1	
6	EVAP HOSE	HFJ1104016DF	1	
7	FUEL RETURN HOSE	HFJ1104024FE	1	
8	FUEL SUPPORT HOSE	HFJ1104008DN	1	
9	CLAMP	Q67217	11	
10	FUEL SUPPORT HOSE	HFJ1104008DN	1	
11	FUEL FILTER	HFJ1105000CA	1	
12	FILTER CLAMP	HFJ1100009CA	1	
13	SCREW	Q/2A-CJ-35 M6X16	1	
14	FUEL RETURN HOSE	HFJ1104007DN	1	
15	FILTER-FUEL PUMP HOSE	HFJ1104009CA	1	
16	PURGE HOSE	HFJ1104013DF	1	
17	BREATHER HOSE	HFJ1104014DE	1	
18	CLAMP	HFJ1104017DE	2	
19	SCREW	Q271B6313	3	
20	FUEL PIPE ASM	HFJ1104030DG	1	
21	CHECK VALVE INLET HOSE	HFJ1104016DE	1	
22	DOUBEL WAY CHECK VALVE	HFJ1100200CA	1	
23	BREATHER HOSE	HFJ1104015DE	1	
24	VALVE CLAMP	HFJ1104018DE	1	
25	CHECK VALVE OUTER HOSE	HFJ110005DA	1	

FIGURE 54 FUEL TANK (UAES-BOSCH)

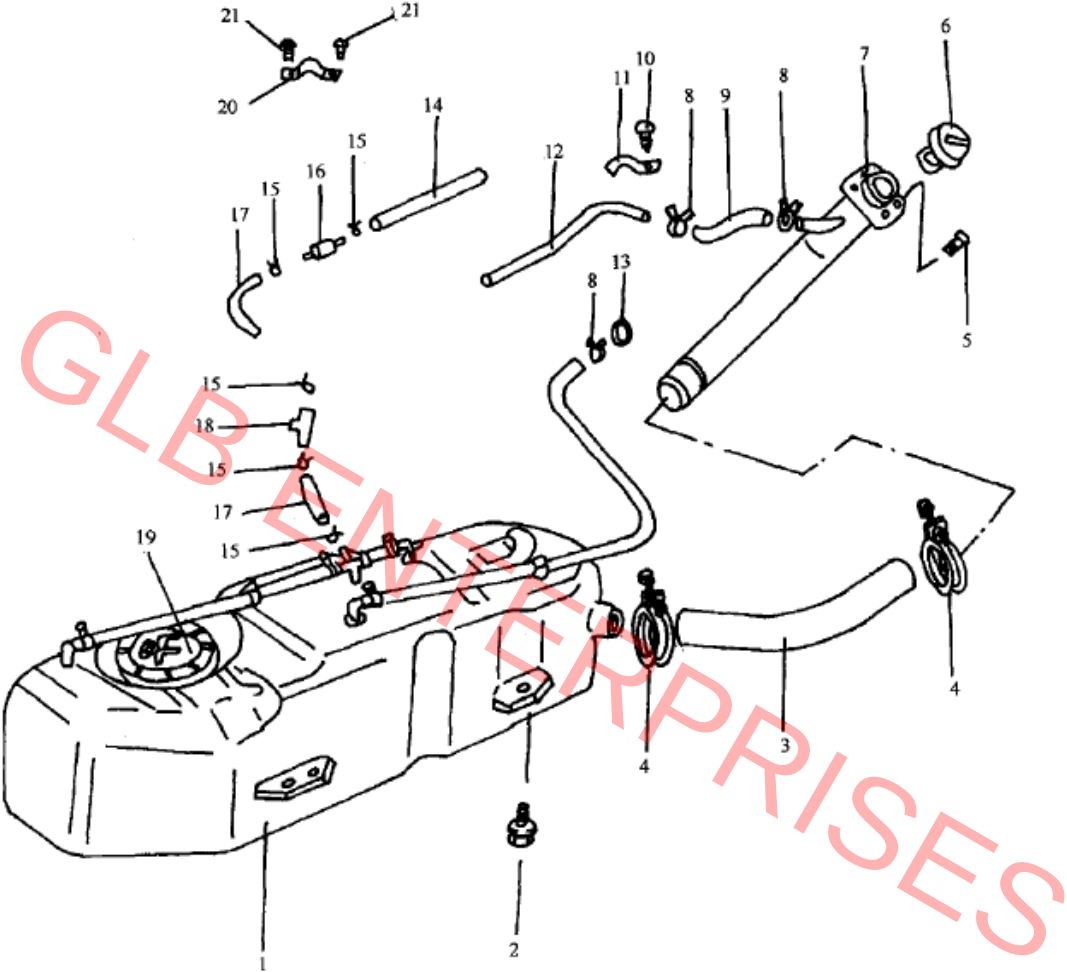


FIGURE 54 FUEL TANK (UAES-BOSCH)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	FUEL TANK ASM (PLASTIC)	HFJ110100DC	1	
2	BOLT	Q/2A-CJ-61 M8X30-8.8	1	
3	FUEL FILLER HOSE	HFJ11040016CA	1	
4	CLAMP	Q67250	1	
5	SCREW	Q67250	1	
6	FUEL FILLER CAP	HFJ1103000DA	1	
7	FUEL FILLER PIPE	HFJ1100030DA	1	
8	CLAMP	Q/2A-CJ-501 16	1	
9	FUEL TANK VAPOR HOSE #2	HFJ1104008CA	1	
10	BOLT	Q/2A-CJ-47A ST6.3X12	1	
11	CLAMP	HFJ1100012CA	1	
12	FUEL TANK BREATHER PIPE	HFJ1104017CA	1	
13	WEATHERPROOF RING FUEL TANK VAPOR PIPE	HFJ1100006CA	1	
14	2-WAY VALVE VENT HOSE	HFJ1100005DA	1	
15	CLAMP	Q67111	1	
16	2-WAY CHECK VALVE	HFJ1100200CA	1	
17	INLET VALVE HOSE	HFJ1104015DC	1	
18	3-WAY PIPE	HFJ1100019CA	1	
19	FUEL PUMP ASM	HFJ1106000DC	1	

FIGURE 55 FUEL TANK (DELPHI)

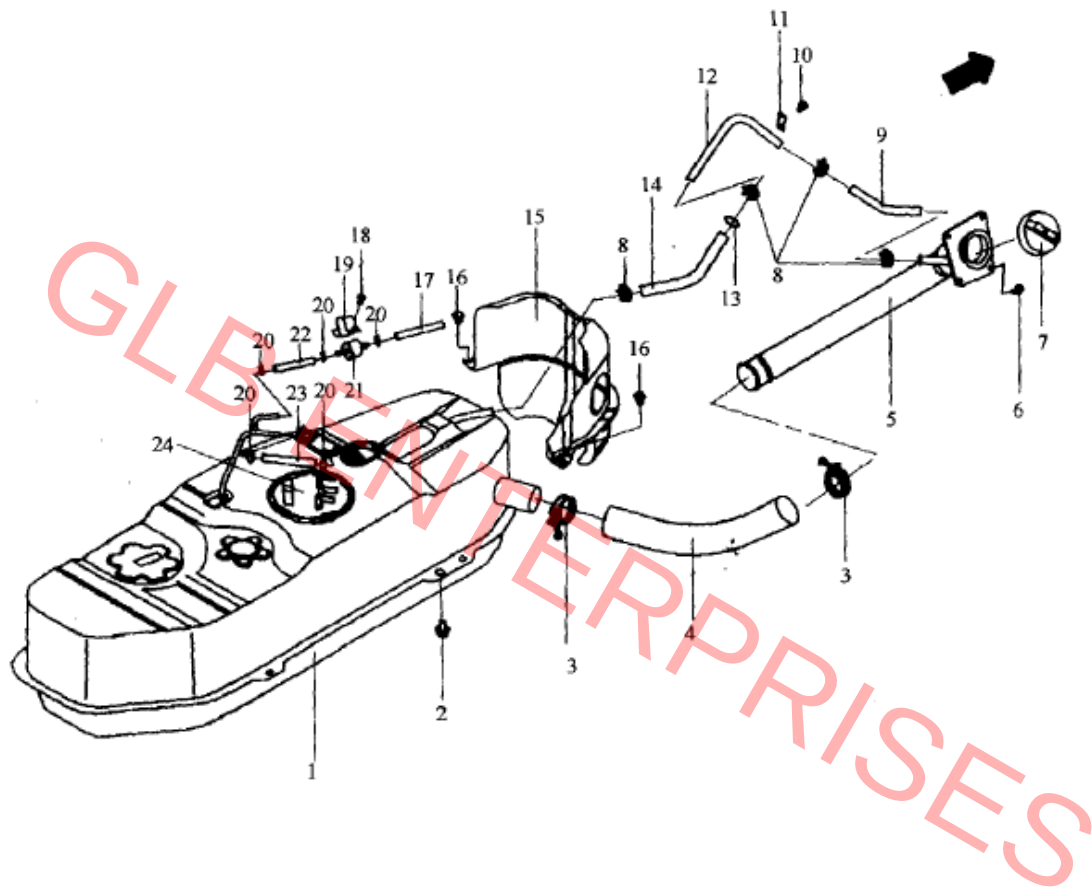


FIGURE 54 FUEL TANK (DELPHI)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	FUEL TANK ASM	HFJ110100DB	1	
2	BOLT	Q15080825-6G	4	
	WASHER	Q40408	4	
	FLAT WASHER	Q40208	4	
3	CLAMP	Q67250	2	
4	FULE FILLER HOSE	HFJ11040016CA	1	
5	FUEL FILLER PIPE ASM	HFJ1100030DA	1	
6	SCREW	Q/2A-CJ-474 M5X20	4	
7	FUEL FILLER CAP	HFJ1103000DA	1	
8	CLAMP	Q/2A-CJ-501-16	2	
	FUEL TANK BREATHER			
9	HOSE #2	HFJ1104008CA	1	
10	SCREW	Q/2A-CJ-47A-ST6.3X12	1	
	FUEL TANK VAPOR PIPE			
11	CLAMP	HFJ1100012CA	1	
	FUEL TANK BREATHER			
12	PIPE	HFJ1104017CA	1	
	WEATHERPROOF RING			
13	FUEL TANK VAPOR PIPE	HFJ1100006CA	1	
	FUEL TANK BREATHER			
14	HOSE #1	HFJ1104007CA	1	
15	HEAT SHEILD	HFJ1101012DB	1	
16	SNAP FASTNER	HFJ1101011DB	2	
	2-WAY VAVLE VENT			
17	HOSE	HFJ1101011DB	1	
18	SCREW	Q/2A-CJ-26 M5X12	1	
	2-WAY CHECK VAVLE			
19	CLAMP	HFJ1100018CB	1	
20	CLAMP	Q67111	5	
21	2-WAY CHECK VAVLE	HFJ1100200CA	1	
22	INLET VALVE HOSE	HFJ1104022DB	2	
	FUEL TANK BREATHER			
23	HOSE	HFJ1104012CA	1	
24	FUEL PUMP ASM	HFJ1106000DB	1	
25	PUMP PINCHCOCK	HFJ1101106DB	1	

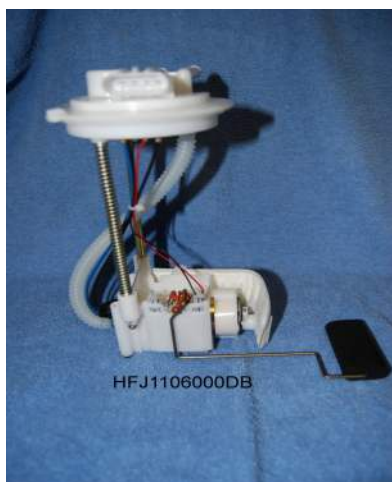


FIGURE 56 FUEL TANK (HFJ6351B-HFJ6350B)

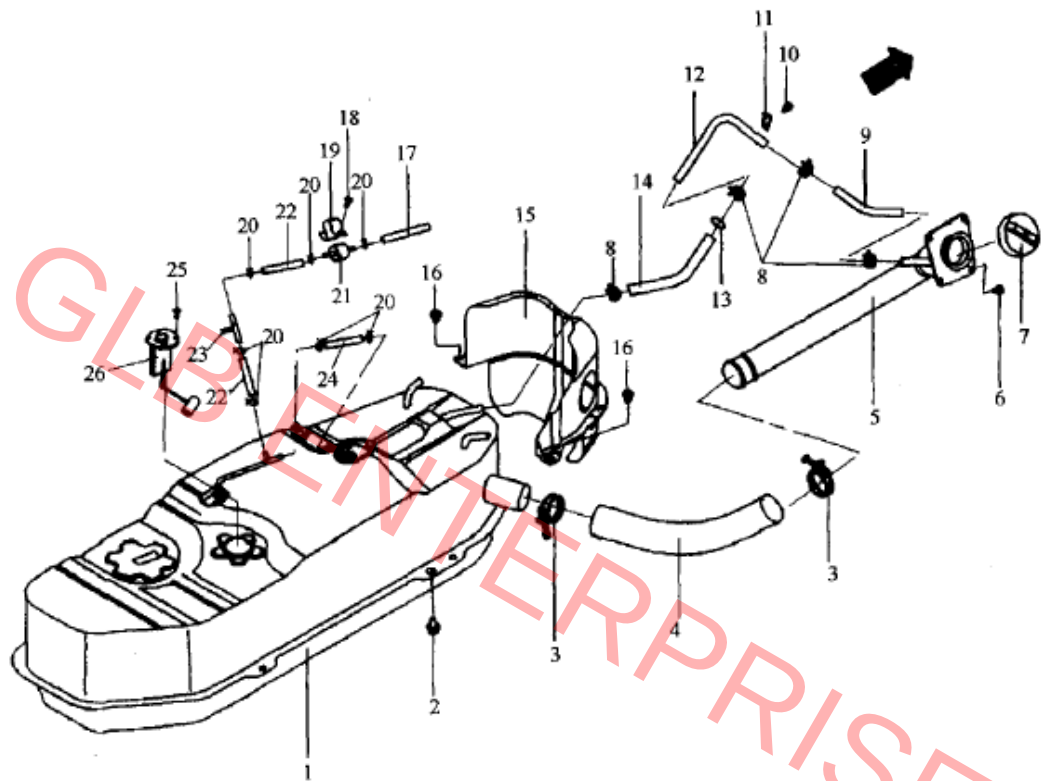


FIGURE 56 FUEL TANK (HFJ6351B-HFJ6350B)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	FUEL TANK ASM	HFJ1101000CA	1	
2	BOLT	Q15080825-6G	4	
	WASHER	Q40408	4	
	FLAT WASHER	Q40208	4	
3	CLAMP	Q67250	2	
4	FUEL FILLER HOSE	HFJ11040016CA	1	
5	FUEL FILLER PIPE	HFJ1100030DA	1	
6	SCREW	Q/2A-CJ-474 M5X20	4	
7	FUEL FILLER CAP	HFJ1103000DA		
8	CLAMP	Q/2A-CJ-501-16	2	
	FUEL TANK VAPOR			
9	HOSE #2	HFJ1104008CA	1	
10	SCREW	Q/2A-CJ-47A-ST6.3X12	1	
	FUEL TANK BREATHER			
11	PIPE CLAMP	HFJ1100012CA	1	
12	BUEL TNAK BREATHER PIPE	HFJ1104017CA	1	
	WEATHERPROOF RING			
13	FUEL TANK VAPOR PIPE	HFJ1100006CA	1	
	FUEL TANK VAPOR			
14	HOSE #1	HFJ1104007CA	1	
15	HEAT SHEILD	HFJ1101012DB	1	
16	SNAP FASTNER	HFJ1101011DB	2	
17	2-WAY VENT HOSE	HFJ1100005DA	1	
18	SCREW	Q/2A-CJ-26 M5X12	1	
	2-WAY CHECK VALVE			
19	CLAMP	HFJ1100018CB	1	
20	CLAMP	Q67111	5	
21	2-WAY CHECK VALVE	HFJ1100200CA	1	
22	INLET VALVE HOSE	HFJ1104022CA	2	
23	3-WAY PIPE	HFJ1100019CA	1	
	FUEL TAANK EVAP			
24	HOSE	HFJ1104012CA	1	
25	SCREW	Q/2A-CJ-26 M5X10	5	
26	FUEL LEVEL GAUGE	HFJ3806100CA	1	

FIGURE 57 FUEL TANK (HFJ1011G-HFJ1011H, EGI)

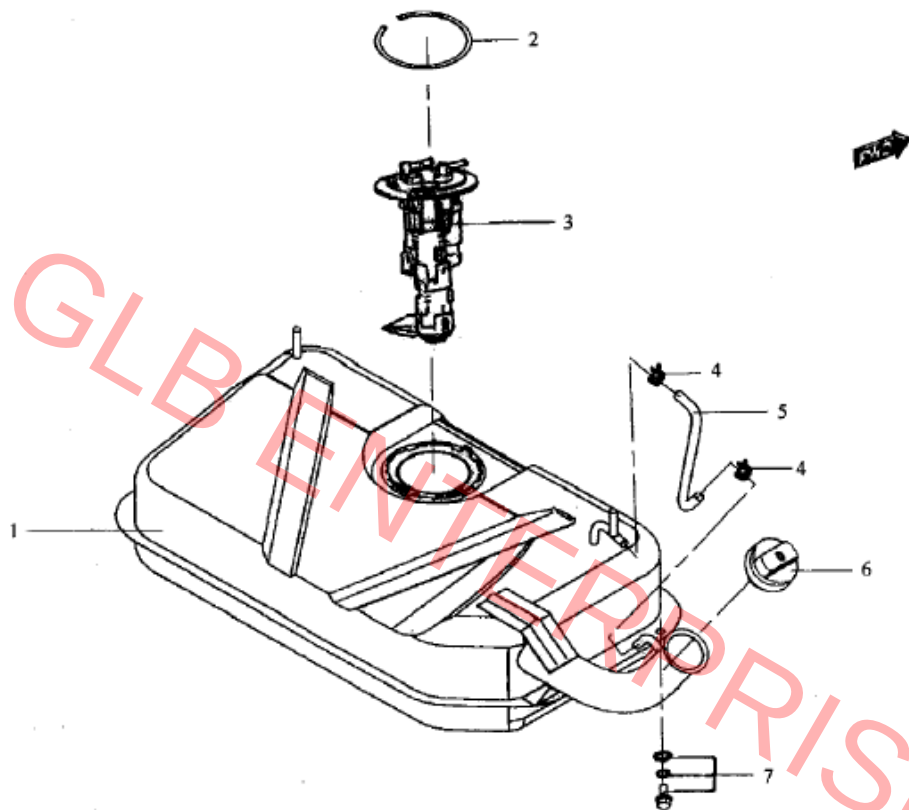


FIGURE 57 FUEL TANK (HFJ1011G-HFJ1011H, EGI)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	FUEL TANK ASM	HFJ1101100DE	1	FUEL INJECTED
2	PUMP PINCHCOCK	HFJ1101106DB	1	
3	FUEL PUMP ASM	HFJ6350E-1106000	1	CREW CAB & VAN
4	CLAMP	Q67214	2	
5	HOSE	HFJ1101005DD	1	
6	FUEL FILLER CAP	HFJ1103000DA	1	
7	BOLT	Q15080825-G	4	
	WASER	Q40408	4	
	FLAT WASHER	Q40208	4	



FIGURE 58 FUEL TANK (HFJ1011G- CARBURETOR)

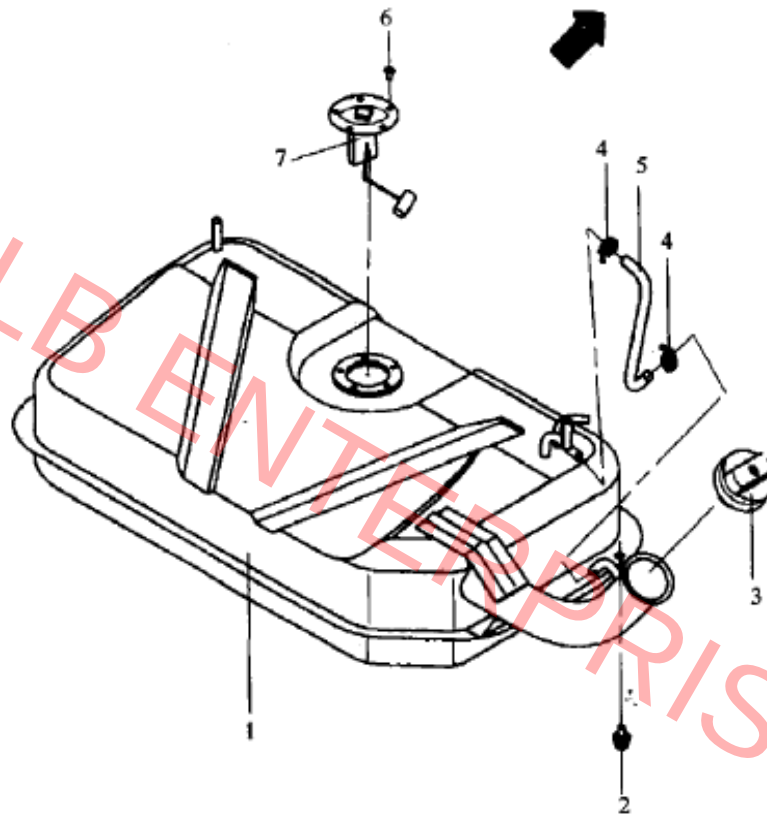


FIGURE 58 FUEL TANK (HFJ1011G- CARBURETOR)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	FUEL TANK ASM	HFJ1101100DD	1	
2	BOLT	Q15080825-6G	4	
	WASER	Q40408	4	
	FLAT WASER	Q40208	4	
3	FUEL FILLER CAP	HFJ1103000DA	1	
4	CLAMP	Q67214	2	
5	HOSE	HFJ1101005DD	1	
6	SCREW	Q2/2A-CJ-25 M5X10	5	
7	FUEL LEVEL GAUGE	HFJ3806100DB	1	



GLB ENTERPRISES

FIGURE 59 ACCELERATOR, CLUTCH & CHOKE CABLE

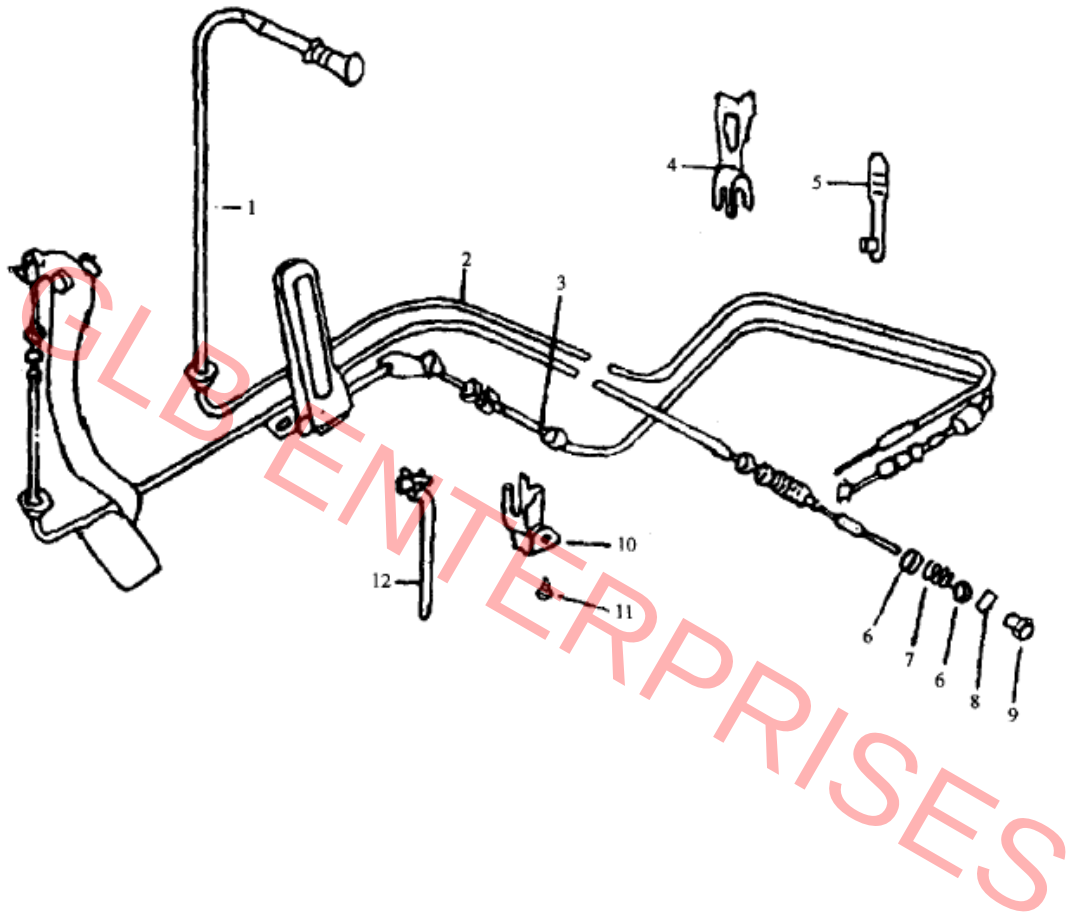


FIGURE 59 ACCELERATOR, CLUTCH & CHOKE CABLE

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	CHOKE CABLE	HFJ1108100DB	1	HFJ6350B, HFJ6351
		HFJ1108100FA	1	
2	CLUTCH CABLE	HFJ1602100FA	1	HFJ6350B, HFJ6351
		HFJ1602100DA	1	4MT, 78"
		HFJ1602100FA	1	4MT
		HFJ1602100DB		5MT, 79.5"
3	ACCELERATOR CABLE	HFJ1108200DB	1	
		HFJ1108200FA	1	HFJ6350B, HFJ6351
4	CLIP	Q/2A-CJ-430	1	
5	CLIP	HFJ1108006CA	1	
6	PLATE	Q/2A-J22-6X12X1.5	N/A	
7	SPRING	Q/2A-CJ-433	N/A	
8	PIN	Q/2A-CJ-469	N/A	
9	ADJUSTER NUT	Q/2A-CJ-441-M6	N/A	
10	CLIP	Q-2A-CJ-431	1	
11	SCREW	Q271B6313	1	
12	TIE	Q/2A-CJ-414	1	

GLB ENTERPRISES

FIGURE 60 DRIVE SHAFT I

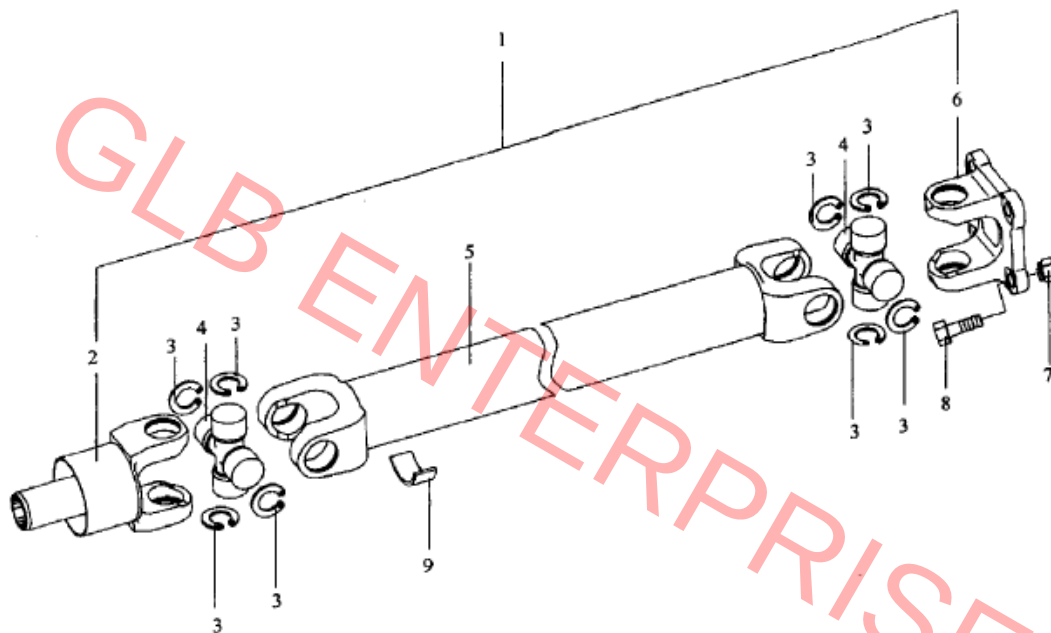


FIGURE 60 DRIVE SHAFT I

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	DRIVE SHAFT ASM	HFJ2201000CA	1	
		HFJ2201000FB	1	
		HFJ2201000FM	1	HFJ1011H
		HFJ2201000FL	1	
2	FRONT YOKE	HFJ2201030CA	1	
		HFJ2201030FA	1	
3	RETAINING CLIP	Q43025F3	1	
4	U-JOINT	HFJ2201040CA	2	
5	DRIVE SHAFT	HFJ2201020FB	1	
		HFJ2201020FM	1	
		HFJ2201020FL	1	
6	REAR FLANGE	HFJ2201012CA	1	
7	NUT	Q/2A-CJ-44 M8-8	4	
8	BOLT	Q/2A-CJ-173A M8X30-8.8	4	
9	COUNTER WEIGHT	HFJ2201009FA	N/A	

GLB ENTERPRISES

FIGURE 61 DRIVE SHAFT II

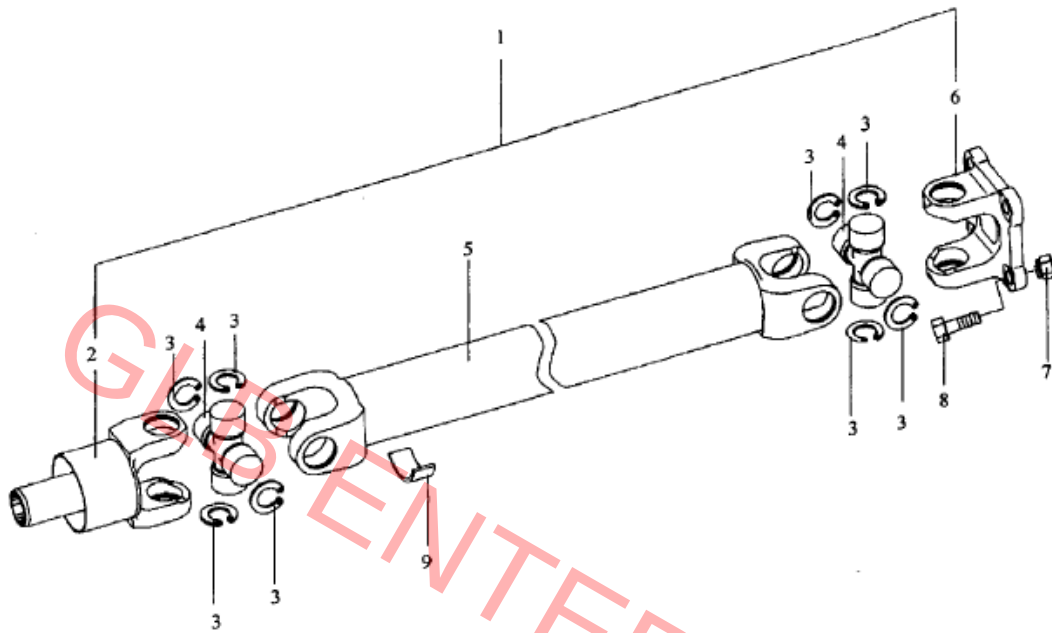


FIGURE 61 DRIVE SHAFT II

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	DRIVE SHAFT ASM	HFJ220100FB	1	HFJ6351B BEFORE JUNE 2002
		HFJ2201000FA	1	HFJ6350B, HFJ6350C, HFJ6350 BEFORE JUNE 2002
2	SLIDING YOKE	HFJ2201030FA		HFJ6350B, HFJ6350C, HFJ6350 BEFORE JUNE 2002
3	RETAINER SPRING	Q43025F3	8	
4	U-JOINT	HFJ2201040CA	2	
		HFJ2201020FB	2	HFJ6351B BEFORE JUNE 2002
5	DRIVE SHAFT	HFJ2201020FA	1	HFJ6350B, HFJ6350C, HFJ6350 BEFORE JUNE 2002
6	FLANGE	HFJ1010-2201101	1	HFJ6350B, HFJ6350C, HFJ6350 BEFORE JUNE 2002
		HFJ2201012CA	1	HFJ6351B BEFORE JUNE 2002
7	BOLT	Q/2A-CJ-174A-M8X8.8	4	BEFORE JUNE 2002
8	COUNTER WEIGHT	HFJ2201006FA	A/R	
		HFJ2201009FA	A/R	

GLB ENTERPRISES

This diagram illustrates the exploded view of a rear axle assembly. The main components are labeled with numbers 1 through 34. The assembly includes a central axle tube (15) with a differential housing (1) at one end and a knuckle arm (12) at the other. The differential housing contains internal gears (3, 4, 5, 6, 7, 8) and a pinion (16). The knuckle arm is connected to a steering knuckle (21) via a ball joint (22). The steering knuckle is mounted on a hub (23) which is connected to a wheel hub (24). The wheel hub is connected to a wheel (25) via a hub nut (26). The wheel is mounted on a tire (27). The axle tube is supported by a shock absorber (28) and a coil spring (29). The shock absorber is connected to a lower control arm (30) which is mounted on a lower control arm bush (31). The lower control arm is connected to a lower control arm ball joint (32). The lower control arm ball joint is connected to a lower control arm knuckle (33) which is mounted on a lower control arm knuckle bush (34).

FIGURE 62 REAR AXLE

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	PINION GEAR BEVEL	HFJ2402019FA	1	
	GEAR DRIVEN BEVEL	HFJ2402301FA		HFJ6350B, HFJ6350C BEFORE JUNE 2002
2	DIFFERENTIAL CASE	HFJ2402311FA	1	
3	BEARING	32008 GB/T297-97	2	
	DIFFERENTIAL SIDE			
4	ADJUSTER	HFJ2402015FA	2	
5	PINION GEAR ASM		1	
	DIFFERENTIAL PINION	HFJ2402303FA	2	
	GEAR, DIFF SIDE	HFJ2402312FA	2	
6	SHIM	HFJ2402304	AS REQ	
		HFJ2402309FA	AS REQ	
	DIFFERENTIAL SIDE			
7	PINION SHAFT	HFJ2402314FA	1	
8	THRUST WASHER	HFJ2402313FA	2	
9	BEARING	HFJ2402021FA	1	
10	SHIM	HFJ2402005FA	AS REQ	
		HFJ2402009FA	AS REQ	
	DRIVE BEVEL PINION			
11	SPACER	HFJ2402024FA	1	
	DIFFERENTIAL CAP &			
12	CARRIER ASM		1	
	DIFFERENTIAL CARRIER	HFJ2402011FA	1	
	DIFFERENTIAL SIDE			
	BEARING CAP	HFJ2402016FA	2	
13	BEARING	HFJ2402023FA	1	
14	PINION SEAL	HFJ2402100FA	1	2.055 OD X 1.040 ID TC 28-52-10, 09283-35001
15	REAR AXLE HOUSING	HFJ2401000FA	1	
16	ROLL PIN	5X45 GB897-62MM	1	
	DIFFERENTIAL SIDE			
17	BEARING LOCK PLATE	HFJ2402017FA	2	
18	BOLT	Q150B0812-6G	2	
19	SPRING WASHER	Q40310	2	
20	SHIM	HFJ2402031FA	AS REQ	
		HFJ2402039FA	AS REQ	
21	DOUBLE HEADED BOLT	HFJ2402018FA	4	
22	SPRING WASHER	Q40310	4	
23	NUT	Q340B08	4	
24	BOLT	HFJ2402302FA	8	
	UNIVERSAL JOINT			
25	FLANGE	HFJ2402200FA	1	
26	WASHER	HFJ2402013FA	1	
27	NUT	HFJ2402012FA	1	
	AXLE HOUSING			
28	BREATHING CAP	HFJ2401011FA	1	
29	COMPRESSION SPRING	HFJ2401013FA	1	
	AXLE HOUSING			
30	BREATHING VALVE	HFJ2401013FA	1	
31	BOLT	Q/2A-CJ-445 M20X1.5X13	1	
32	GASKET	Q/2A-CJ-420A	1	
33	BOLT	Q/2A-CJ-445 M12X1.25X13	1	
34	GASKET	Q/2A-CJ-420A	1	

FIGURE 63 DIFFERENTIAL ASM

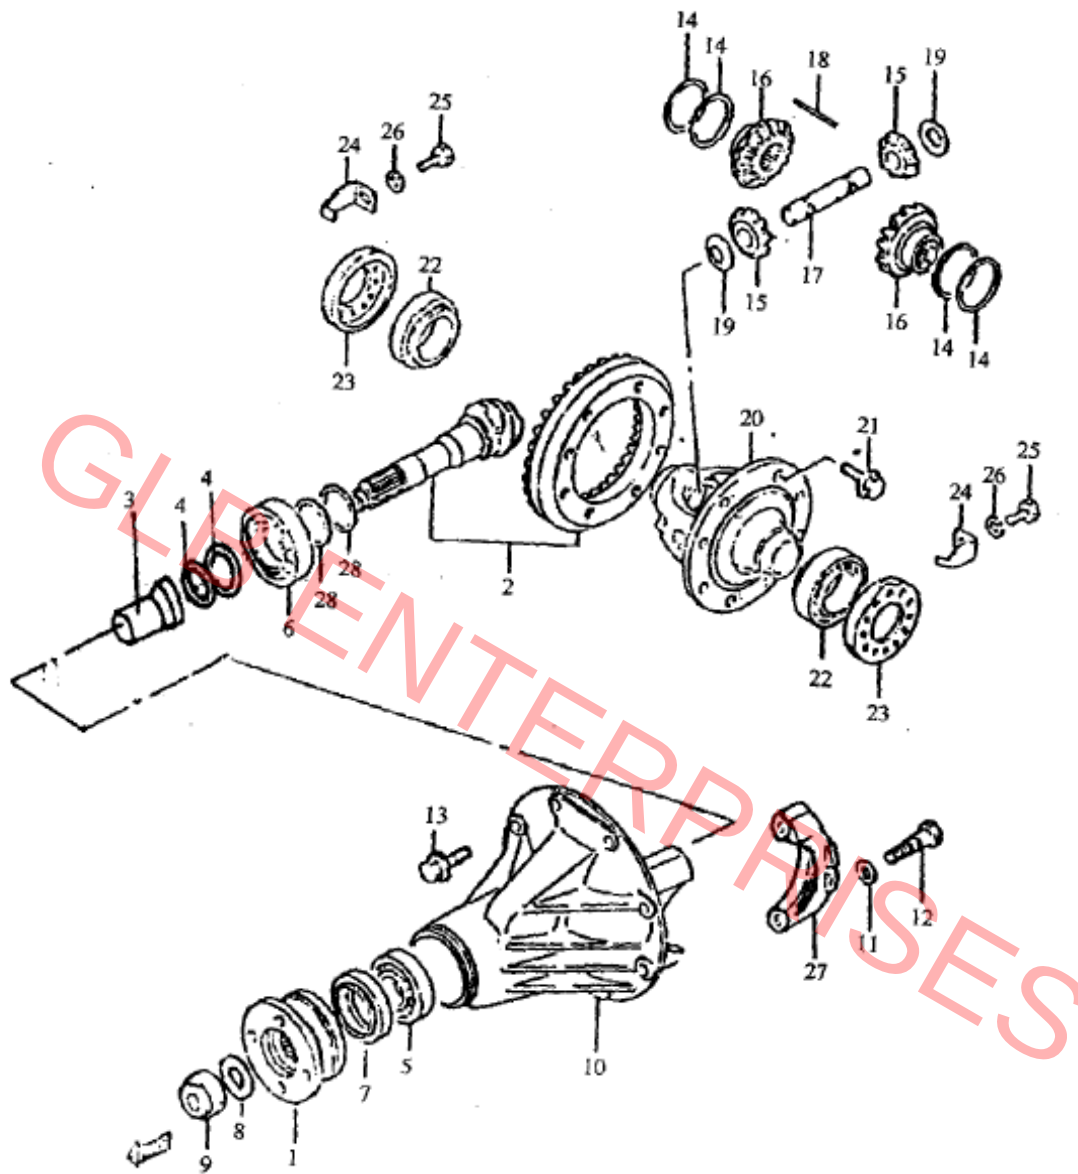


FIGURE 63 DIFFERENTIAL ASM

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	UNIVERSAL FLANGE JOINT	HFJ2402100CA	1	
		HFJ2402100FB	1	
	GEAR ASM		1	
2	PINION DRIVE BEVEL	HFJ2402005CA	1	
	GEAR DRIVEN BEVEL	HFJ2402301CA	1	
3	PINION DRIVE SPACER	HFJ2402019DA	1	
4	SHIM	HFJ2402021DA..029DA	AS REQ	
5	BEARING	HFJ2402021FA	1	
6	BEARING	HFJ2402008CA	1	
7	OIL SEAL	HFJ2402100DA	1	2.448 OD X 1.297 ID TC6Y 35-62-10/165
8	WASHER	HFJ2402013DA	1	
9	NUT	Q/2A-CJ-440 M8X1.5	1	
10	DIFFERENTIAL CARRIER	HFJ2402011DA	1	
11	SPRING WASHER	Q40310	4	
12	BOLT	Q/2A-CJ-31 M10X1.25X53	4	
13	BOLT	Q/2A-CJ-31 M8X28X8.8	8	
14	SHIM	HFJ24023041DA..307DA	AS REQ	
15	DIFFERENTIAL PINION	HFJ2402303CA	2	
16	DIFFERENTIAL SIDE GEAR	HFJ2402304CA	2	
17	DIFFERENTIAL SIDE PINION SHAFT	HFJ2402302DA	1	
18	ROLL PIN	Q5280545	1	
19	THRUST WASHER	HFJ2402301DA	2	
20	DIFFERENTIAL CASE	HFJ2402308DA	1	
21	BOLT	HFJ2402302CA	8	
22	BEARING	32008 GB/T297-94	2	
23	DIFFERENTIAL SIDE ADJUSTER	HFJ2402015DA	2	
24	SIDE BEARING LOCK PLATE	HFJ2402017DA	2	
25	BOLT	Q150B0812-6G	2	
26	SPRING WASHER	Q40408	2	
27	DIFFERENTIAL SIDE BEARING CAP	HFJ2402016DA	2	
28	SHIM	HFJ2402006DA	AS REQ	
		HFJ2402009DA	AS REQ	
	DIFFERENTIAL ASM	HFJ2402000DA	AS REQ	

*NOTE: THE STRONG TYPE OF HFJ6350B, HFJ6350C SERIES CARE USED BEFORE JUNE 2002

FIGURE 64 REAR HALF SHAFT (DRUM)

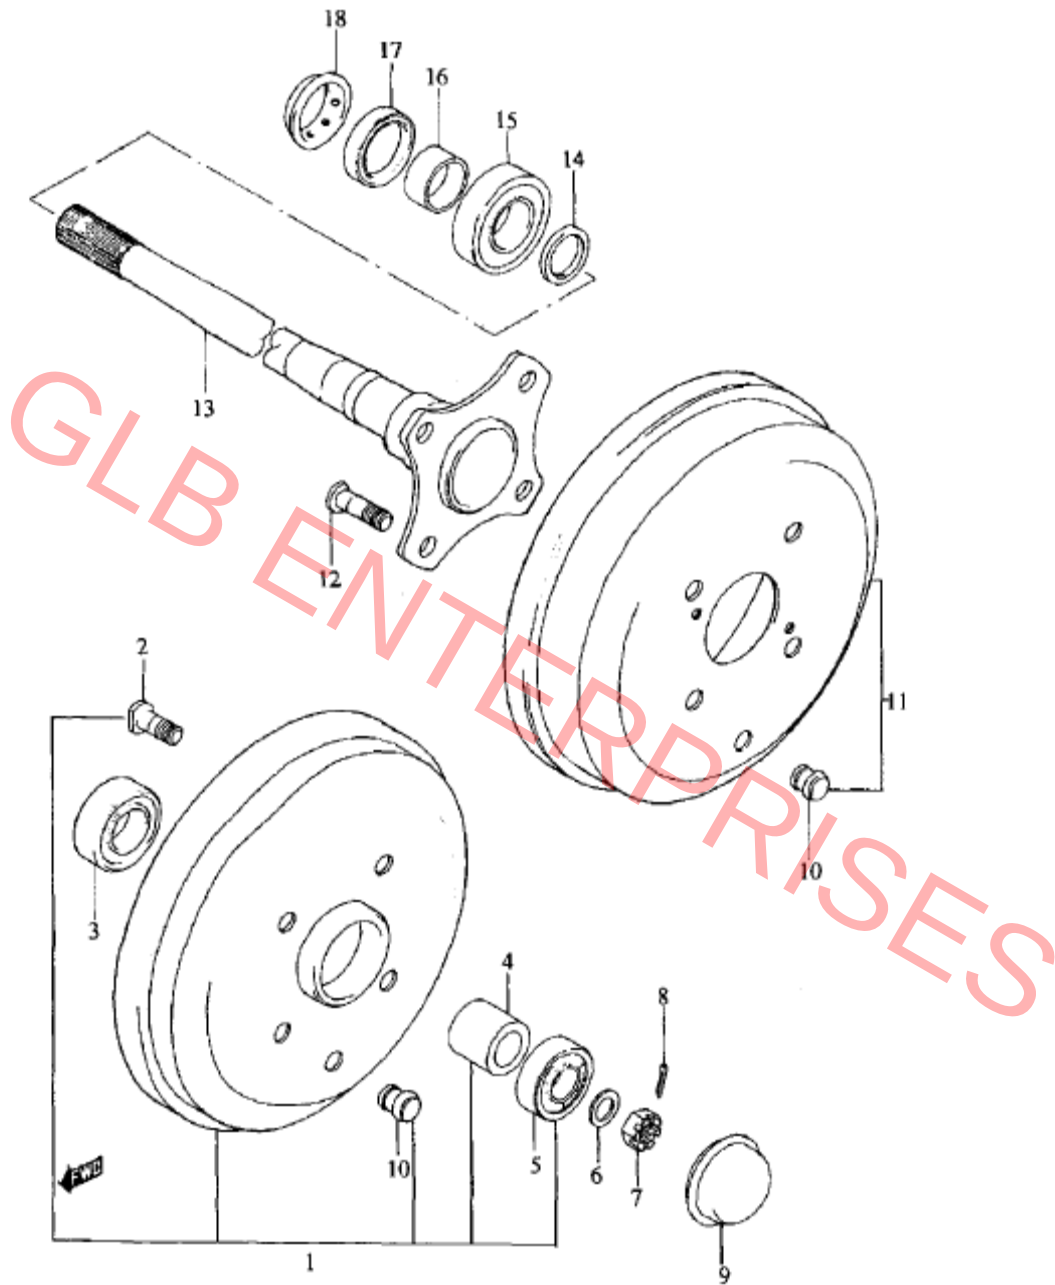


FIGURE 64 REAR HALF SHAFT (DRUM)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	FRONT BRAKE DRUM	HFJ3501500FA	2	
2	FRONT WHEEL STUDS	HFJ3501502FA	8	
3	FRONT INNER WHEEL BEARING	60205GB278-89	2	
4	WHEEL BEARING SPACER	HFJ3501503FA	2	
5	FRONT OUTER WHEEL BEARING	204GB276-94	2	
6	WASHER	Q40120	2	
7	NUT	HFJ2901005DA	2	
8	SPLIT PIN	Q5004030	2	
9	BEARING CAP	HFJ2901023DA	2	HFJ6350B, HFJ6350C BEFORE JUNE 2002
10	DRAIN PLUG	HFJ3501504FA	4	
11	REAR BRAKE DRUM	HFJ3502500FA	2	
12	REAR WHEEL STUDS	HFJ2403007FA	8	
13	REAR HALF SHAFT	HFJ2403010FA**	2	
14	BEARING RETAINING RING	HFJ2403005FA**	2	
15	REAR AXLE BEARING	6207-RS/6	2	ID 1.374 OD 2.838, GB/T276-93 6207-Z
16	AXLE SPACER	HFJ2403006FA**	2	1.6525 OD X 1.1750 ID X .660 LENGTH SMALL
		HFJ2403005DA	2	1.896 OD X 1.383 ID X .784 LENGTH BIG
17	REAR AXLE SEAL	HFJ2401200FA**	2	SMALL SEAL, 42 56 7
18	OIL SEAL PROTECTOR	HFJ2401009FA**	2	10102401039D
		HFJ2401006DA	2	2401048-01

** Prior to June 2002



FIGURE 65 REAR AXLE HOUSING HALF SHAFT & DRUM

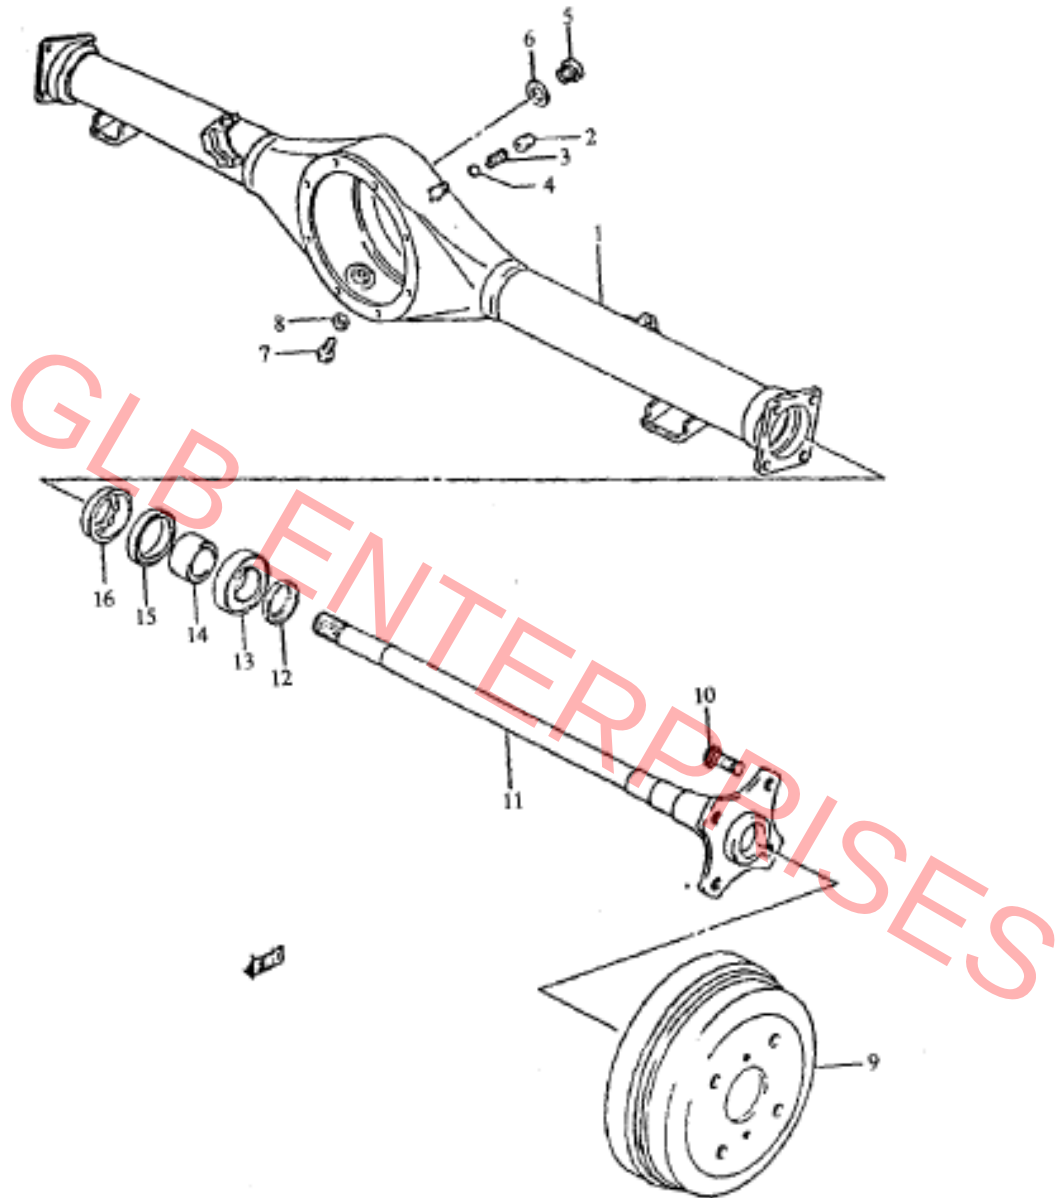


FIGURE 65 REAR AXLE HOUSING HALF SHAFT & DRUM

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	REAR AXLE HOUSING	HFJ2401100CA	1	
		HFJ2401100DA	1	
		HFJ2401100FB	1	
2	REAR AXLE HOUSING BREATHER CAP	HFJ2401011FA	1	
3	CPMPRESSION SPRING	HFJ2401013FA	1	
4	REAR AXLE HOUSING BREATHER VALVE	HFJ2401012FA	1	
5	BOLT	Q/2A-CJ-455 M20X1.5X13	1	
6	GASKET	Q/2A-CK-420A	1	
7	BOLT	Q/2A-CJ-455 M12X1.25X13	1	
8	GASKET	Q/2A-CJ-420	1	
9	REAR BRAKE DRUM	HFJ3502500FA	2	OLD NUMBER HFJ3502500DA
	REAR WHEEL STUD			
10	BOLT	HFJ2403005CA	8	
11	HALF SHAFT	HFJ2403010CA	2	STRONG TYPE
		HFJ2403010FB	2	
12	REAR AXLE SHAFT SPACER	HFJ2403006DA	2	STRONG TYPE
		HFJ2403006FA**	2	
13	REAR AXLE BEARING	6207-Z GB/T272-93	2	STRONG TYPE, GB/T276-94-6207
		6207-Z GB/T272-94	2	
14	REAR AXLE BEARING RETAINER	HFJ2403005FA	2	STRONG TYPE
		HFJ2401200FA**	2	
15	REAR AXLE SEAL	HFJ2401200DA	2	STRONG TYPE, 2401060-01, 48 82 8 TC
		HFJ2401200FA**	2	
16	OIL SEAL PROTECTOR	HFJ2401006DA	2	2401048-01
		HFJ2401009FA**	2	10102401039D

** Prior to June 2002

FIGURE 66 FRONT DISC BRAKE ASM

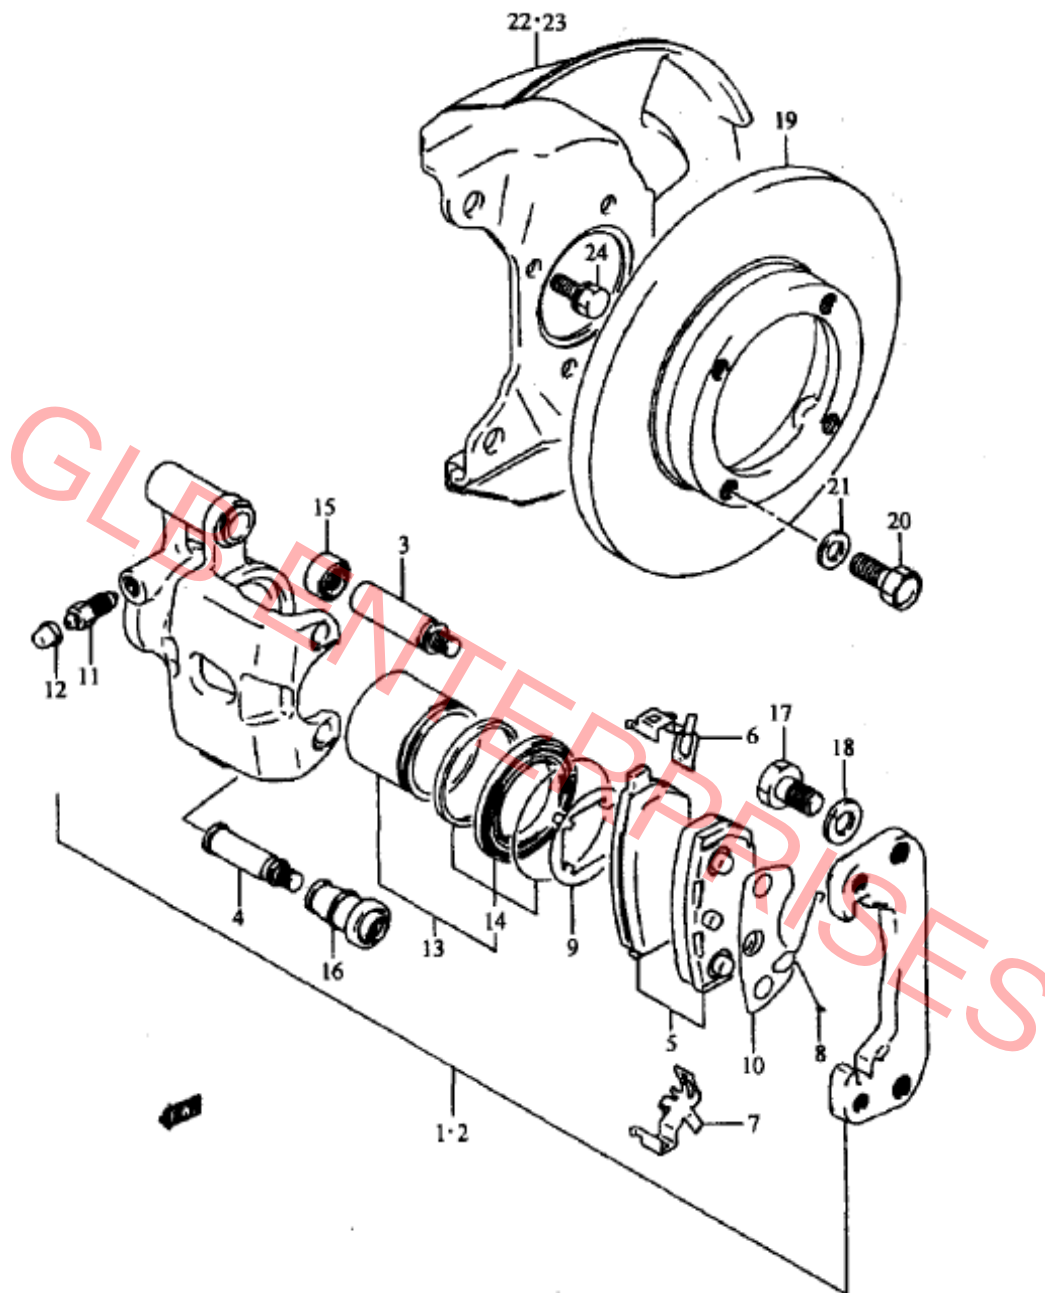


FIGURE 66 FRONT DISC BRAKE ASM

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	FRONT BRAKE CALIPER LH	HFJ3501300DA	1	
2	FRONT BRAKE CALIPER RH	HFJ3501400DA	1	
3	GUIDE PIN	HFJ3501301DA	2	
4	LOCATING PIN	HFJ3501302DA	2	
5	BRAKE PAD	HFJ3501303DA	1	SET OF 4
6	SPRING CLIP	HFJ3501304DA	2	
7	SPRING CLIP	HFJ3501305DA	2	
8	SNAP SPRING	HFJ3501305DA	2	
9	SHIM INNER	HFJ3501307DA	2	
10	SHIM OUTER	HFJ3501308DA	2	
11	BLEED SCREW	HFJ3501309DA	2	
12	RUBBER CAP	HFJ3501311DA	2	
13	PISTON ASM	HFJ3501312DA	2	
14	RUBBER SEAL ASM	HFJ3501313DA	2	
15	RUBBER SLEEVE	HFJ3501314DA	2	
16	DUST BOOT	HFJ3501315DA	2	
17	BOLT	Q151B1220TG2-6G	4	
18	WASHER	Q40512	4	
19	DISC ROTOR	HFJ3501316DA	2	
20	BOLT	HFJ3501317DA	8	
21	LOCK WASHER	Q40310	8	
22	FRONT BRAKE CALIPER CARRIER LH	HFJ3501110DA	1	
23	FRONT BRAKE CALIPER CARRIER RH	HFJ3501120DA	1	
24	BOLT	Q/2A-CJ-31 M8X20X8.8	8	

FIGURE 67 FRONT BRAKE DRUM (MANUAL ADJUST)

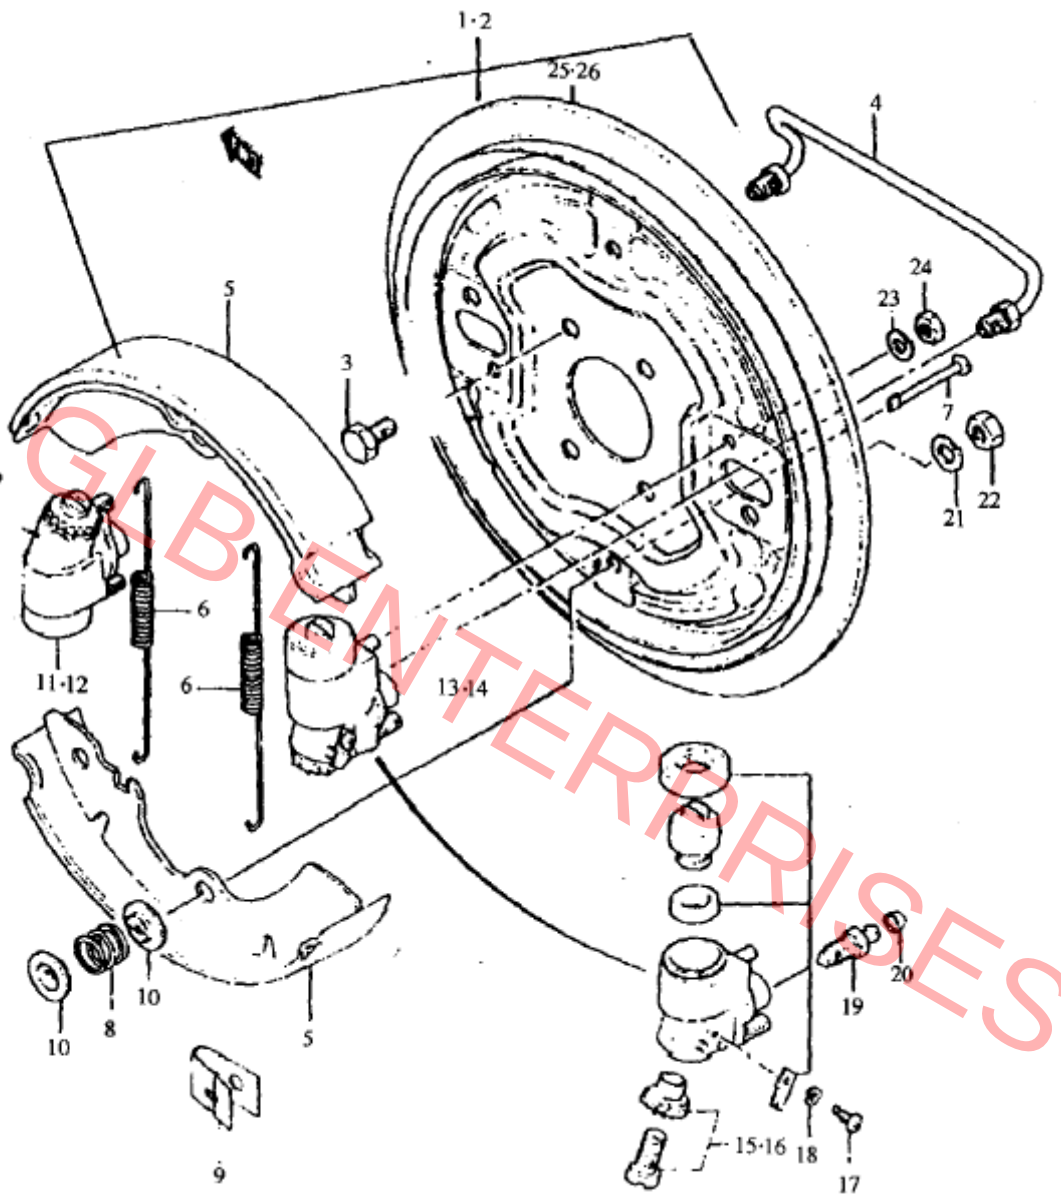


FIGURE 67 FRONT BRAKE DRUM (MANUAL ADJUST)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	FRONT BRAKE ASM LH	HFJ3501300FA	1	
2	FRONT BRAKE ASM RH	HFJ3501400FA	1	
3	BOLT\WASHER ASM	Q/2Q-CJ-31 N8X20-8.8	8	
4	BRAKE PIPE	HFJ3501313FA	2	
5	BRAKE SHOE	HFJ3501301FA	1	SET OF 4, HFJ3501301FB
6	SPRING	HFJ3501302FA	4	
7	HOLD DOWN PIN	HFJ3501302FA	4	
8	SPRING	HFJ3501304FA	4	
9	SPRING CLIP	HFJ3501305FA	4	
10	HOLD DOWN CUP	HFJ3501306FA	8	
11	BRAKE CYLINDER LEADING LH	HFJ3501307FA	1	
12	BRAKE CYLINDER LEADING RH	HFJ3501407FA	1	
13	BRAKE CYLINDER TRAILING LH	HFJ3501308FA	1	
14	BRAKE CYLINDER TRAILING RH	HFJ3501408FA	1	
15	BRAKE ADJUSTER LH	HFJ3501309FA	2	
16	BRAKE ADJUSTER RH	HFJ3501310FA	2	
17	SCREW	Q214B0408-6G	4	
18	LOCK WASHER	Q40304	4	
19	BLEED SCREW	HFJ3501311FA	2	
20	RUBBER CAP	HFJ3501312FA	2	
21	WASHER	Q40308	4	
22	NUT	Q340B08	4	
23	WASHER	Q40306	4	
24	NUT	Q34B09	4	
25	FRONT BRAKE PLATE LH	HFJ3501314FA	1	
36	FRONT BRAKE PLATE RH	HFJ3501414FA	1	



FIGURE 68 FRONT BRAKE DRUM (AUTO ADJUST)

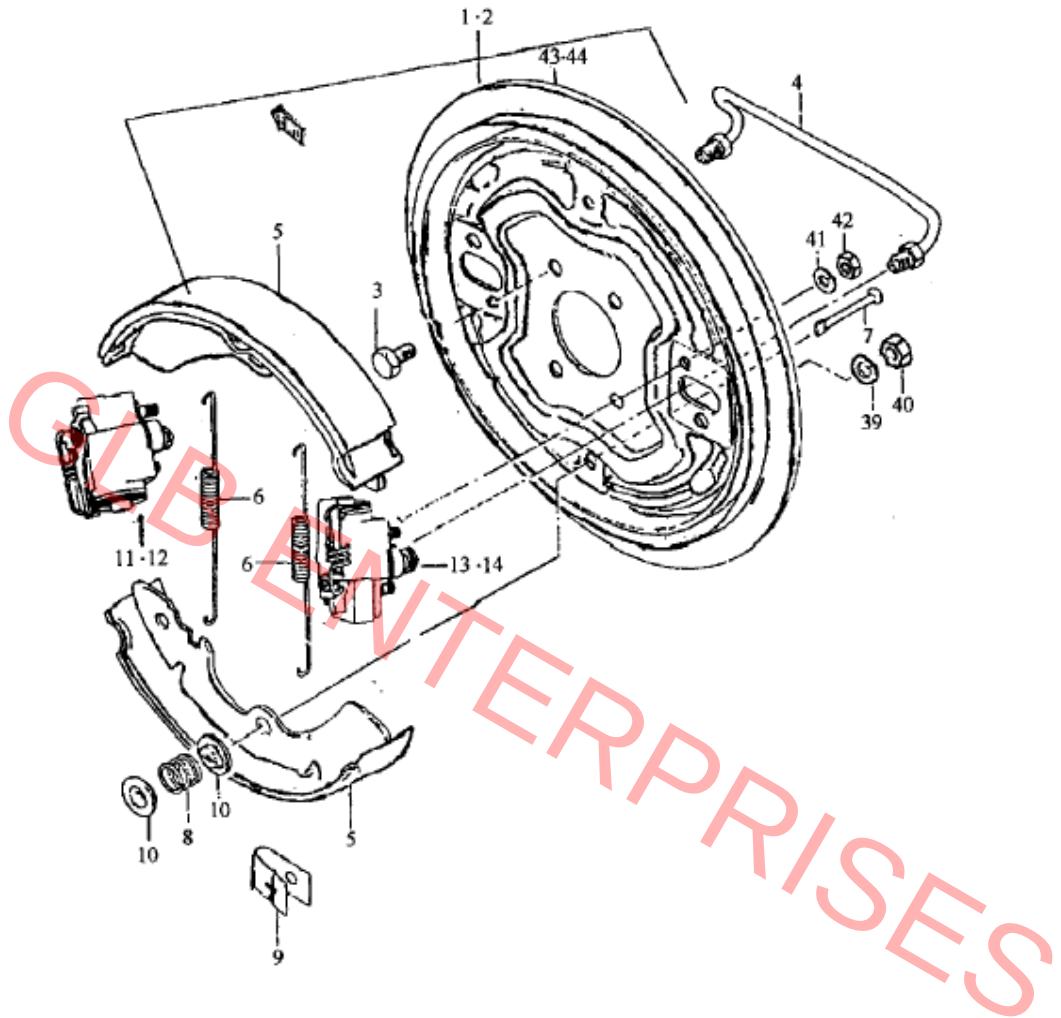


FIGURE 68 FRONT BRAKE DRUM (AUTO ADJUST)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	FRONT BRAKE ASM LH	HFJ3501300FB	1	
2	FRONT BRAKE ASM RH	HFJ3501400FB	1	
3	BOLT/WASHER	Q/2A-CJ-31 M8X20X8.8	8	
4	BRAKE PIPE	HFJ3501313FA	2	
5	BRAKE SHOE	HFJ3501301FB	1	SET OF 4, HFJ3501301FA
6	SPRING	HFJ3501302FA	4	
7	HOLD DOWN PIN	HFJ3501303FA	4	
8	SPRING	HFJ3501305FA	4	
9	SPRING CLIP	HFJ3501305FA	4	
10	HOLD DOWN CUP	HFJ3501306FA	8	
11	BRAKE CYLINDER LEADING LH	HFJ3501302FB	1	
12	BRAKE CYLINDER LEADING RH	HFJ3501402FB	1	
13	BRAKE CYLINDER TRAILING LH	HFJ3501303FB	1	
14	BRAKE CYLINDER TRAILING RH	HFJ3501403FB	1	



FIGURE 69 REAR BRAKE DRUM (MANUAL ADJUST)

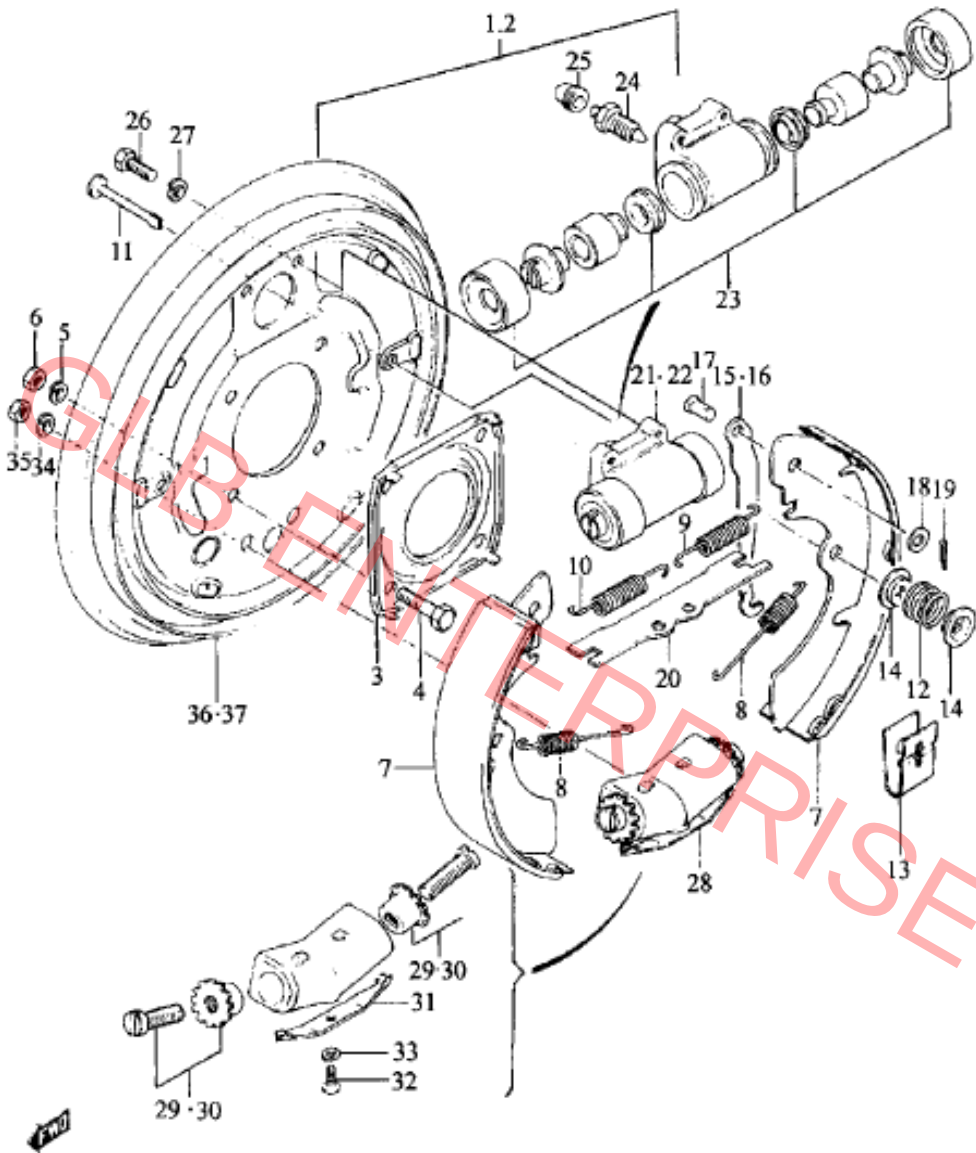


FIGURE 69 REAR BRAKE DRUM (MANUAL ADJUST)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	REAR BRAKE ASM LH	HFJ3502300FA	1	BEFORE JUNE 2002
2	REAR BRAKE ASM RH	HFJ3502400FA	1	BEFORE JUNE 2002
	BEARING RETAINER			
3	OUTER	HFJ2403101FA	2	
4	BOLT	HFJ2403102FA	8	
5	WASHER	Q40408	8	
6	NUT	Q/2A159M8	8	
7	BRAKE SHOE	HFJ3501301FA	1	SET OF 4
8	SPRING	HFJ3502301FA	4	
9	SPRING	HFJ3502302FA	2	
10	SPRING	HFJ3502303FA	2	
11	HOLD -DOWN PIN	HFJ3501303FA	4	
12	SPRING	HFJ3501304FA	4	
13	SPRING CLIP	HFJ3501305FA	4	
14	HOLD-DOWN CAP	HFJ3501306FA	8	
15	PARKING BRAKE LEVER	HFJ3502304FA	1	
16	PARKING BRAKE LEVER	HFJ3502404FA	1	
17	PIVOT PIN	HFJ3502305FA	2	
18	WASHER	HFJ3502306FA	2	
19	SPLIT PIN	HFJ3502307FA	2	
20	STRUT	HFJ3502308FA	2	
21	BRAKE CYLINDER LH	HFJ3502409FA	1	
22	BRAKE CYLINDER RH	HFJ3502309FA	1	
	CYLINDER BEARK UP			
23	ASM	HFJ3502311FA	2	
24	BLEED SCREW	HFJ3501311FA	2	
25	RUBBER CAP	HFJ3501312FA	2	
26	BOLT	Q150B0613-6G	4	
27	SPRING SEAT	Q40306	4	
28	ADJUSTER ASM	HFJ3502312FA	2	
34	SPRING WASHER	Q40308	4	
35	NUT	Q340B08	4	
	RER BRAKE PLATE ASM			
36	LH	HFJ3502315FA	1	
	RER BRAKE PLATE ASM			
37	RH	HFJ3502415FA	1	



FIGURE 70 REAR BRAKE DRUM (AUTO ADJUST TYPE I)

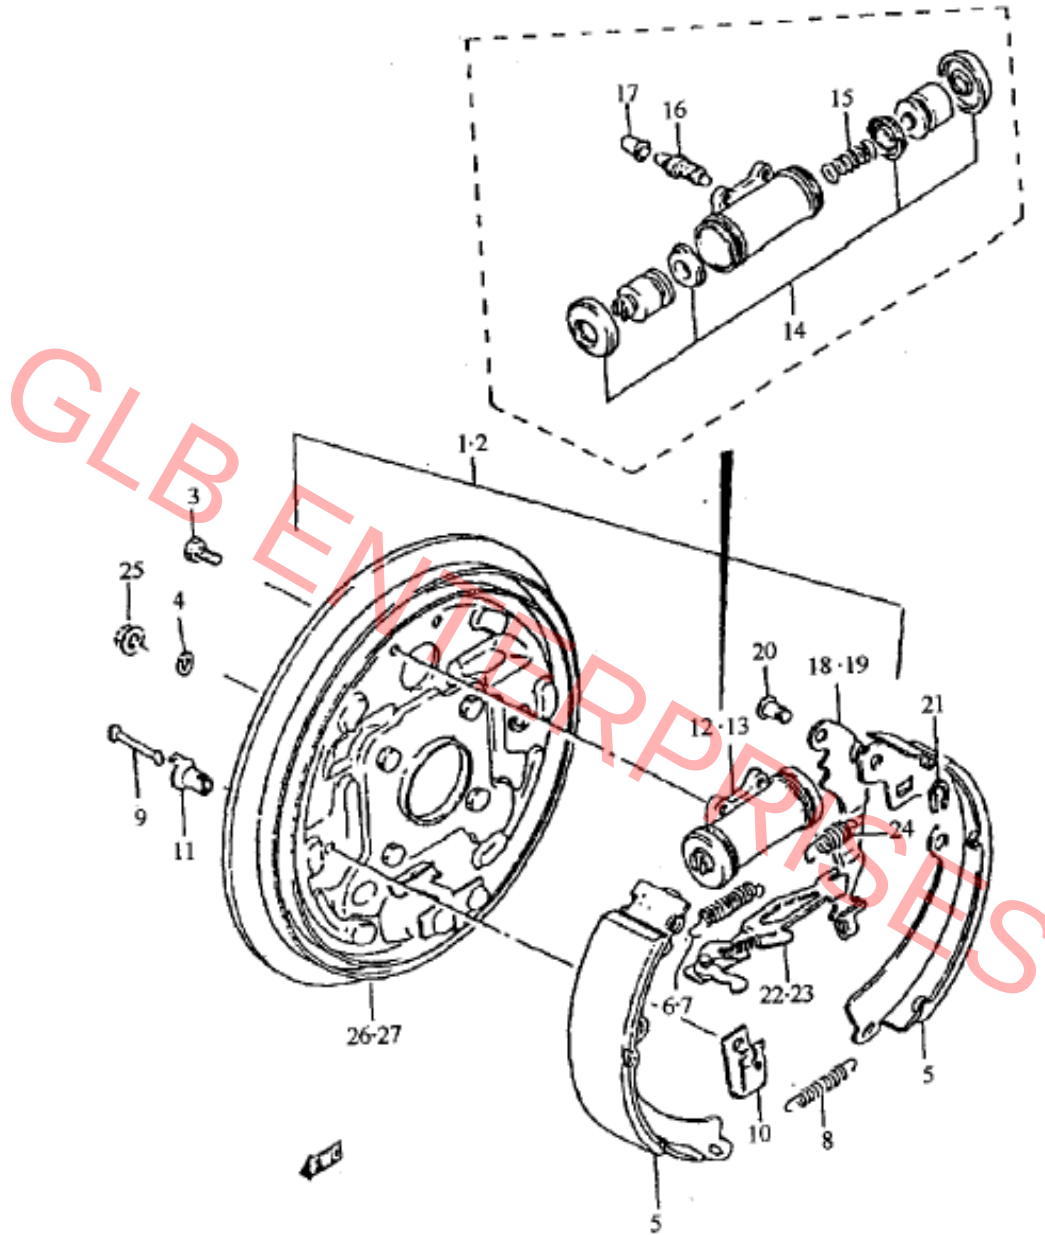


FIGURE 70 REAR BRAKE DRUM (AUTO ADJUST TYPE I)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	REAR BRAKE ASM LH	HFJ3502300DA	1	
2	REAR BRAKE ASM RH	HFJ3502400DA	1	TYPE I
		HFJ3502400DB	1	TYPE X
3	BOLT	HFJ3502319DA	4	
4	WASHER	Q40408	8	
5	BRAKE SHOE	HFJ3502301DA	1	SET OF 4
	BRAKE SHOE UPPER			
6	RETURN SPRING LH	HFJ3502302DA	1	
	BRAKE SHOE UPPER			
7	RETURN SPRING RH	HFJ3502402DA	1	
	BRAKE SHOE LOWER			
8	RETURN SPRING RH	HFJ3502303DA	2	
9	PIN	HFJ3502304DA	4	
10	SPRING	HFJ3502305DA	4	
	STRUT SHOE HOLD-DOWN LOWER			
11		HFJ3502306DA	4	
	BRAKE CYLINDER REAR LH			
12		HFJ3502307DA	1	TYPE I=1, TYPE II=2
	BRAKE CYLINDER REAR RH			
13		HFJ3502407DA	1	TYPE I=1, TYPE II=2
18	PARKING BRAKE LEVER	HFJ3502311DA	1	
19	PARKING BRAKE LEVER	HFJ3502411DA	1	
20	PARKING LEVER PIVOT	HFJ3502312DA	2	
21	C-WASHER	HFJ3502313DA	2	
22	AUTO ADJUSTER LH	HFJ3502314DA	1	
23	AUTO ADJUSTER RH	HFJ3502414DA	1	
24	STRETCH SPRING	HFJ3502315DA	2	
25	NUT	Q/2AAJ159M8-45	8	
26	REAR BRAKE PLATE LH	HFJ3502316DA	1	
17	REAR BRAKE PLATE LH	HFJ3502416DA	1	



FIGURE 71 REAR BRAKE DRUM (AUTO ADJUST TYPE II)

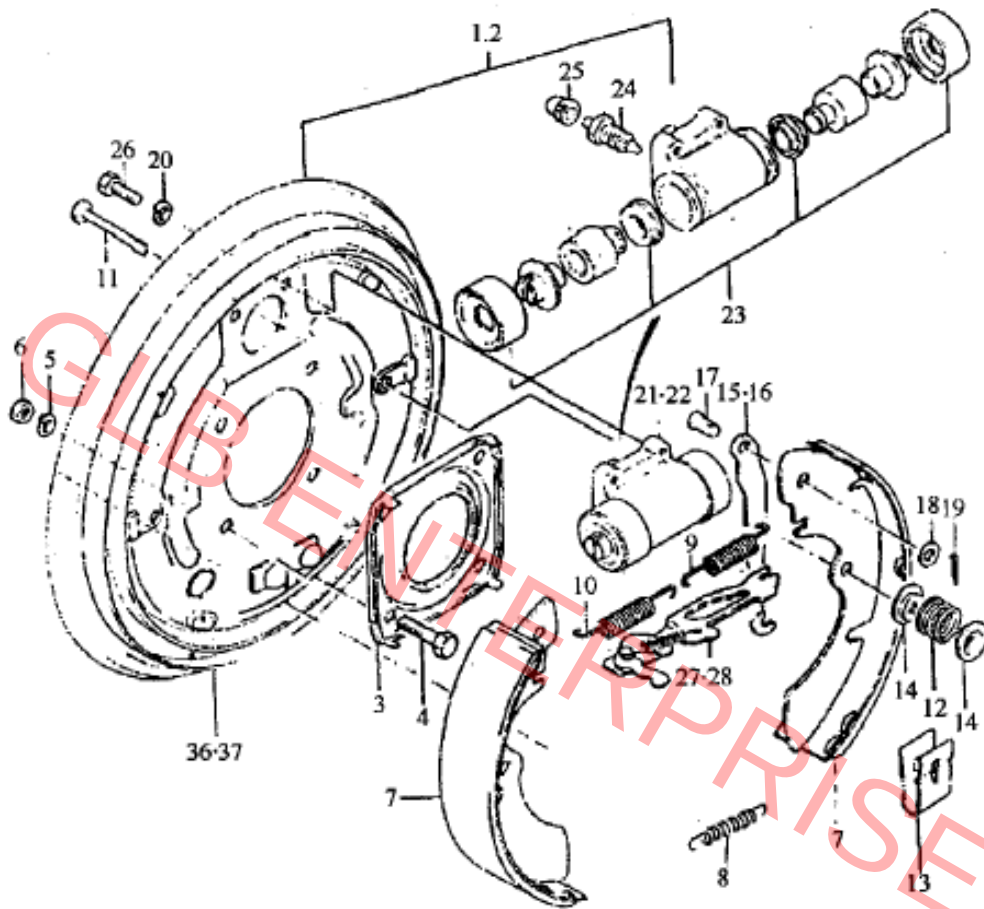


FIGURE 71 REAR BRAKE DRUM (AUTO ADJUST TYPE II)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	REAR BRAKE ASM LH	HFJ3502300FB	1	USED BEFORE JUNE 2002
2	REAR BRAKE ASM RH	HFJ3502400FB	1	USED BEFORE JUNE 2002
	BEARING OUTER			
3	RETAINER	HFJ2403101FA	2	
4	BOLT	HFJ2403102FA	8	
5	WASHER	Q40408	8	
6	NUT	Q/2AJ159M8	8	
7	BRAKE SHOE	HFJ3502301FB	1	SET OF 4
	BRAKE SHOE LOWER			
8	RETURN SPRING	HFJ3502302FB	4	
9	STRETCH SPRING	HFJ3502303FB	2	
	BRAKE SHOE UPPER			
10	RETURN SPRING	HFJ3502304FB	2	
11	HOLD-DOWN PIN	HFJ3501303FA	4	
12	SPRING	HFJ3501304FA	4	
13	FLAT SPRING	HFJ3501305FA	4	
14	HOLD-DOWN CAP	HFJ3501306FA	8	
	PARKING BRAKE LEVER			
15	LH	HFJ3502305FB	1	
	PARKING BRAKE LEVER			
16	RH	HFJ3502405FB	1	
17	PIVOT PIN	HFJ3502305FA	2	
18	WASHER	HFJQ40306	4	
19	SPLIT PIN	HFJ3502307FA	2	
20	SPRING WASHER	Q40306	4	
21	BRAKE CYLINDER LH	HFJ3502306FB	1	
22	BRAKE CYLINDER RH	HFJ3502406FB	1	
24	BLEED SCREW	HFJ3501312FA	1	
25	RUBBER CAP	HFJ3501312FA	1	
26	BOLT	Q150B0612-6G	4	
27	AUTO ADJUSTER LH	HFJ3502308FB	1	
28	AUTO ADJUSTER RH	HFJ3502408FB	1	



FIGURE 72 FRONT AXLE

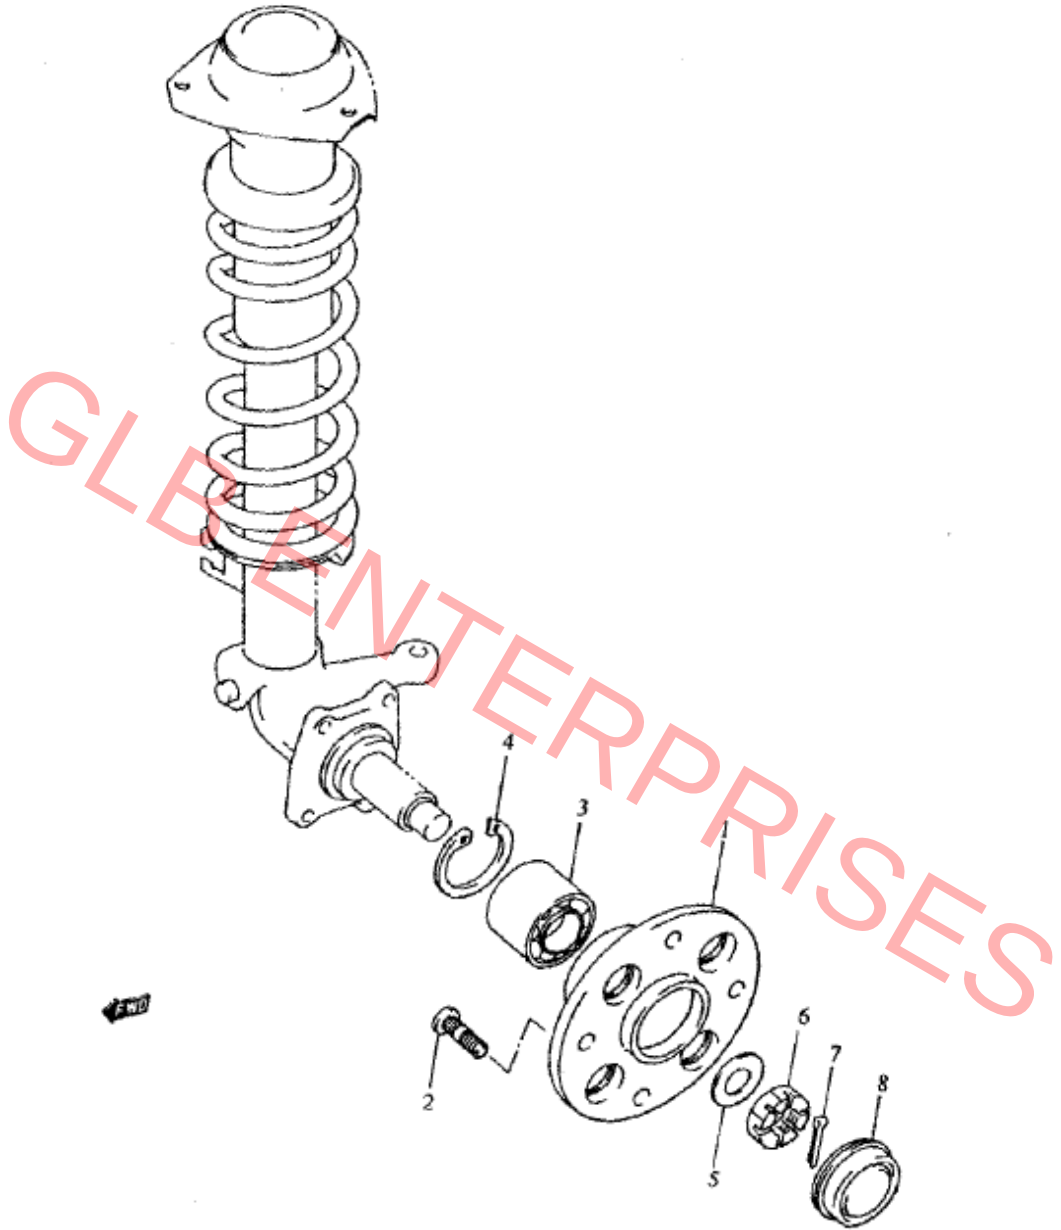


FIGURE 72 FRONT AXLE

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	FRONT HUB	HFJ3501318DA	2	
2	BOLT	HFJ3501319DA	8	
3	SPINDLE BEARING	HFJ3501321DA	2	USE WITH SPINDLE HFJ3001005CA LH & HFJ3001006CA RH (DISC BRAKE)
4	C-CLIP	HFJ3501322DA	2	
5	WASHER	Q40120	2	
6	CASTLE NUT	HFJ2901005DA	2	
7	SPLIT PIN	Q5004030	2	
8	DUST BOOT	HFJ2901023DA	2	



FIGURE 73 MASTER CYLINDER & RESERVOIR

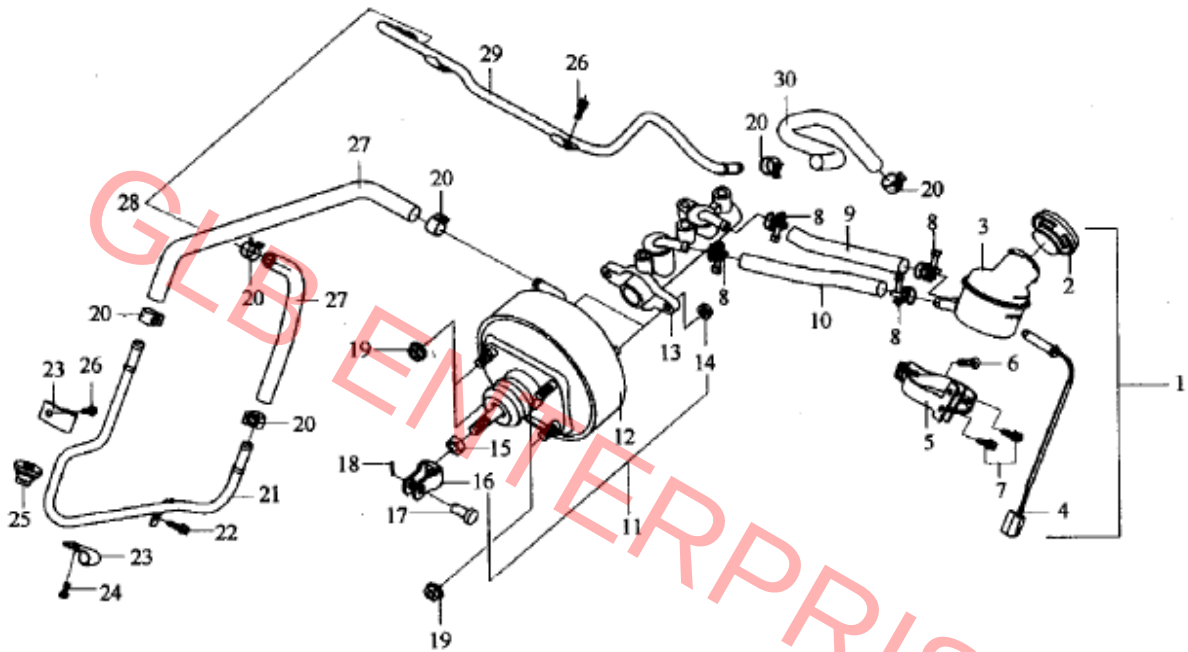


FIGURE 73 MASTER CYLINDER & RESERVOIR

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	BRAKE RESERVOIR ASM	HFJ3504010DA	1	
5	RESERVOIR BRACKET	HFJ3503020DA	1	
6	SCREW	Q214B0625-6G	1	
7	SCREW	Q214B0512-6G	2	
8	HOSE CLAMP	Q67216	4	
9	RESERVOIR HOSE	HFJ3504020CA	1	
10	RESERVOIR HOSE	HFJ3504009CA	1	
11	MASTER CYLINDER W/BOOSTER	HFJ3505000CA	1	TYPE I
		HFJ3505000DA	1	TYPE X
12	BRAKE BOOSTER	HFJ3501000CA	1	
13	MASTER CYLINDER	HFJ3505010CA	1	TYPE I
		HFJ3505010DA	1	TYPE X
14	NUT	HFJ3505011CA	2	
15	LOCK NUT	HFJ3510002CA	1	
16	CLEVIS	HFJ3510001CA	1	
17	SHAFT	Q/2A-CJ-464 10X21	1	
18	SPLIT PIN	Q5002520	1	
19	FLANGE NUT	Q/2A-CJ-438 M8	4	
20	HOSE CLAMP	Q/2A-CJ-336B-15.5	6	
21	NO.1 VACUUM PIPE 1ST	HFJ3506090CA	1	HFJ6371
		HFJ3506090DA	1	HFJ6376
		HFJ3506090DB	1	
22	SCREW	Q2710616	1	
23	CLIP	HFJ3503070CA	2	
24	BOLT	Q/2A-CJ-28 M8X16	1	
25	VACUUM PIPE GROMMET	HFJ3503005CA	1	
26	BOLT	Q/2A-CJ -28 M6X14	2	
27	NO.1 VACUUM HOSE 1ST	HFJ3506005CA	1	HFJ6376
		HFJ3506005DA	1	
28	VACUUM HOSE 2ND	HFJ3506140CA	1	
29	VACUUM PIPE 2ND	HFJ3506110CA	1	
30	VACUUM HOSE 3RD	HFJ3506006DB	1	DELPHI EGI

FIGURE 74 MASTER CYLINDER & RESERVOIR (UAES-BOSCH) EGI

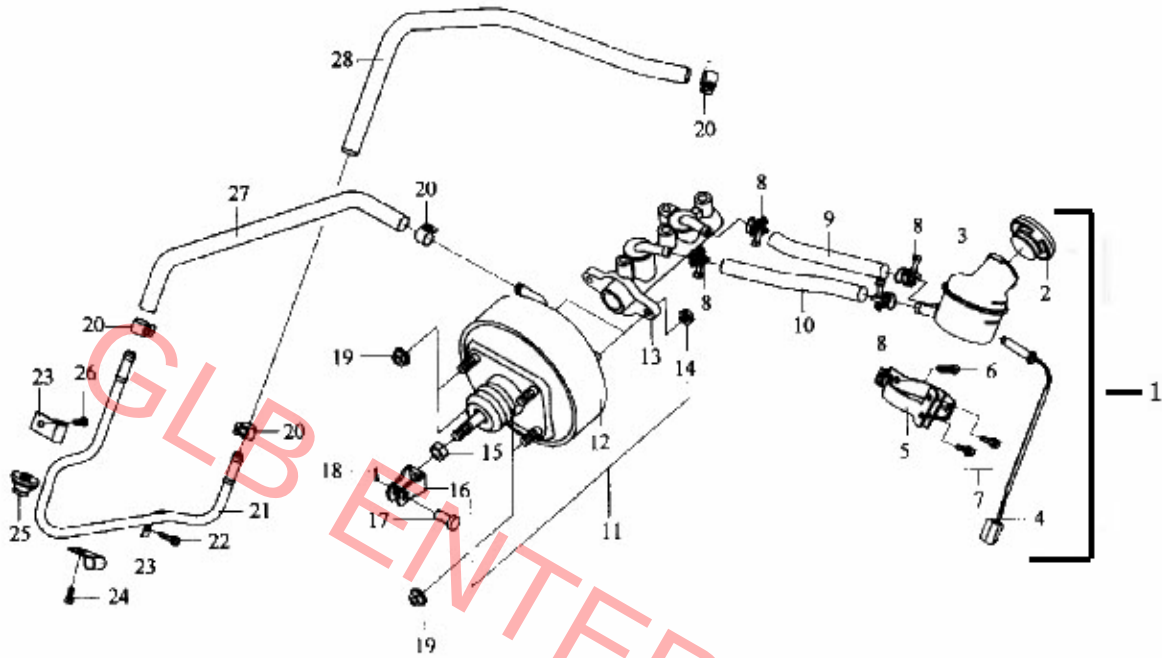


FIGURE 74 MASTER CYLINDER & RESERVOIR (UAES-BOSCH) EGI

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	RESERVOIR ASM	HFJ3504010DA	1	
5	RESERVOIR BRAKET	HFJ3503020DA	1	
6	SCREW	Q214B0625-6G	1	
7	SCREW	Q214B0512-6G	2	
8	CLAMP	Q67216	4	
9	RESERVOIR HOSE	HFJ3504020CA	1	
10	RESERVOIR HOSE	HFJ3504009CA	1	
11	MASTER CYLINDER W/ BOOSTER	HFJ3505000CA		TYPE I
		HFJ3505000DA		TYPE X
12	BOOSTER ASM	HFJ3501000CA	1	
13	MASTER CYLINDER	HFJ3505010CA		TYPE I
		HFJ3505010DA		TYPE X
14	NUT	HFJ3505011CA	2	
15	LOCK NUT	HFJ3510002CA	1	
16	CLEVIS	HFJ351001CA	1	
17	SHAFT	Q/2A-CJ-4645 10X21	1	
18	SPLIT PIN	Q5002520	1	
19	NUT	Q/2A-CJ-438 M8	4	
20	CLAMP	Q/2A-CJ-366B-15.5	4	
21	VACUUM PIPE NO.1	HFJ3506090CA	1	
		HFJ3506090DA	1	HFJ6371
		HFJ3506090DB	1	HFJ6376
22	SCREW	Q2710616	1	
23	VACUUM HOSE CLIP	HFJ3503070CA	2	
24	BOLT	Q/2A-CJ-28 N8X16	1	
25	VACUUM PIP GROMMENT	HFJ3503005CA	1	
26	BOLT	Q/2A-CJ-28 M6X14	1	
27	VACUUM HOSE 1ST	HFJ3506005CA	1	
		HFJ3506005DA	1	HFJ6376
28	VACUUM HOSE 2ND	HFJ3506140DD	1	

FIGURE 75 MASTER CYLINDER & RESERVOIR

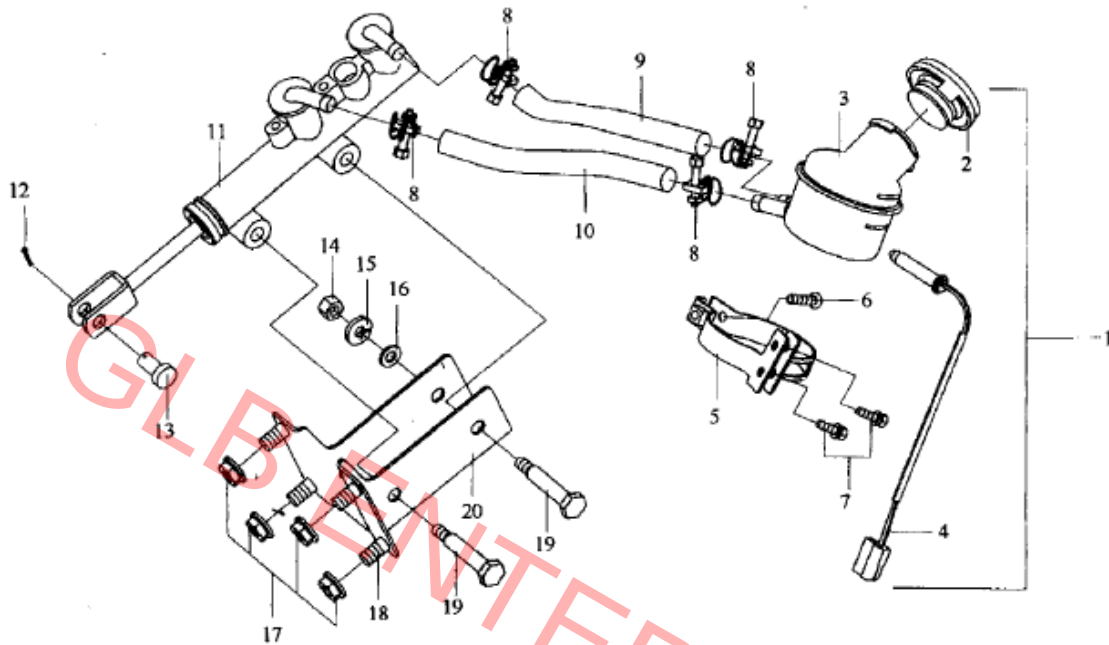


FIGURE 75 MASTER CYLINDER & RESERVOIR

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	RESERVOIR ASM	HFJ3504010DA	1	
5	RESERVOIR BRACKET	HFJ3503020DA	1	
6	SCREW	Q214B0625-6G	1	
7	SCREW	Q214B0512-6G	2	
8	CLAMP	Q67216	4	
9	RESERVOIR HOSE	HFJ3504006FA	1	
11	MASTER CYLINDER	HFJ3505000FA	1	TYPE I
		HFJ3505000FB	1	TYPE X
12	SPLIT PIN	Q5002516	1	
13	CLEVIS	Q/2A-CJ-464 8X17	1	
14	NUT	Q341C10	2	
15	WASHER	Q40310	2	
16	BUSH	HFJ3504021FA	2	
17	NUT	Q/2A-CJ-438 M8	4	
18	BOLT	Q/2A-CJ-448 M8X18	4	
19	BOLT	Q151C1065-6G	2	
20	MOUNTING BRACKET	HFJ3504022FA	1	

GLB ENTERPRISES

FIGURE 76 BRAKE PIPE (X-TYPE, DISC & DRUM)

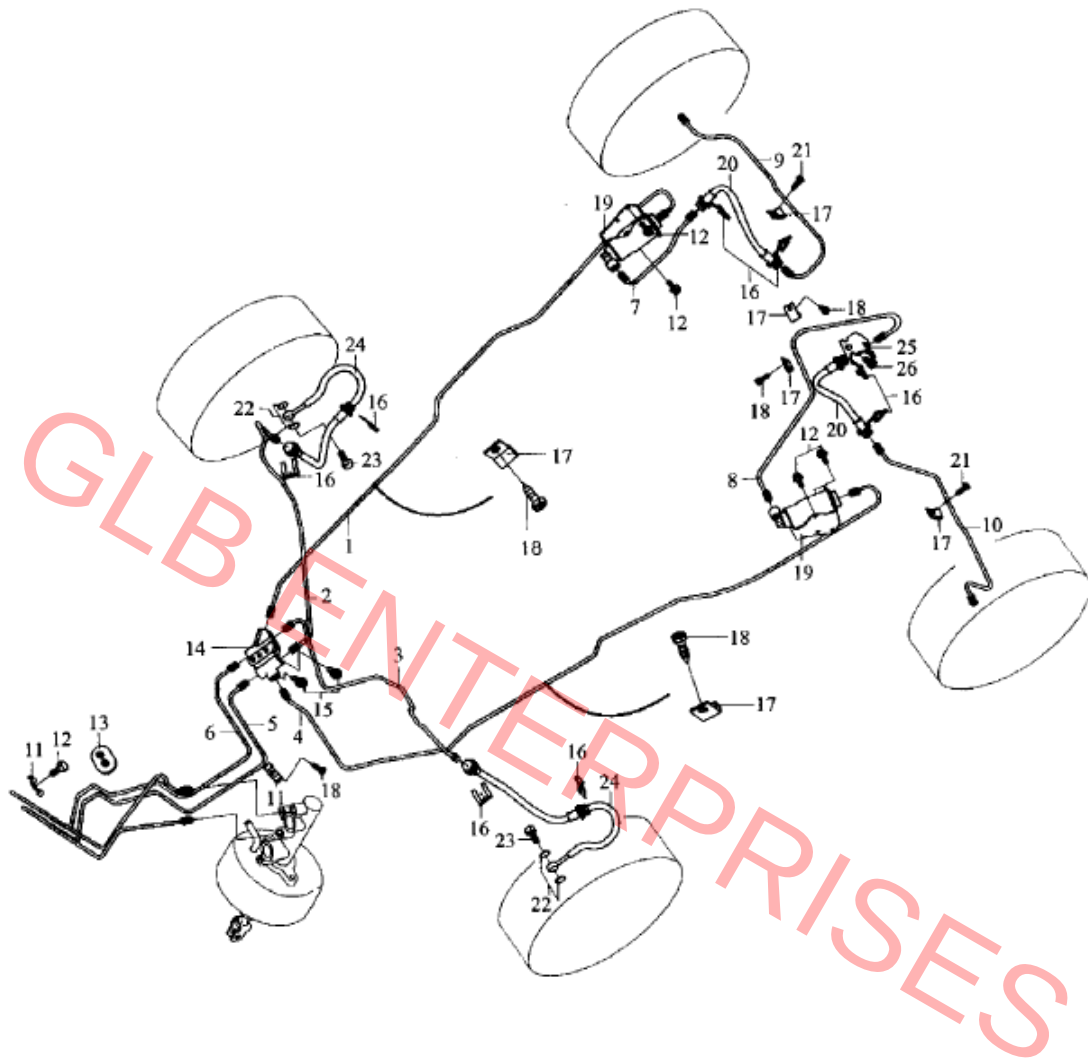


FIGURE 76 BRAKE PIPE (X-TYPE, DISC & DRUM)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1*	BRAKE PIPE NO.6	HFJ3506010DH	1	
2*	BRAKE PIPE NO.2	HFJ3506040CA	1	
3*	BRAKE PIPE NO.3	HFJ3506050DA	1	
4*	BRAKE PIPE NO.6	HFJ3506010DG	1	
5*	BRAKE PIPE NO.1	HFJ3506020CA	1	HFJ6371, HFJ6376
		HFJ3506020DA	1	HFJ6371, HFJ6377
6*	BRAKE PIPE NO.12	HFJ3506080CA	1	HFJ6371, HFJ6378
		HFJ3506080DA	1	HFJ6371, HFJ6379
7*	BRAKE PIPE NO.5	HFJ3506030CA	1	
8*	BRAKE PIPE NO.5	HFJ3506030DC	1	
9*	BRAKE PIPE NO.7	HFJ3506060CA	1	
10	BRAKE PIPE NO.8	HFJ3506070DA	1	
11	CLIP	Q/2A-CJ-426	1	
12	BOLT	Q/2A-CJ-28 M6X14	1	
13	BRAKE PIPE GROMMET	HFJ3503030DA	1	
	6 WAY BRAKE CROSS			
14*	JOINT	HFJ3503030DA	1	
15	BOLT	Q/2A-CJ-28 M6X30	2	
16	C-CLIP	Q/2A-CJ-425	8	
17	CLIP	HFJ3503040CA	18	
18	SCREW	Q2710616	16	
19*	G.P. VALVE ASM	HFJ3523000CA	2	
	REAR BRAKE FLEX			
20*	HOSE	HFJ3506130CA	2	
21	SCREW	Q/2A-CJ-47A ST6.3X13	2	
22	COPPER GASKET	Q/2A-CJ-475-10	4	
23	BOLT	Q/2A-CJ-451	2	
24*	FRONT BRAKE FLEX	HFJ3506120CA	2	DISC BRAKE
		HFJ3506110FA		DRUM BRAKE
25	BRAKE HOSE BRACKET	HFJ3503009DA	1	
26	BOLT	Q/2A-CJ-30 M8X20X8.8	1	

* NOTE- X TYPE AVAILABLE SINCE OCT, 2003

FIGURE 77 BRAKE PIPE (TYPE II, FRONT DISC & REAR DRUM)

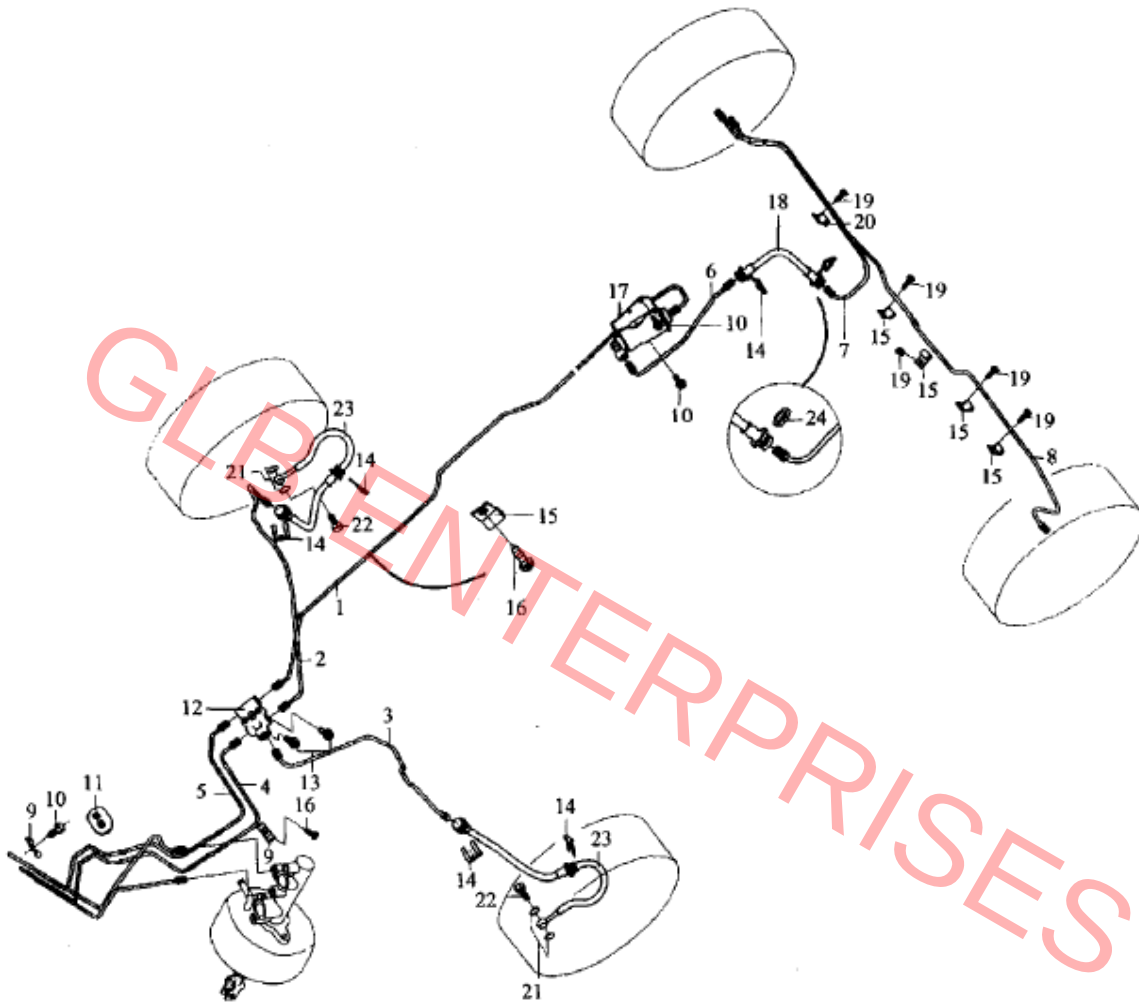


FIGURE 77 BRAKE PIPE (TYPE II, FRONT DISC & REAR DRUM)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	BRAKE PIPE NO.6	HFJ3506010CA	1	HFJ6371
		HFJ3506010DC	1	
2	BRAKE PIPE NO.2	HFJ3506040CA	1	
3	BRAKE PIPE NO.3	HFJ3506050CA	1	
4	BRAKE PIPE NO.1	HFJ3506020CA	1	
5	BRAKE PIPE NO.12	HFJ3506080CA	1	
6	BRAKE PIPE NO.5	HFJ3506030CA	1	
7	BRAKE PIPE NO.7	HFJ3506060CA	1	*1
		HFJ3506080DC	1	*2
		HFJ3506080FA	1	*2
8	BRAKE PIPE NO.8	HFJ3506070CA	1	*1
		HFJ3506090FA	1	*2
9	Q/2A-CJ-426	CLIP	2	
10	Q/2A-CJ-28 M6X14	BOLT	3	
11	BRAKE PIPE GROMMET	HFJ3503007DA	1	
12	5 WAY BRAKE CROSS JOINT	HFJ3503030CA	1	
13	BOLT	Q/2A-CJ-28 M6X25	2	
14	RING	Q/2A-CJ-425	6	*3
		Q/2A-CJ-426	5	
15	CLIP	HFJ3503040CA	12	
16	SCREW	Q2710616	8	
17	G.P. VALVE	HFJ3523000CA	1	
18	REAR BRAKE HOSE	HFJ3506130CA	2	*1
		HFJ3506120DC	2	*2
		HFJ3506130FA	2	*3, DISC TYPE
19	SCREW	Q/2A-CJ-47A-ST6.3X13	5	
20	CLIP	HFJ3503050CA	1	
21	COPPER GASKET	Q/2A-CJ-475-10	4	
22	BOLT CONNECTOR	Q/2A-CJ-451	2	
23	FRONT BRAKE HOSE	HFJ3506120CA	2	
24	NUT	Q351B16	1	*3

***NOTE:**

- *1 ARE USED FOR THE CARS INSTALLING THE REAR AXLE OF HFJ6351B
- *2 ARE USED FOR OTHERS UP TO JUNE 2002
- *3 ARE USED FOR THE CARS INSTALL THE STRONG REAR AXLE

FIGURE 78 BRAKE PIPE (TYPE II, DOUBLE DRUM BRAKE)

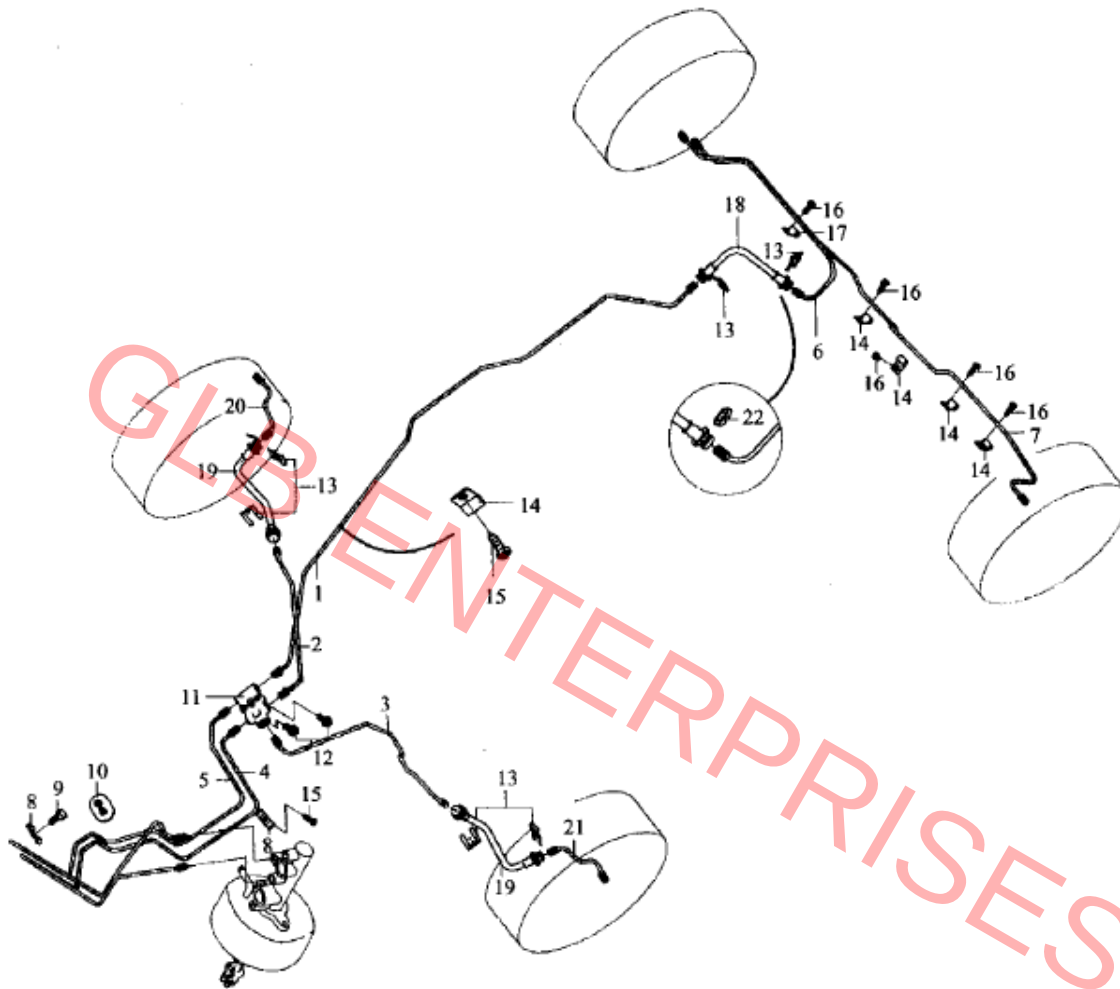


FIGURE 78 BRAKE PIPE (TYPE II, DOUBLE DRUM BRAKE)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	BRAKE PIPE NO.6	HFJ3506030FA	1	HFJ6371
		HFJ3506010DD	1	
2	BRAKE PIPE NO.2	HFJ3506040CA	1	
3	BRAKE PIPE NO.3	HFJ3506050CA	1	
4	BRAKE PIPE NO.1	HFJ3506020CA	1	
5	BRAKE PIPE NO.12	HFJ3506080CA	1	
6	BRAKE PIPE NO.7	HFJ3506060CA	1	*1
		HFJ3506080DC	1	*2
		HFJ3506080FA	1	*2
7	BRAKE PIPE NO.8	HFJ3506070CA	1	*1
		HFJ3506090FA	1	*2
8	Q/2A-CJ-426	CLIP	2	
9	Q/2A-CJ-28 M6X14	BOLT	1	
10	BRAKE PIPE GROMMET	HFJ3503007DA	1	
	6 WAY BRAKE CROSS			
11	JOINT	HFJ3503030CA	1	
12	BOLT	Q/2Q-CJ-28 M6X25	2	
13	RING	Q/2A-CJ-425	6	
			5	*3
14	CLIP	HFJ3503040CA	12	
15	SCREW	Q2710616	9	
16	SCREW	Q/2A-CJ-47A-ST6.3X13	5	
17	CLIP	HFJ3503050CA	1	
18	REAR BRAKE HOSE	HFJ3506130CA	2	*1
		HFJ3506120DC	2	*2
		HFJ3506120FA	2	*2
19	FRONT BRAKE HOSE #1	HFJ3506110FA	2	
	FRONT BRAKE HOSE #2			
20	RH	HFJ3506070FA	1	
	FRONT BRAKE HOSE #2			
21	RH	HFJ3506060FA	1	
22	NUT	Q351B16	1	*3

***NOTE:**

- *1 ARE USED FOR THE CARS INSTALLING THE REAR AXLE OF HFJ6351B
- *2 ARE USED FOR OTHERS UP TO JUNE 2002
- *3 ARE USND FOR THE CARS INSTALL THE STRONG REAR AXLE

FIGURE 79 BRAKE PIPE (TYPE X, DOUBLE DRUM BRAKE)

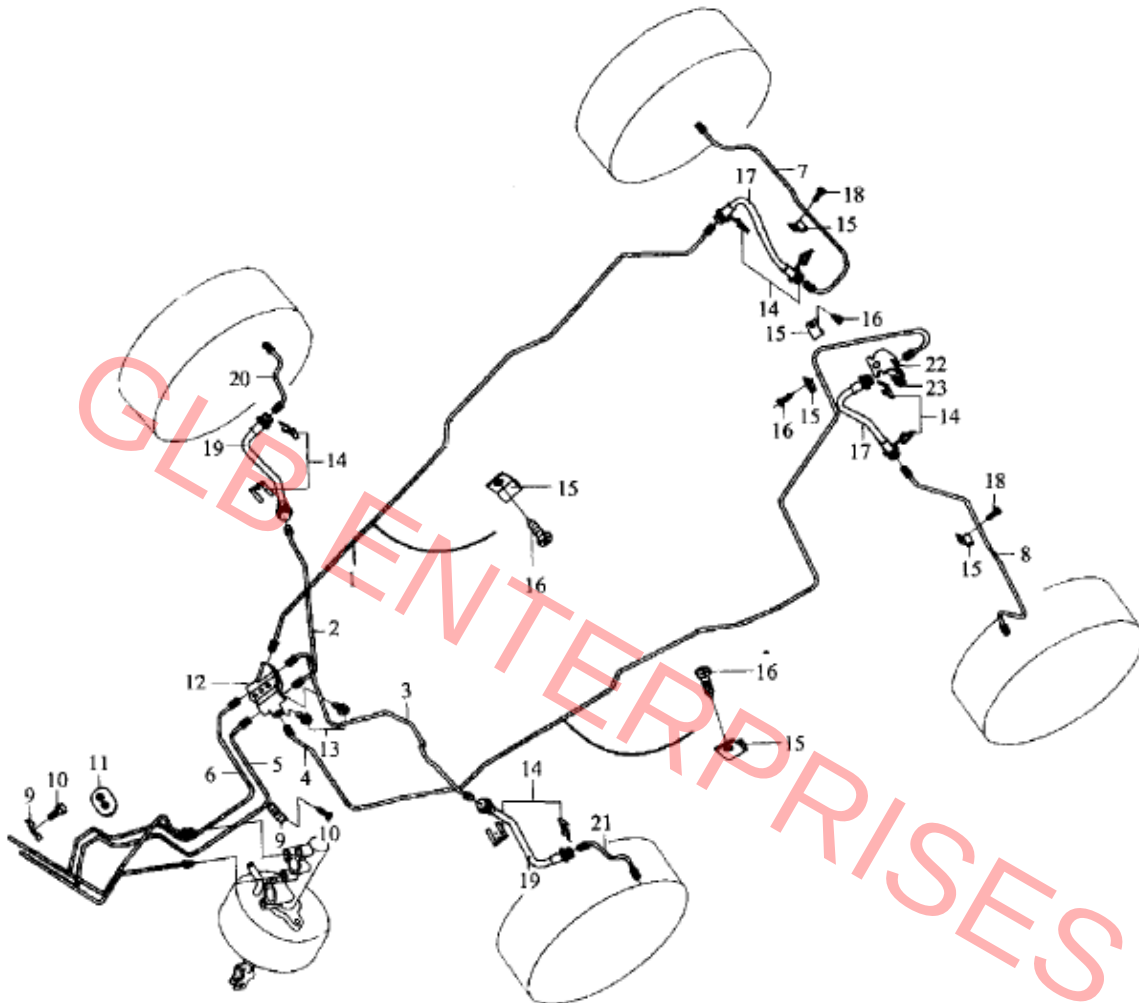


FIGURE 78 BRAKE PIPE (TYPE X, DOUBLE DRUM BRAKE)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	BRAKE PIPE NO.6	HFJ3506010DK	1	
2	BRAKE PIPE NO.2	HFJ3506040CA	1	
3	BRAKE PIPE NO.3	HFJ3506050DA	1	
4	BRAKE PIPE NO.6	HFJ3506010DJ	1	
5	BRAKE PIPE NO.1	HFJ3506020CA	1	HFJ6371
		HFJ3506020CDA	1	HFJ6376
6	BRAKE PIPE NO.12	HFJ3506080CA	1	HFJ6371
		HFJ3506080DA	1	HFJ6376
7	BRAKE PIPE NO.7	HFJ3506060CA	1	
8	BRAKE PIPE NO.8	HFJ3506070DA	1	
9	CLIP	Q/2A-CJ-426	2	
10	BOLT	Q/2A-CJ-28 M6X14	1	
11	BRAKE PIPE GROMMET	HFJ3503007DA	1	
	6 WAY BRAKE CROSS			
12	JOINT	HFJ3503030DA	1	
13	BOLT	Q/2A-CJ-28 M6X30	2	
14	CLIP	Q/2A-CJ-425	8	
15	CLIP	HFJ3503040CA	18	
16	SCREW	Q2710616	16	
17	REAR BRAKE HOSE	HFJ3506130CA	2	
18	SCREW	Q/2A-CJ-47A-ST6.3 3X13	2	
19	FRONT BRAKE HOSE	HFJ3506110FA	2	
20	BRAKE PIPE	HFJ3506070FA	1	
21	BRAEK PIPE	HFJ3506060FA	1	
22	BOLT	Q/2A-CJ-30 M8X20-8.8	1	

*NOTE:
"X" TYPE AVAILABLE SINCE OCTOBER 1, 2003

FIGURE 80 BRAKE PIPE (TYPE II, DOUBLE DRUM BRAKE)

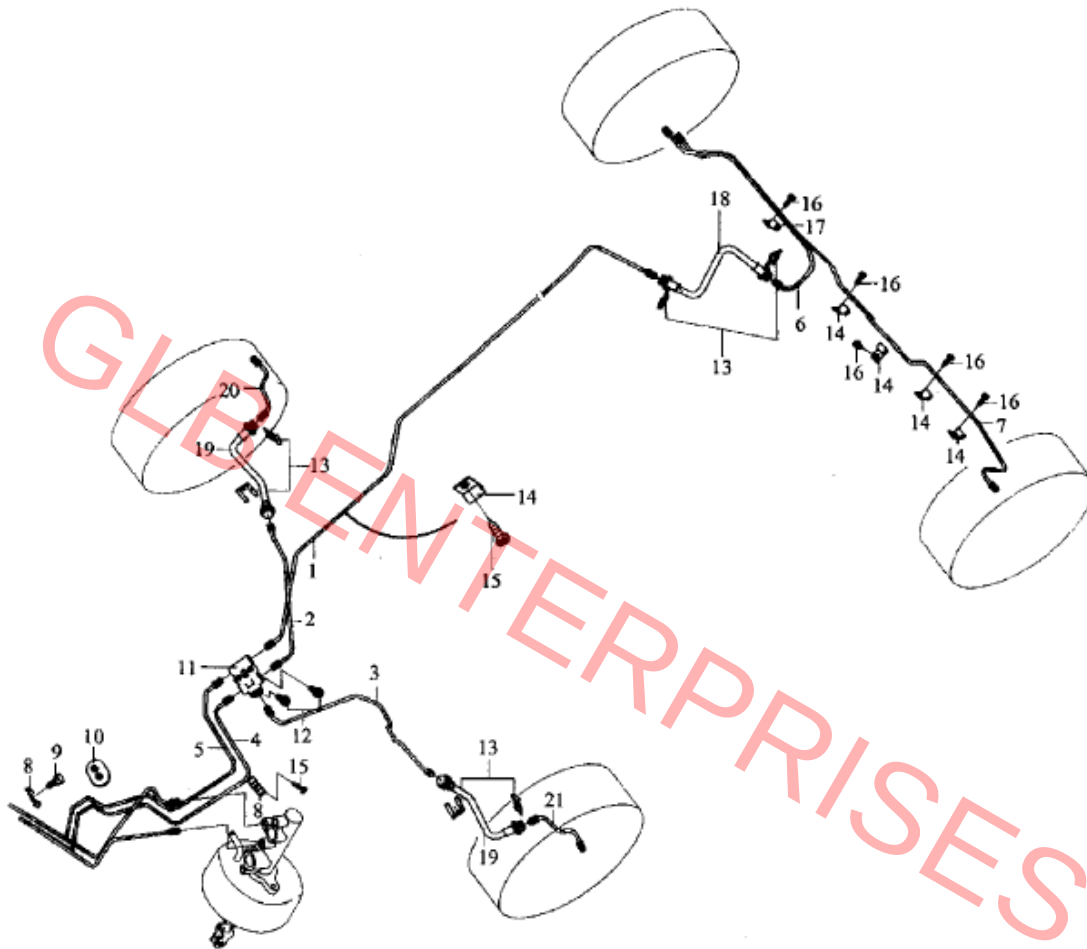


FIGURE 80 BRAKE PIPE (TYPE II, DOUBLE DRUM BRAKE)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	BRAKE PIPE NO.6	HFJ3506010DB	1	HFJ1011G
		HFJ3506010DG	1	HFJ1011H
2	BRAKE PIPE NO.2	HFJ3506040CA	1	
3	BRAKE PIPE NO.3	HFJ3506050CA	1	
4	BRAKE PIPE NO.1	HFJ3506020CA	1	
5	BRAKE PIPE NO.12	HFJ3509080CA	1	
6	BRAKE PIPE NO.7	HFJ3506060CA	1	
7	BRAKE PIPE NO.8	HFJ3506070CA	1	
8	CLIP	Q/2A-CJ-426	2	
9	BOLT	Q/2A-CJ-28 M6X14	1	
10	BRAKE PIPE GROMMENT	HFJ3503007DA	1	
11	5 WAY BRAKE CROSS JOINT	HFJ3503030CA	1	
12	BOLT	Q/2A-CJ-28 M16X25	2	
13	CLIP	Q/2A-CJ-425	6	
14	CLIP	HFJ3503040CA	10	
15	SCREW	Q2710616	7	
16	SCREW	Q/2A-CJ-47A-ST6.3 3X13	5	
17	CLIP	HFJ3503050CA	1	
18	REAR BRAKE HOSE	HFJ3506120FA	2	
19	FRONT BRAKE HOSE	HFJ3506110FA	2	
20	BRAKE PIPE	HFJ3506070FA	1	
21	BRAKE PIPE	HFJ3506060FA	1	

FIGURE 81 BRAKE PIPE (TYPE II, FRONT DISC & DRUM BRAKE)

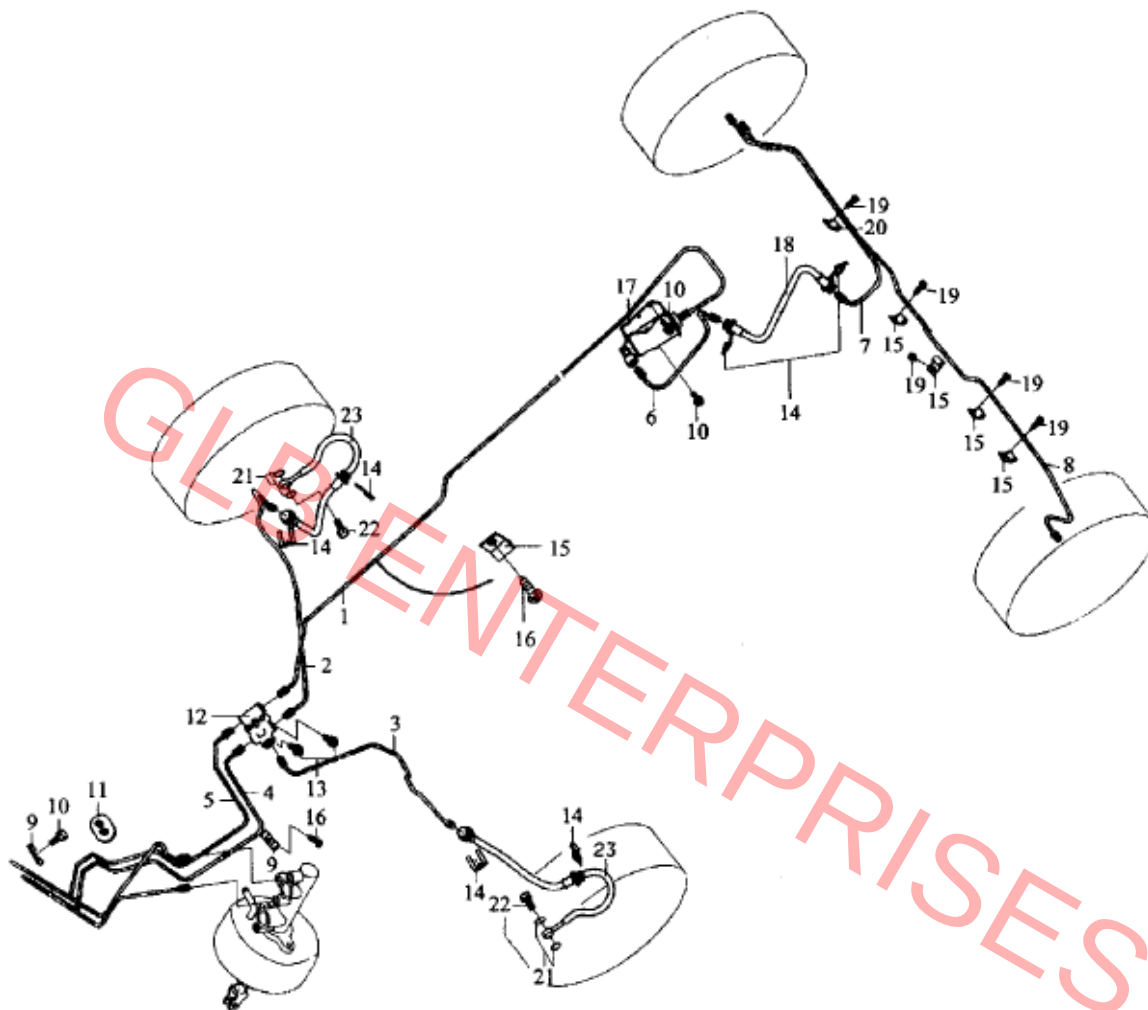


FIGURE 81 BRAKE PIPE (TYPE II, FRONT DISC & DRUM BRAKE)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	BRAKE PIPE NO.6	HFJ3506010DA	1	HFJ1011G
		HFJ3506010DE	1	HFJ1011H
2	BRAKE PIPE NO.2	HFJ3506040CA	1	
3	BRAKE PIPE NO.3	HFJ3506050CA	1	
4	BRAKE PIPE NO.1	HFJ3506020CA	1	
5	BRAKE PIPE NO.12	HFJ3509080CA	1	
6	BRAKE PIPE NO.5	HFJ3506030DA	1	
7	BRAKE PIPE NO.7	HFJ3506060CA	1	
8	BRAKE PIPE NO.8	HFJ3506070CA	1	
9	CLIP	Q/2A-CJ-426	2	
10	BOLT	Q/2A-CJ-28 M6X14	1	
11	BRAKE PIPE GROMMENT	HFJ3503007DA	1	
12	5 WAY BRAKE CROSS JOINT	HFJ3503030CA	1	
13	BOLT	Q/2A-CJ-28 M16X25	2	
14	CLIP	Q/2A-CJ-425	6	
15	CLIP	HFJ3503040CA	10	
16	SCREW	Q2710616	7	
17	PROPORTIONING VALVE	HFJ3523000CA	1	
18	REAR BRAKE HOSE	HFJ3506120FA	2	
19	SCREW	Q/2A-CJ-47A-ST6.3 3X13	5	
20	CLIP	HFJ3503050CA	1	
21	COPPER GASKET	Q/2A-CJ-475-10	4	
22	BOLT	Q/2A-CJ-451	2	
23	FRONT BRAKE HOSE	HFJ3506120CA	2	

FIGURE 82 BRAKE, ACCELERATOR & CLUTCH PEDAL

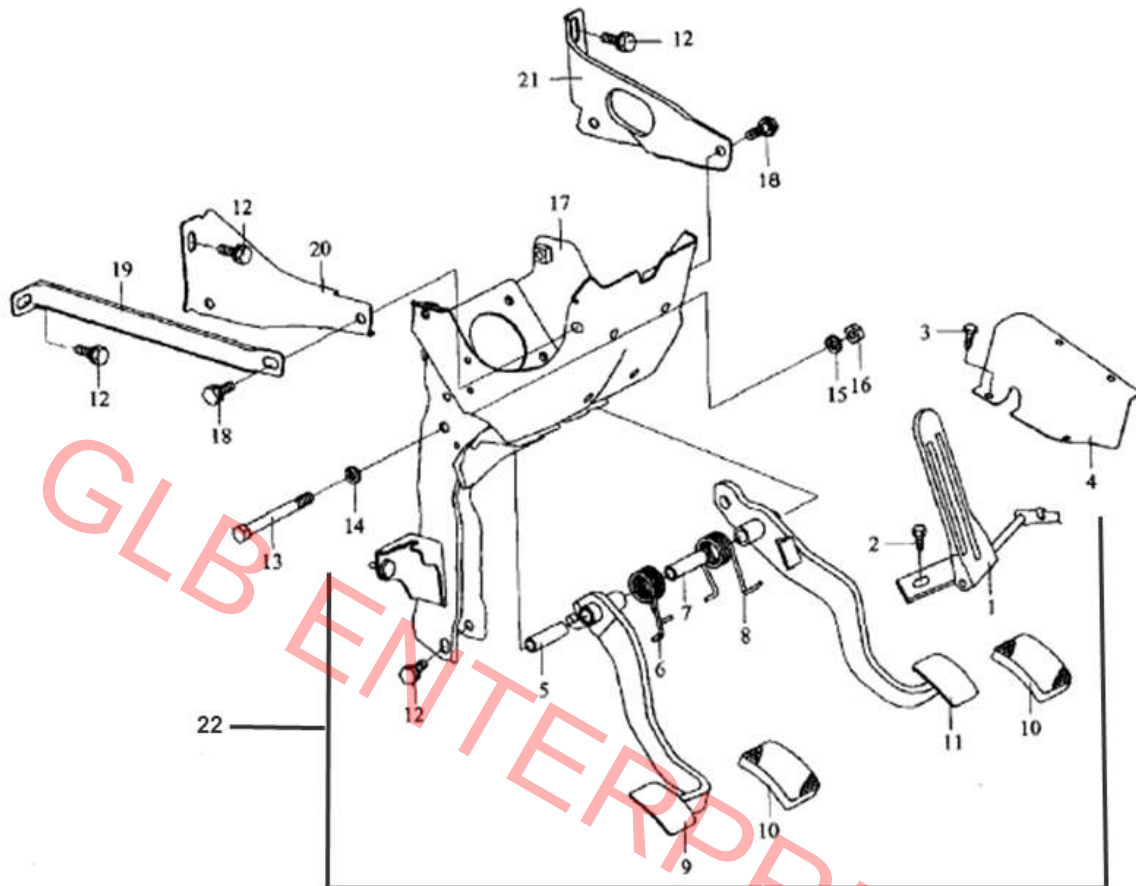


FIGURE 82 BRAKE, ACCELERATOR & CLUTCH PEDAL

NO	DESCRIPTION	PART NO.	ALL	NOTE
	ACCELERATOR PEDAL			
1	ASM	HFJ1108200CA	1	
2	BOLT	Q/2A-CJ-36 M6X16	2	
3	SCREW	Q/2A-CJ-104-4.8X10	4	
4	GUARD PLATE LH	HFJ1108005CA	1	
5	BUSHING	Q/2A-CJ-466	1	
	CLUTCH PEDAL RETURN			
6	SPRING	Q/2A-CJ-432	1	
7	BUSHING	HFJ3504007CA	1	
	BRAKE PEDAL RETURN			
8	SPRING	HFJ3504011CA	1	
9	CLUTCH PEDAL ASM	HFJ1602020CA	1	5MT
		HFJ1602020FA	1	4MT
10	PEDAL PAD	HFJ3504008FA	2	3504046-01
11	BRAKE PEDAL ASM	HFJ3504030CA	1	
		HFJ3504030FA	1	WITHOUT BOOSTER
12	BOLT	Q/2A-CJ-30 M8X20-8.8	6	
13	PEDAL SHAFT	HFJ3504005CA	1	
14	WASHER	Q/2AJ22-10X18X2	1	
15	WASHER	Q40110	1	
16	NUT	Q341C10	1	
17	BRAKE PEDAL ASM	HFJ3504020CA	1	INCLUDES ITEMS 9-11 ALSO
18	BOLT	Q/2A-CJ-30 M8X16-8.8	4	
19	SUPPORT BRACKET LH	HFJ3504005DA	1	
20	SUPPORT BRACKET RH	HFJ3504060CA	1	
21	BRACKET ASM RH	HFJ3504070CA	1	
22	CLUTCH & BRAKE BRACKET ASM	HFJ3504020DA	1	

FIGURE 83 PARKING BRAKE

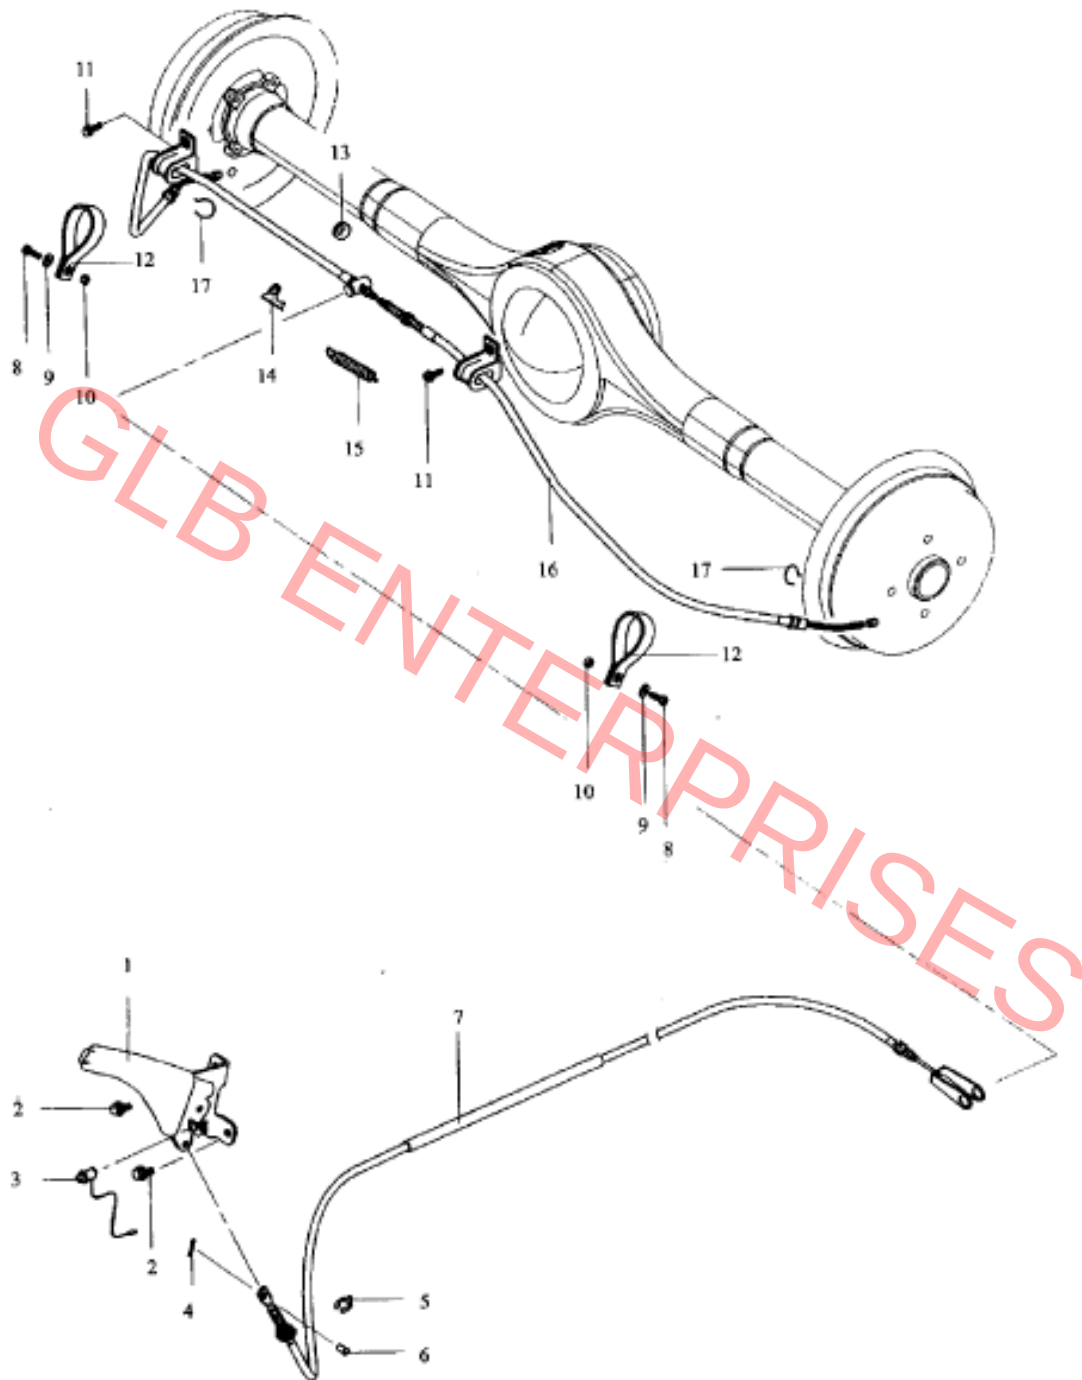


FIGURE 83 PARKING BRAKE

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	PARKING BRAKE LEVER	HFJ3508100DA	1	
2	BOLT	Q/2A-CJ-31 M8X20-8.8	2	
3	PARKING BRAKE LAMP SWITCH	HFJ3720100CA	1	
4	SPLIT PIN	HFJ3718110CA	1	
5	CLIP	Q/2A-CJ-470	1	
6	PIN	HFJ3508006CA	1	
7	BRKING BRAKE CABLE NO.1	HFJ3508200CA	1	
		HFJ3508200DA	1	HFJ1011H
8	BOLT	Q/2A-CJ-21 M6X25-8.8	2	
9	WASHER	Q40206	2	
10	NUT	Q340B06	2	
11	BOLT	Q/2A-CJ-36 M6X18	2	
12	TIE	HFJ3508005CA	2	
13	GROMMENT	HFJ3508007CA	1	
14	CABLE STOPPER	HFJ3508009CA	1	
15	RETURN SPRING	HFJ3508009CA	1	
16	PARKIGN BRAKE CABLE NO.2	HFJ3508300CA	1	HFJ1011G
		HFJ3508300FG	1	HFJ1011H, HFJ6351B
17	CLIP	Q/2A-CJ-421	2	HFJ6351B

FIGURE 84 STEERING RACK & PINION

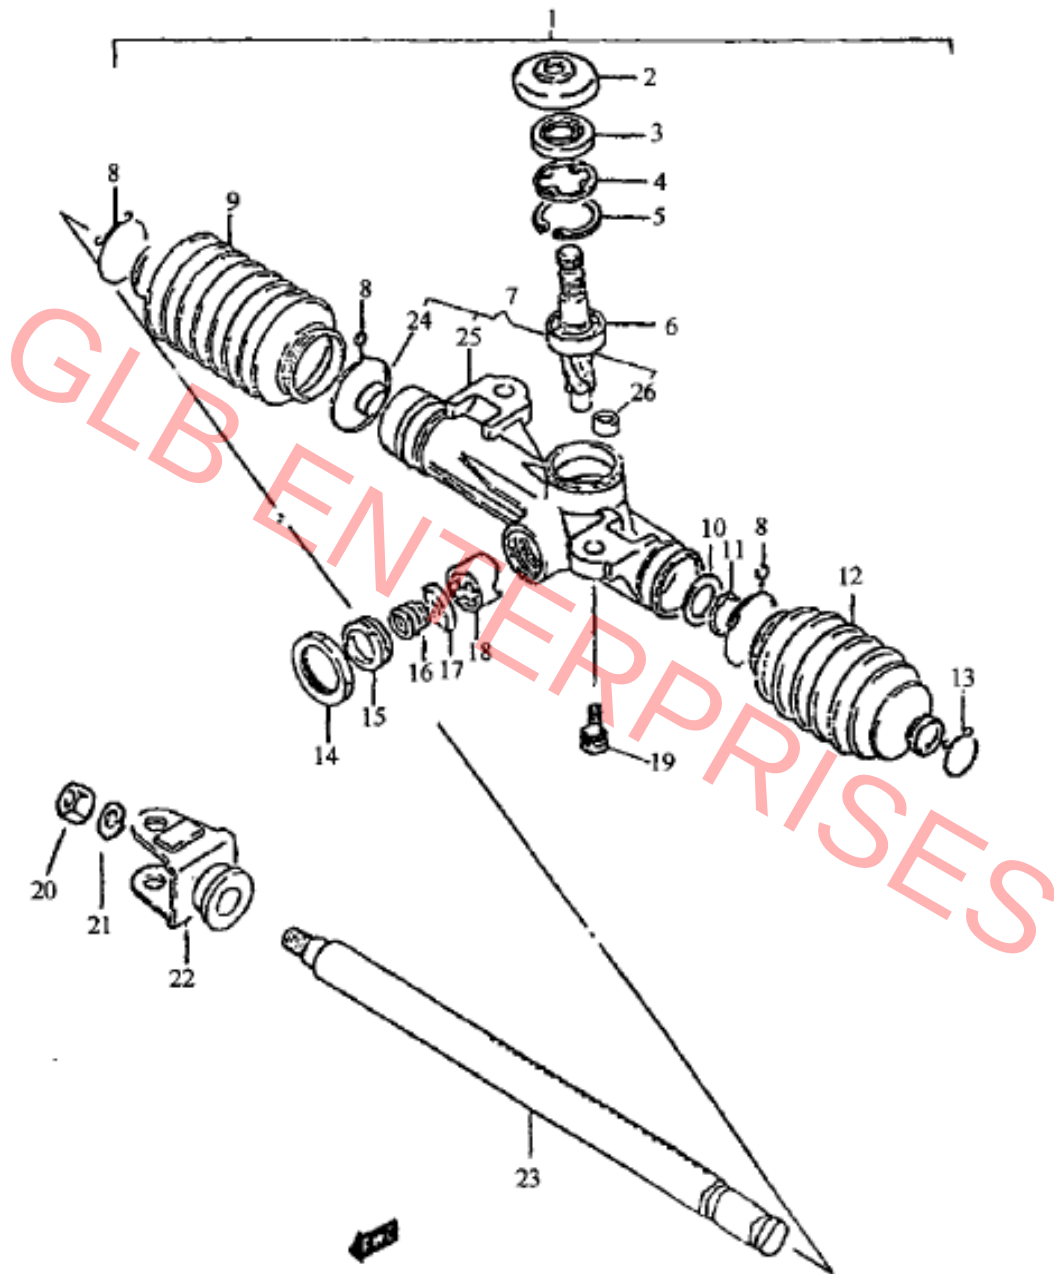


FIGURE 84 STEERING RACK & PINION

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	STEERING RACK	HFJ3401000CA	1	
9	DUST BOOT RH	HFJ3401018CA	1	HFJ3401B001CA
12	DUST BOOT LH	HFJ3401012CA	1	HFJ3401B002CA
20	NUT	HFJ3401027CA	1	
21	WASHER	HFJ3401028CA	1	
22	RACK YOKE	HFJ3401402CA	1	
23	STEERING TIE ROD	HFJ3401014CA	1	

GLB ENTERPRISES

FIGURE 85 STEERING SHAFT

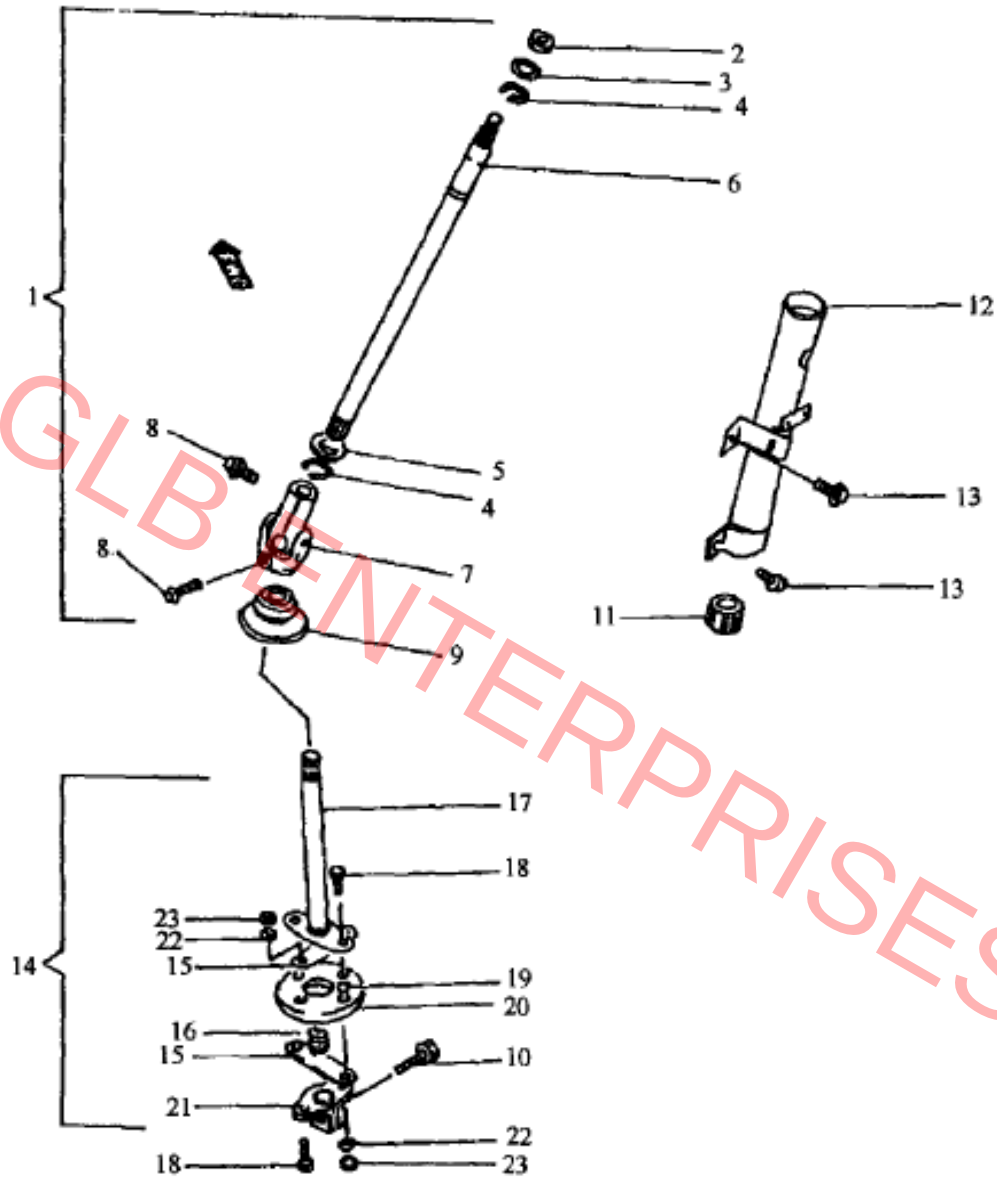


FIGURE 85 STEERING SHAFT

NO	DESCRIPTION	PART NO.	ALL	NOTE
UPPER STEERING				
1	SHAFT ASM	HFJ3404100DB	1	
9	DUST COVER	HFJ3404201CA	1	
11	BUSHING	HFJ3404170DA	1	
12	STEERING COLUMN	HFJ3404170DA	1	
LOWER STEERING				
14	SHAFT ASM	HFJ3404200CA	1	
15	PLATE	HFJ3404206CA	2	
16	SPRING	HFJ3404204CA	1	
19	STEERING GASKET	HFJ3404207CA		10103403051B
20	COUPLER	HFJ3404205CA	1	

GLB ENTERPRISES

Exploded view diagram of a vehicle suspension assembly, showing various components labeled with numbers 1 through 22. The diagram includes a steering knuckle assembly (1), a control arm (5), a ball joint (4), a shock absorber (17), and a lower control arm (15). A large red watermark 'GLB ENTERPRISES' is overlaid on the diagram.

FIGURE 86 STEERING SHAFT (AIR BAG)

NO	DESCRIPTION	PART NO.	ALL	NOTE
	UPPER STEERING			
1	SHAFT ASM	HFJ3404100DC	1	
8	DUST COVER	HFJ3404201CA	1	
9	BUSHING	HFJ3404170DA	1	
11	STEERING COLUMN	HFJ3404180DC	1	
	LOWER STEERING			
13	SHAFT ASM	HFJ3404200CA	1	
15	PLATE	HFJ3404206CA	2	
16	SPRING	HFJ3404204CA	1	
20	COUPLER	HFJ3404205CA	1	

GLB ENTERPRISES

FIGURE 87 FRONT STEERING

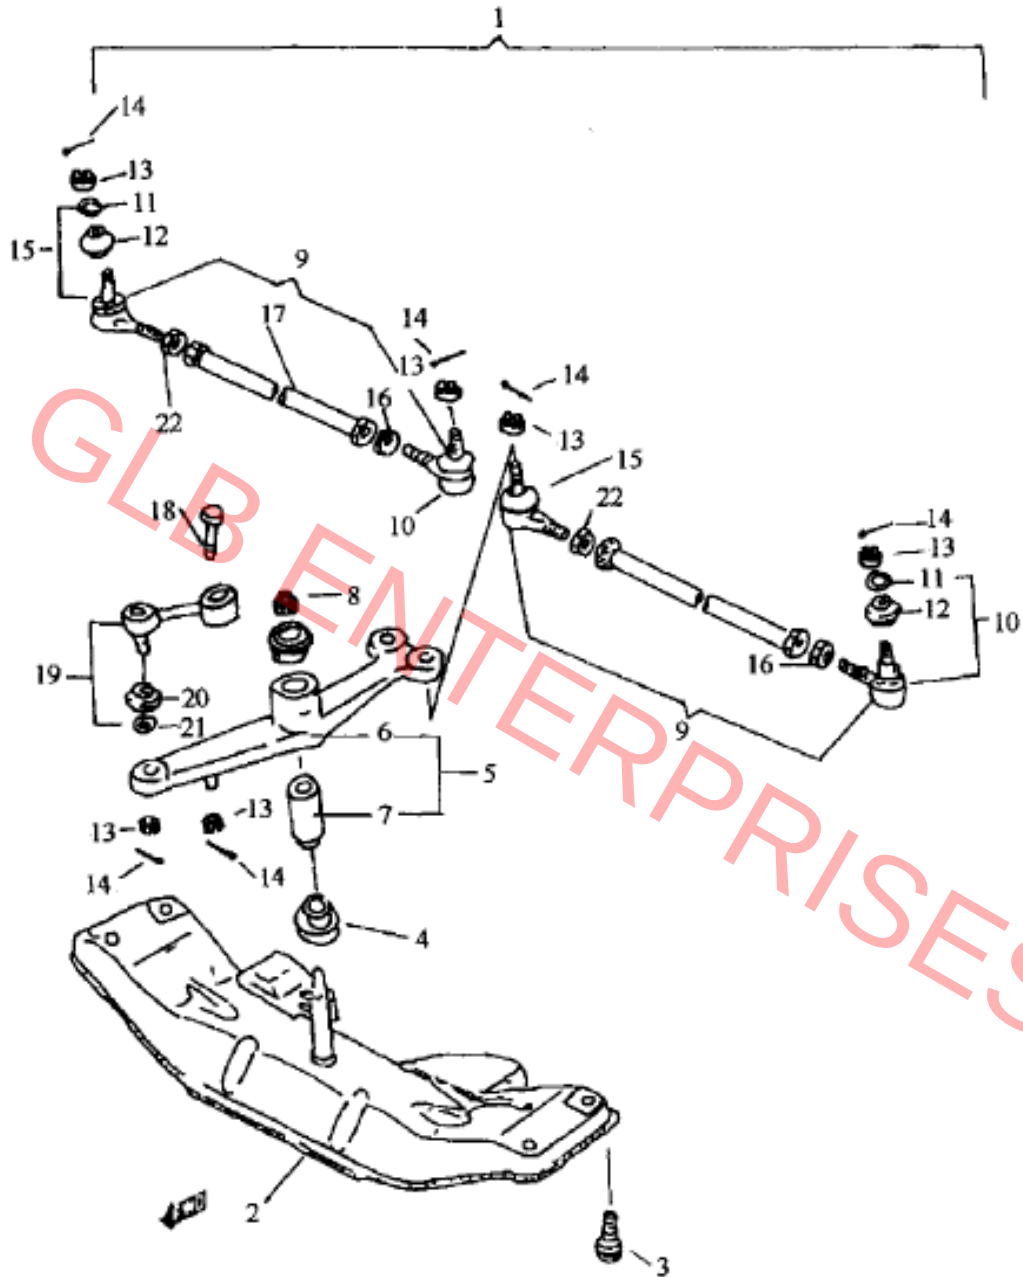


FIGURE 87 FRONT STEERING

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	FRONT AXLE ASM	HFJ3000000DC	1	
2	FRONT FRAME ASM	HFJ3001100DC	1	
3	BOLT	Q/2A-CJ-35-M10X1.25X28.8	4	
4	CENTER ARM BEARING (PITMAN)	HFJ3003130DA	2	
5	CENTER ARM ASM (PITMAN)	HFJ3003100CA	1	
6	CENTER ARM	HFJ3003101CA	1	
7	BUSHING	HFJ3003120DA	1	
8	NUT	Q/2A-CJ-156 M18X1.5	1	
9	TIE ROD ASM LH/RH	HFJ3003200CA	2	
10	TIE ROD LH	HFJ3003210CA	2	
11	SPRING LOCK	HFJ3003216CA	2	
12	DUST CAP	HFJ3003215CA	2	
13	NUT	Q387B12	6	
14	COTTER PIN	Q5003230	6	
15	TIE ROD RH	HFJ3003220CA	2	
16	NUT	Q341B14	2	
17	TIE ROD	HFJ3003201CA	2	
18	BOLT	Q/2A-CJ-444 M12X1.25X49	1	
19	DRAG LINK ASM	HFJ3003300CA	1	
20	DUST CAP	HFJ3003215CA	1	
21	SPRING LOCK	HFJ3003216CA	1	
22	NUT	Q341B14	2	

FIGURE 88 STEERING WHEEL

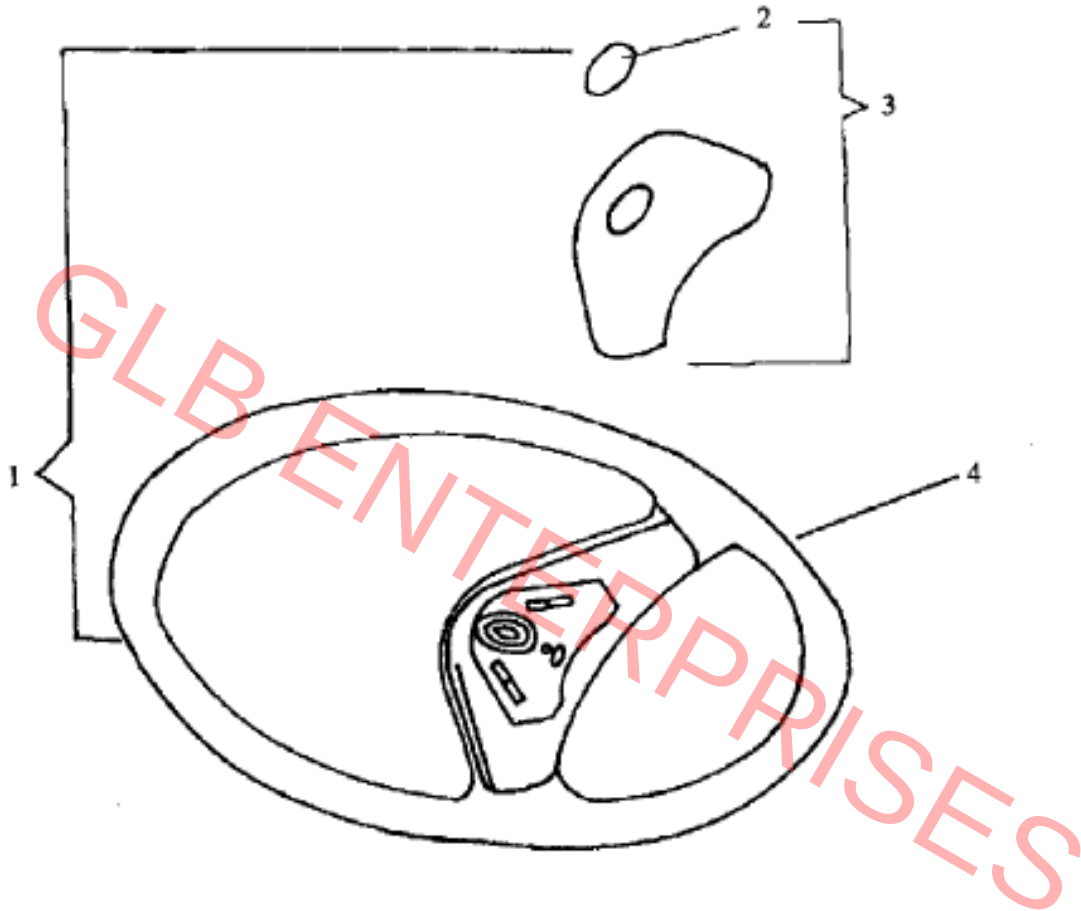


FIGURE 88 STEERING WHEEL

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	STEERING WHEEL ASM	HFJ3402000DA	1	
2	COVER BRAND	HFJ3402011DA	1	
3	STEERING WHEEL COVER	HFJ3402010DA	1	
4	STEERING WHEEL	HFJ3402020DA	1	

GLB ENTERPRISES

FIGURE 89 STEERING WHEEL (AIR BAG)

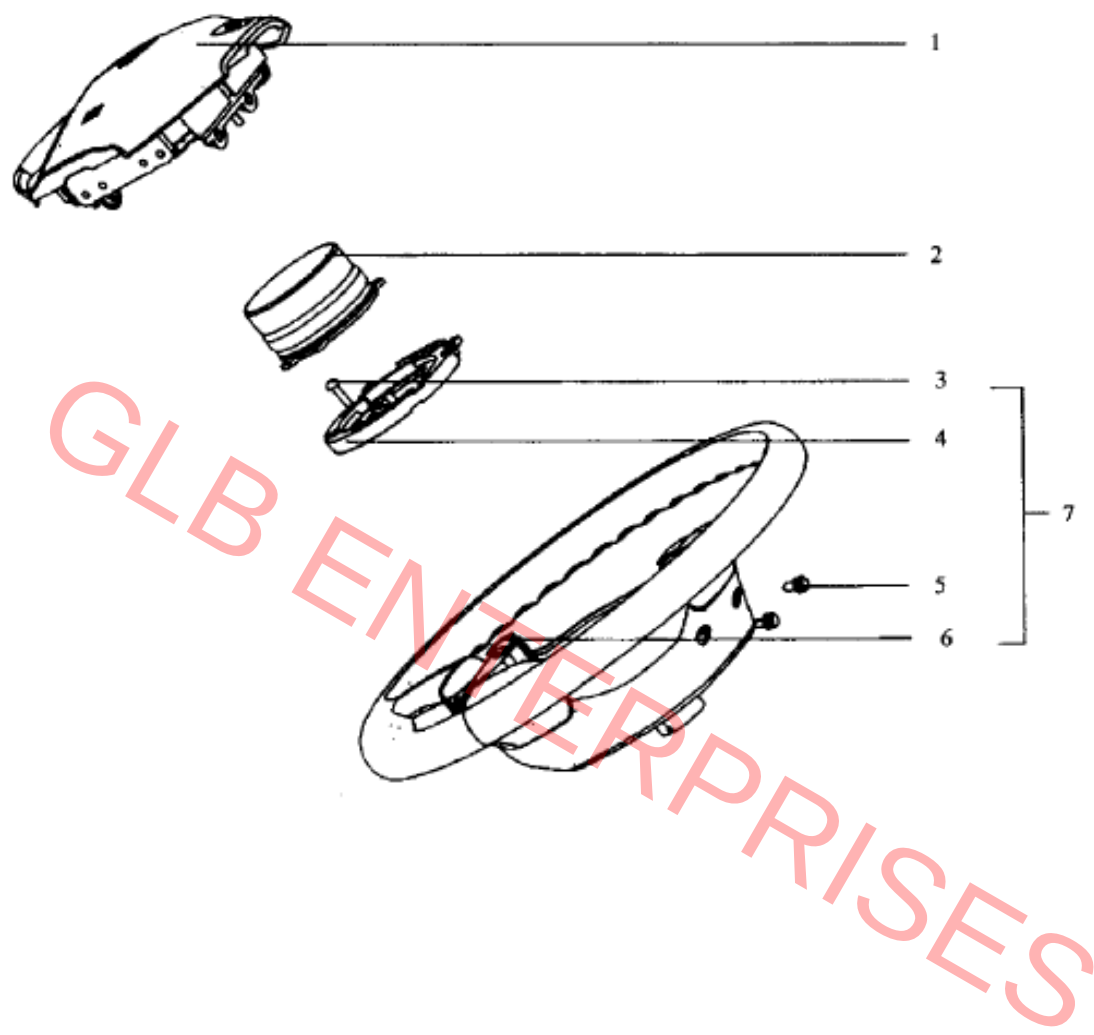


FIGURE 89 STEERING WHEEL (AIR BAG)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	AIRBAG MODULE	HFJ3402020DB	1	
2	AIRBAG GAS INFLATOR	AC34020003	1	
3	BOLT	GB823-88 M5X12	3	
4	AIRBAG FIXATION SEAT	HFJ3402011DB	1	
5	BOLT	AC34020004	4	
6	STEERING HORN	HFJ3402013DB	2	
7	STEERING WHEEL ASM	HFJ3402010DB	1	

GLB ENTERPRISES

FIGURE 90 FRONT SUSPENSION FRAME

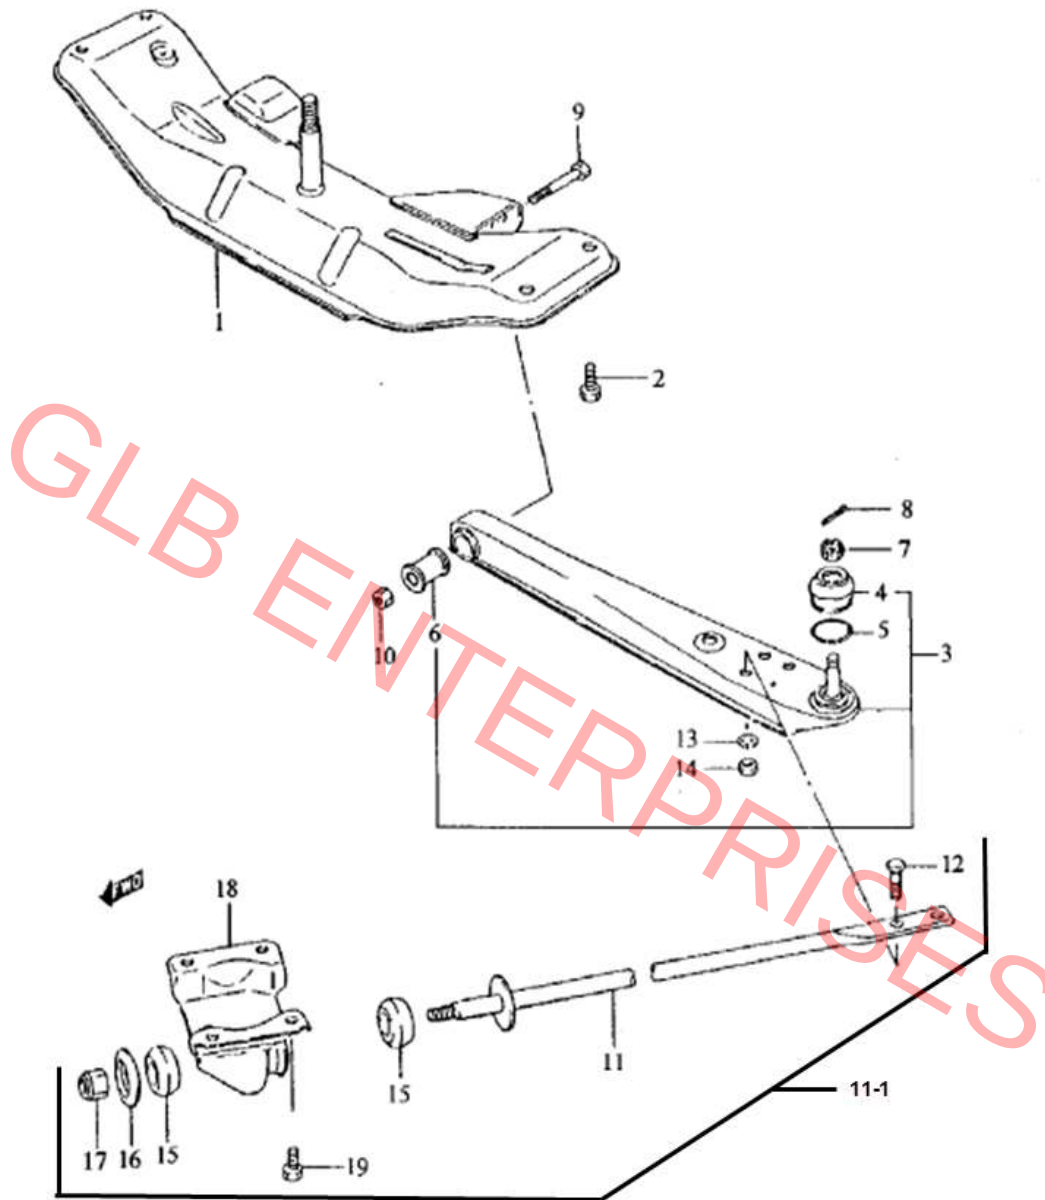


FIGURE 90 FRONT SUSPENSION FRAME

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	FRONT SUSPENSION FRAME	HFJ3001000CA	1	
2	BOLT	Q/2A-CJ-35 M10X1.25X28.8	4	
3	FRONT SUSPENSION ARM LH/RH	HFJ2904000CA	2	
4	DUST BOOT	HFJ2904030CA	2	
5	CLIP	HFJ2904006CA	2	
6	BUSHING	HFJ2904040CA	2	
7	NUT	Q387B12	2	
8	COTTER PIN	Q5003220	2	
9	BOLT	Q151C1075ATF2-6G	2	
10	NUT	Q/2A-CJ-45 M10X1.25	2	
11	TENSION ROD LH/RH ASM	HFJ2909000CA	2	
11-1	TENSION ROD LH/RH	HFJ2909020CA	2	
12	BOLT	HFJ2909007CA	4	
13	WASHER	Q40510	4	
14	NUT	Q/2AJ159 M10X1.25	4	
15	TENSION ROD BUSHING	HFJ2909006CA	4	
16	TENSION ROD WASHER	HFJ2909005CA	2	
17	NUT	M12 GB1337	2	
18	TENSION ROD PLANK LH/RH	HFJ2909010	2	
19	BOLT	Q/2A-CJ-31 M10X1.25X25-8.8	8	

FIGURE 91 FRONT STABILIZER

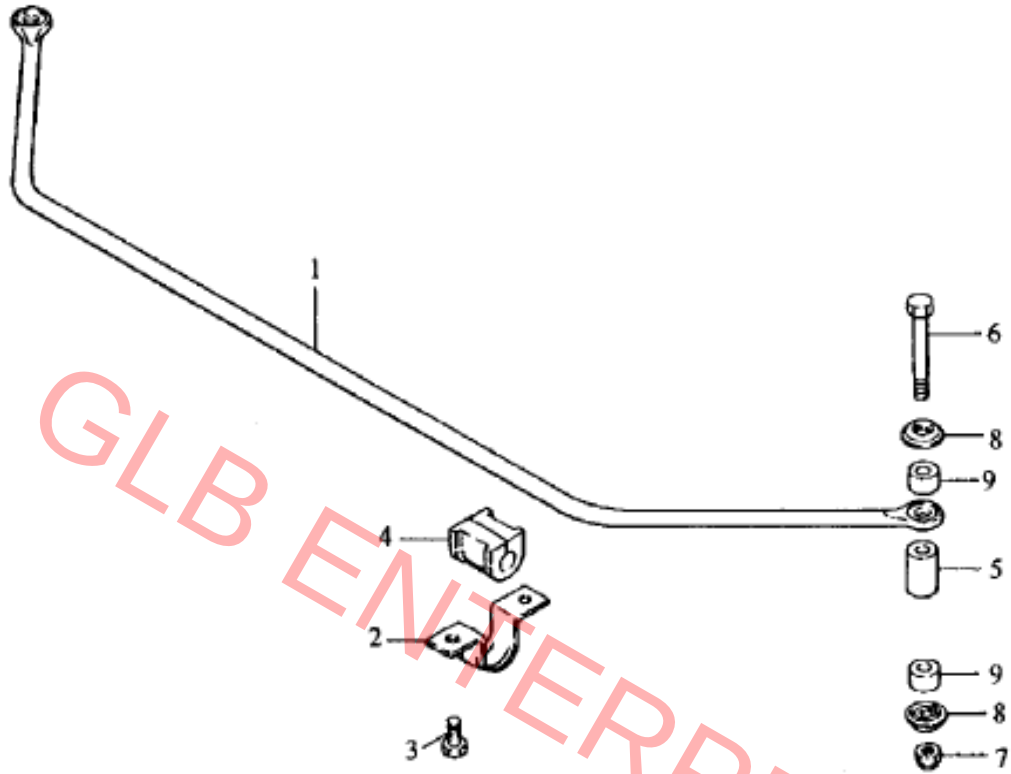


FIGURE 91 FRONT STABILIZER

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	FRONT STABILIZER BAR	HFJ2906005CA	1	
	STABILIZER BAR			
2	MOUNT BRACKET	HFJ2901009CA	2	
3	BOLT	Q/2A-CJ-31 M8X20-8.8	4	
	STABILIZER BAR			
4	MOUNT BUSHING	HFJ2901007CA	2	
	STABILIZER BAR			
5	BUSHING	HFJ2901008CA	2	
6	BOLT	Q150B0870-6G	2	
7	NUT	Q/2A-CJ-45 M8	2	
8	WASHER	HFJ2901005CA	4	
9	BUSHING	HFJ2901006CA	4	

GLB ENTERPRISES

FIGURE 92 FRONT STRUT

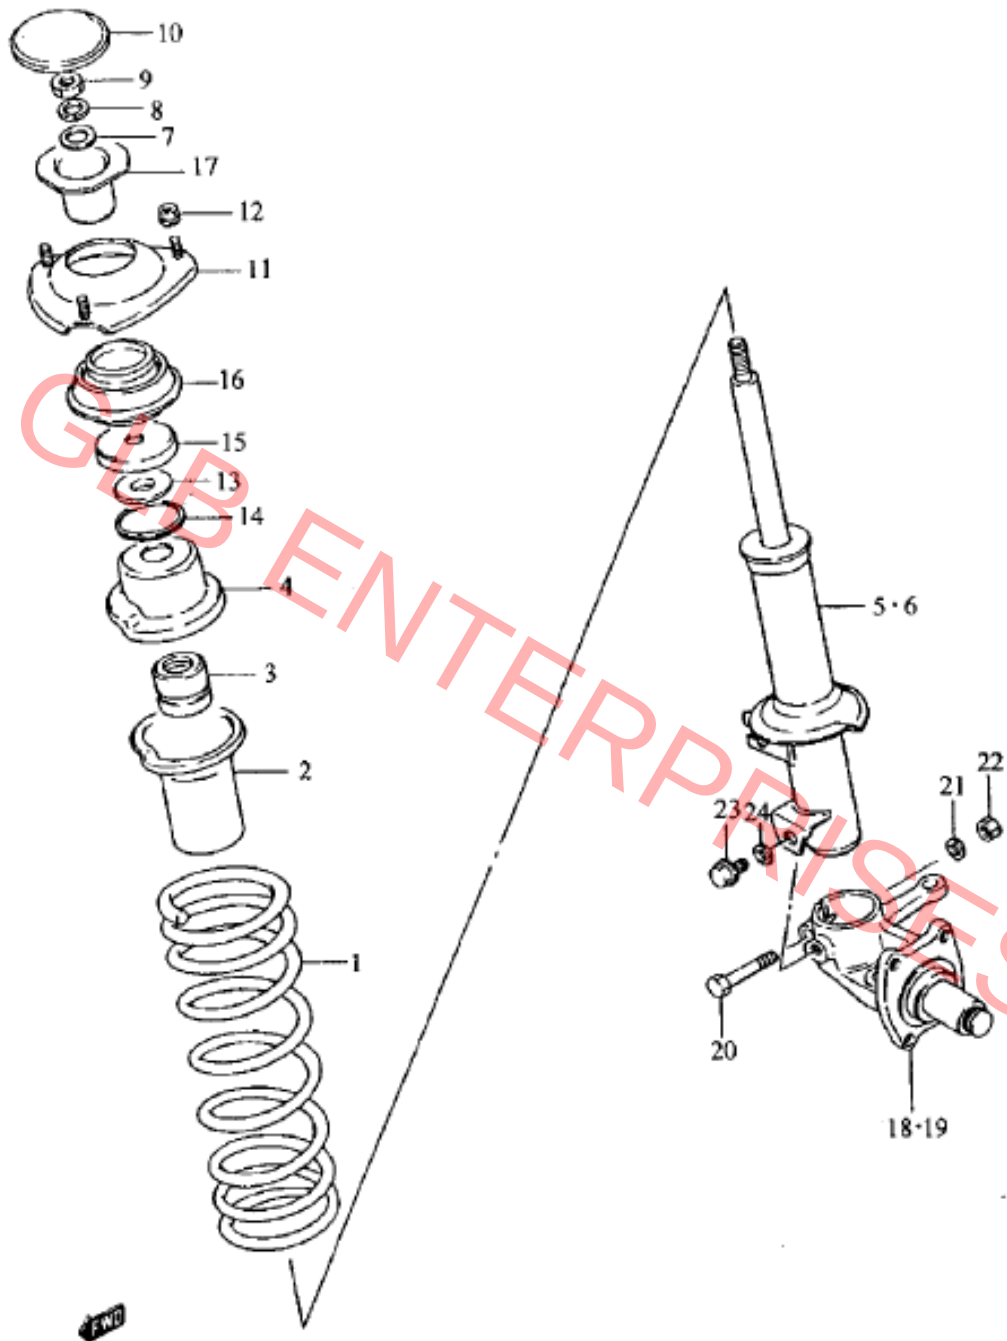


FIGURE 92 FRONT STRUT

NO	DESCRIPTION	PART NO.	ALL	NOTE
5	STRUT ASM LH	HFJ2905100CA	1	WITHOUT SPRING
		HFJ2901100CA	1	WITH SPRING
6	STRUT ASM RH	HFJ2905200CA	1	WITHOUT SPRING
		HFJ2901200CA	1	WITH SPRING
18*	STEERING SPINDLE RH	HFJ3001006CA	1	STRAIGHT SPINDLE, DRUM BRAKE
		HFJ3001006FA	1	TAPERED SPINDLE
19*	STEERING SPINDLE LH	HFJ3001005CA	1	STRAIGHT SPINDLE, DRUM BRAKE
		HFJ3001005FA	1	TAPERED SPINDLE
20	BOLT	Q151C1060TG2-6G	2	
21	WASHER	Q40510	2	
22	NUT	Q341C10	2	
23	BOLT	Q151C1018-6G	2	
24	WASHER	Q40510	2	



FIGURE 93 REAR SUSPENSION TRUCK

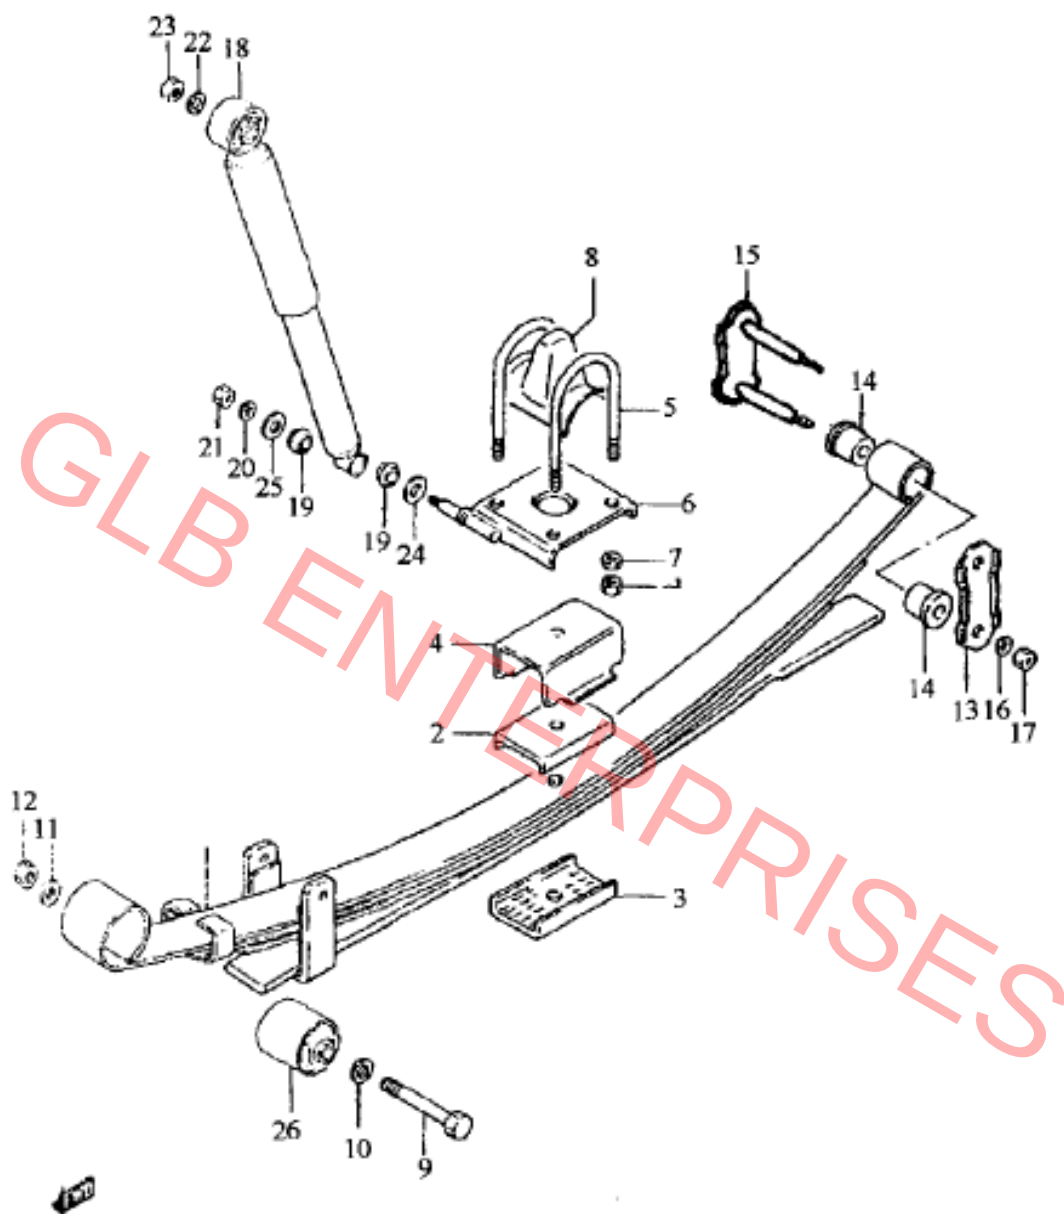


FIGURE 93 REAR SUSPENSION TRUCK

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	REAR LEAF SPRING	HFJ2912000CA	2	4-LEAF
2	UPPER PAD	HFJ2911103CA	2	
3	LOWER PAD	HFJ2911102CA	2	
4	SPRING CLAMP PLATE	HFJ2911107CA	2	
5	U-BOLT	HFJ2911106CA	4	
6	SPRING SEAT LH/RH	HFJ29111CA	2	
7	NUT	Q341C10	16	
8	SPRING BUMPER	HFJ2911130CA	2	
9	BOLT	HFJ2911101CA	2	
10	WASHER	Q40112	2	
11	WASHER	Q40512	2	
12	NUT	Q341B12	2	
13	SHACKLE OUTER PLATE	HFJ2911109CA	2	
14	BUSHING	HFJ2911104DA	8	
15	SHACKLE OUTER PLATE	HFJ2911140CA	2	
16	WASHER	Q40510	4	
17	NUT	Q341C10	2	
18	REAR SHOCK ABSORBER	HFJ2915000CA	2	
19	BUSHING	HFJ2911108CA	4	
20	WASHER	Q40308	2	
21	NUT	Q340B08	2	
22	WASHER	Q40510	2	
23	NUT	Q341C10	4	
24	WASHER	Q40112	2	
25	WASHER	HFJ2911105CA	2	
26	BUSHING	HFJ2912005DA	2	

FIGURE 94 REAR SUSPENSION VAN

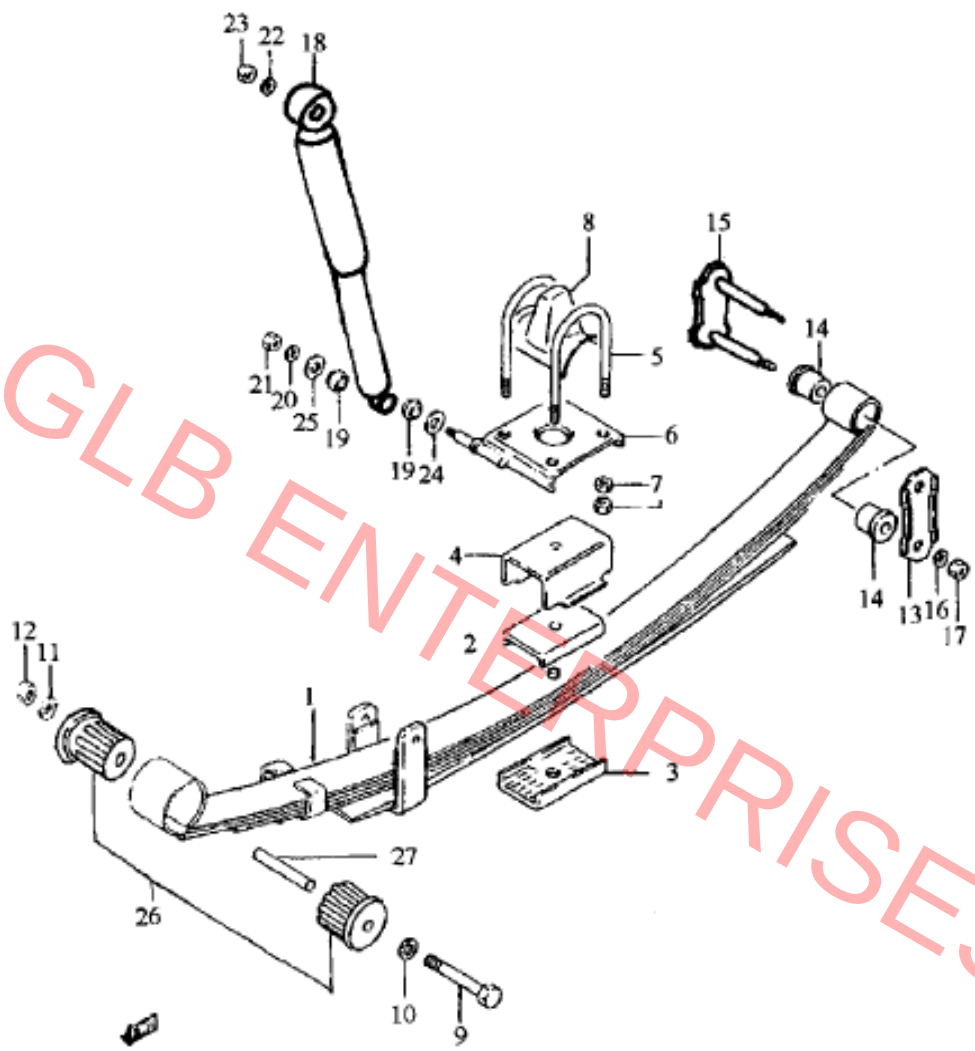


FIGURE 94 REAR SUSPENSION VAN

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	REAR LEAF SPRING	HFJ2912000DA	2	5-LEAF
2	UPPER PAD	HFJ2911103CA	2	
3	LOWER PAD	HFJ2911102CA	2	
4	SPRING CLAMP PLATE	HFJ2911107DA	2	
5	U-BOLT	HFJ2911106DA	4	
6	SPRING SEAT LH/RH	HFJ29111CA	2	
7	NUT	Q341C10	16	
8	SPRING BUMPER	HFJ2911130CA	2	
9	BOLT	HFJ2911101CA	2	
10	WASHER	Q40112	2	
11	WASHER	Q40512	2	
12	NUT	Q341B12	2	
13	SHACKLE OUTER PLATE	HFJ2911109CA	2	
14	BUSHING	HFJ2911104DA	8	
15	SHACKLE OUTER PLATE	HFJ2911140CA	2	
16	WASHER	Q40510	4	
17	NUT	Q341C10	2	
18	REAR SHOCK ABSORBER	HFJ2915000CA	2	
19	BUSHING	HFJ2911108CA	4	
20	WASHER	Q40308	2	
21	NUT	Q340B08	2	
22	WASHER	Q40510	2	
23	NUT	Q341C10	4	
24	WASHER	Q40112	2	
25	WASHER	HFJ2911105CA	2	
26	BUSHING	HFJ2912005DA	2	
27	BUSHING	HFJ2912004DA	2	

FIGURE 95 WHEEL & TIRE

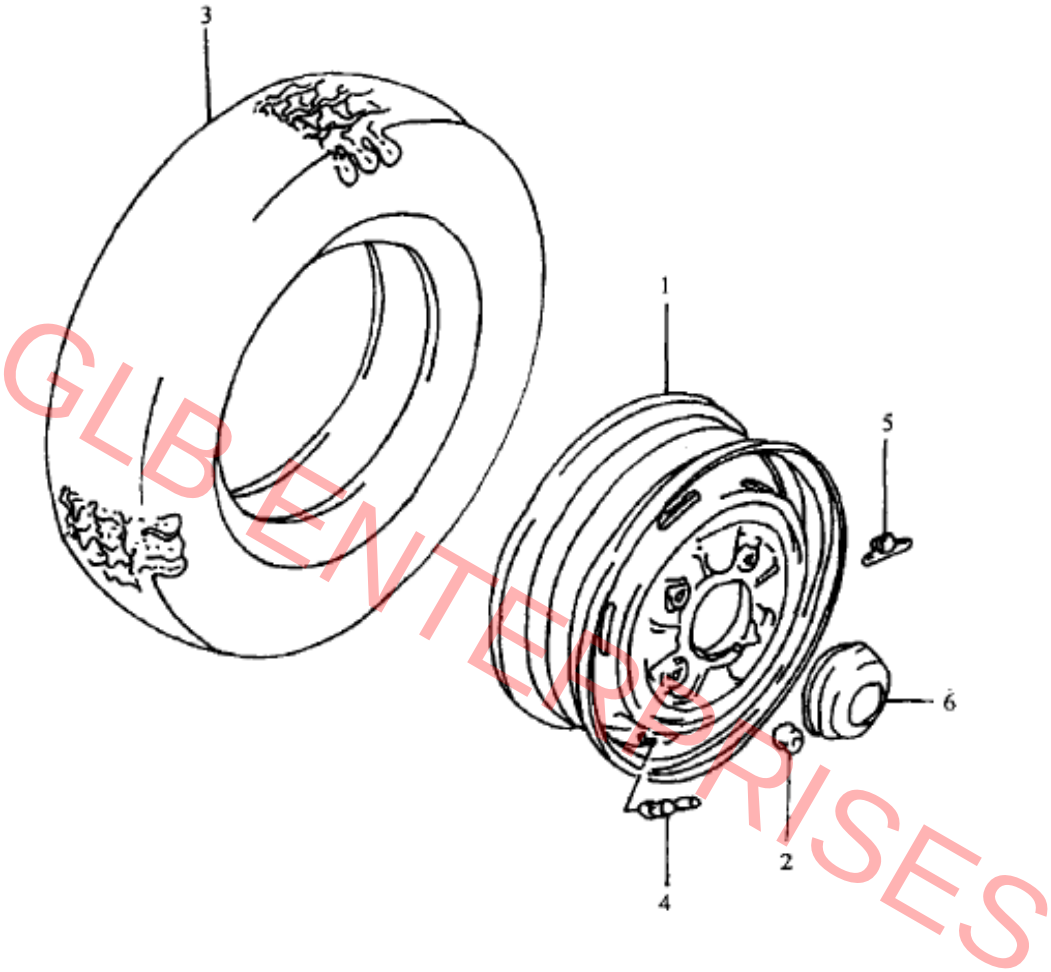


FIGURE 95 WHEEL & TIRE

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	WHEEL (STEEL) 13"	HFJ3101000DC	4	
2	LUG NUT	Q/2A-CJ-159 M12X1.25	16	
6	WHEEL CENTER CAP	HFJ2400006CA	4	
	HUB CAP (FULL COVER)	HFJ3102000DA	4	

GLB ENTERPRISES

FIGURE 96 SPARE TIRE MOUNT

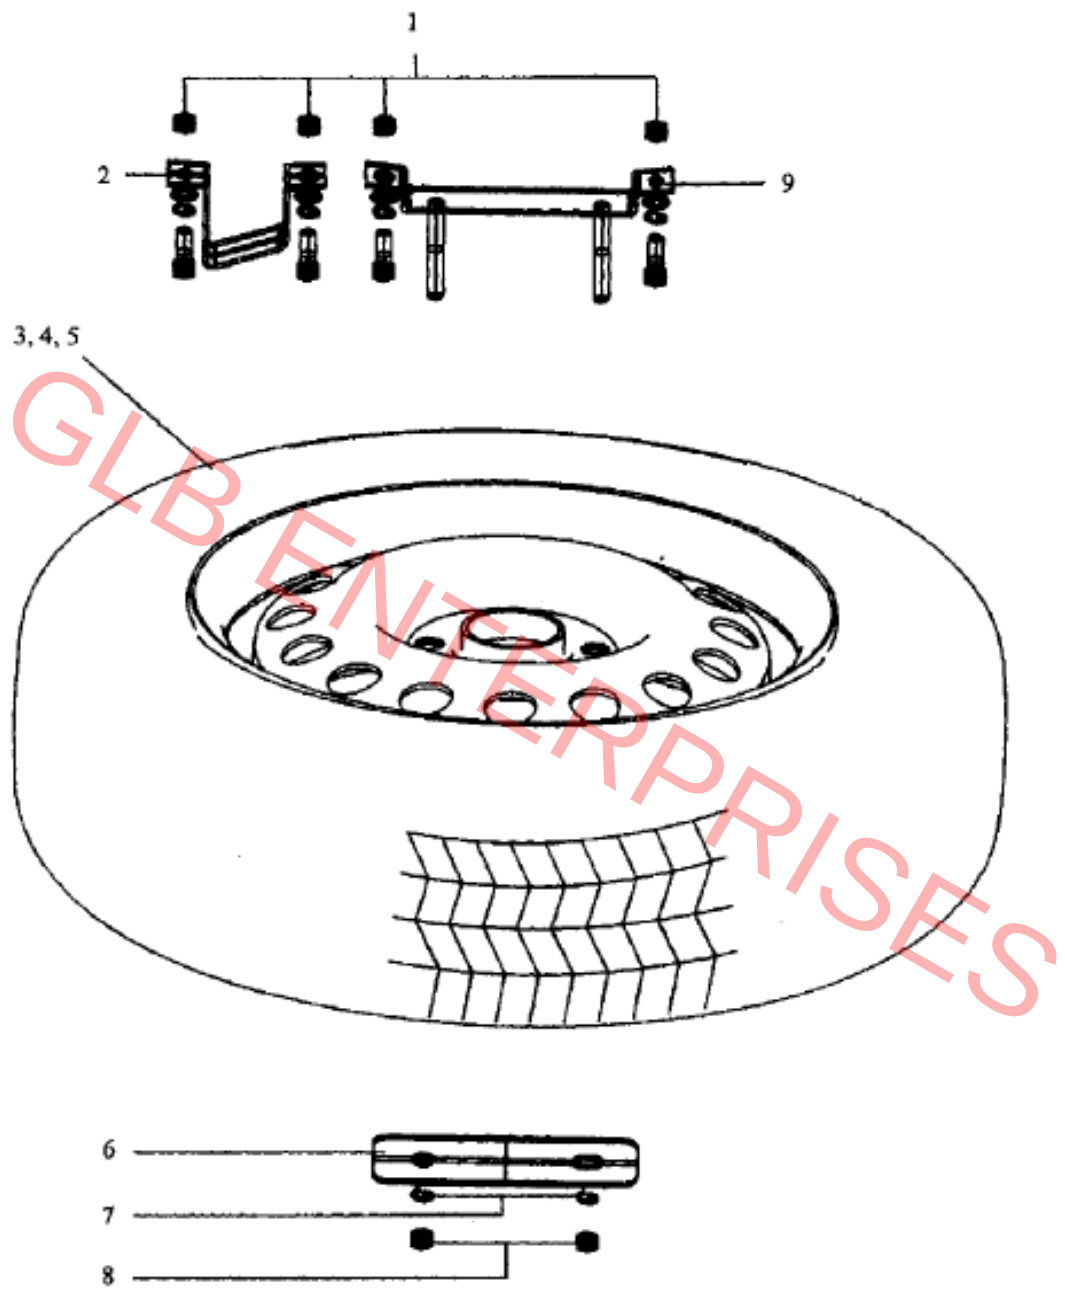


FIGURE 96 SPARE TIRE MOUNT

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	BOLT ASM	Q/2A-35 M8X18-8.8	4	
	STRUT SUPPORT			
2	BRACKET	HFJ3105007DA	1	
3	TIRE & WHEEL ASM	HFJ3100000DA	1	
4		HFJ3100000DC	1	
		HFJ3100000DB	1	
	SPARE TIRE CARRIER			
6	PLATE	HFJ3105006DA	1	
7	WASHER	Q40410	2	
8	NUT	Q341C10	2	
	SPARE TIRE CARRIER			
9	BRACKET	HFJ3105020DA	1	

GLB ENTERPRISES

FIGURE 97 SPARE TIRE BRACKET MOUNTING

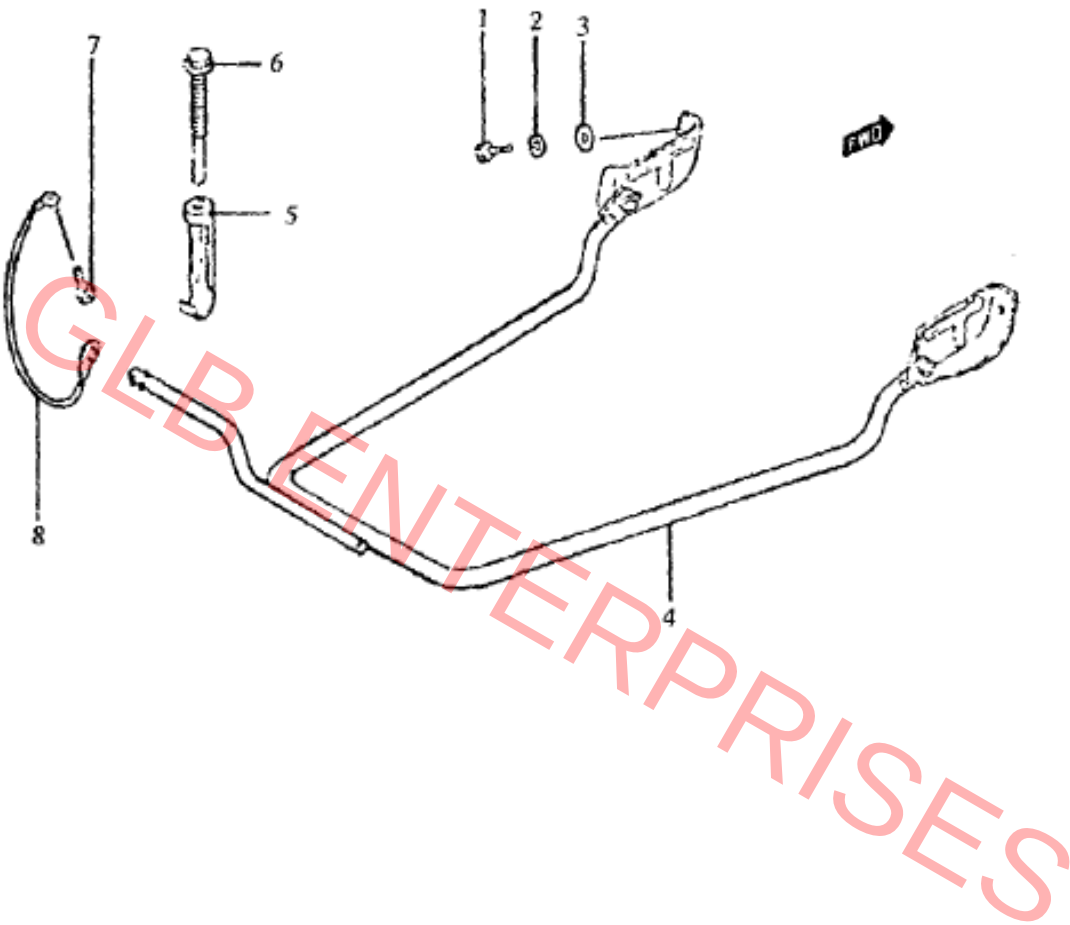


FIGURE 97 SPARE TIRE BRACKET MOUNTING

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	BOLT	Q150B0620-6G	2	
2	SPARE TIRE BOLT	*HFJ3105005DB	5	
3	WASHER	Q40306	2	
4	SPARE TIRE CARRIER BRACKET	HFJ3105100DB	1	
		*HFJ3105100DC	1	
5	POT HOOK	HFJ6105010CA	1	
6	SPARE TIRE BOLT	HFJ3105005DA	1	
		*HFJ3105200DA	1	
7	BOLT	Q150B0612-6G	1	
8	TIGHT WIRE	HFJ3105010DA	1	

*NOTE

*= WAGON APPLICATION

GLB ENTERPRISES

FIGURE 98 TIRE JACK

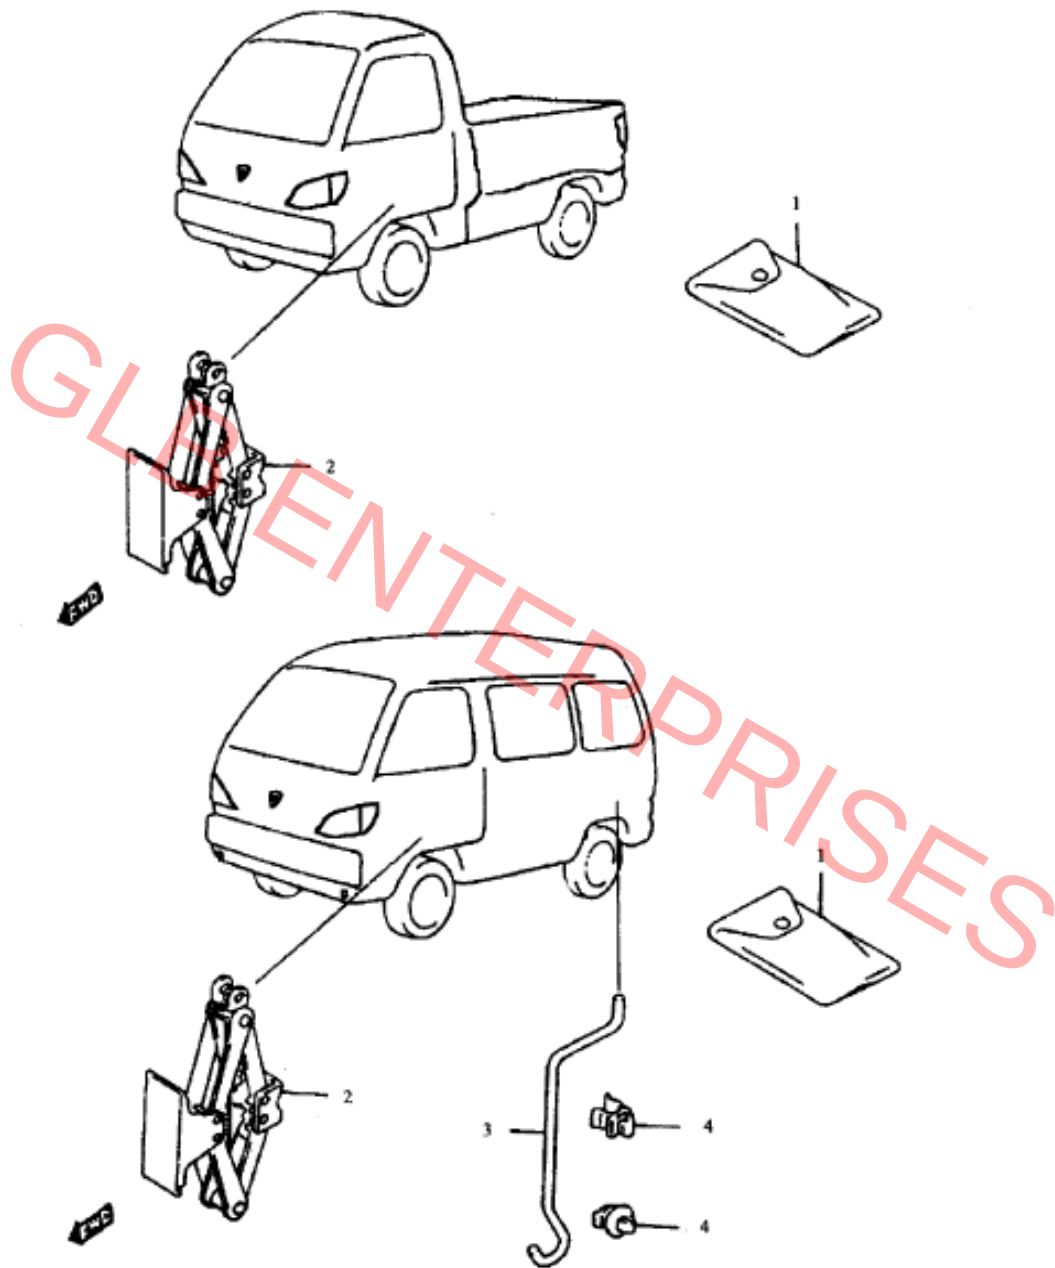


FIGURE 98 TIRE JACK

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	TOOL KIT	HFJ3901000DA	1	
		HFJ3901000DD	1	
2	JACK	HFJ3913100DA	1	
		HFJ3913100DA	1	
3	BAR	HFJ3913005DA	1	
4	CLIP	HFJ3913006DA	1	

GLB ENTERPRISES

FIGURE 99 STARTER

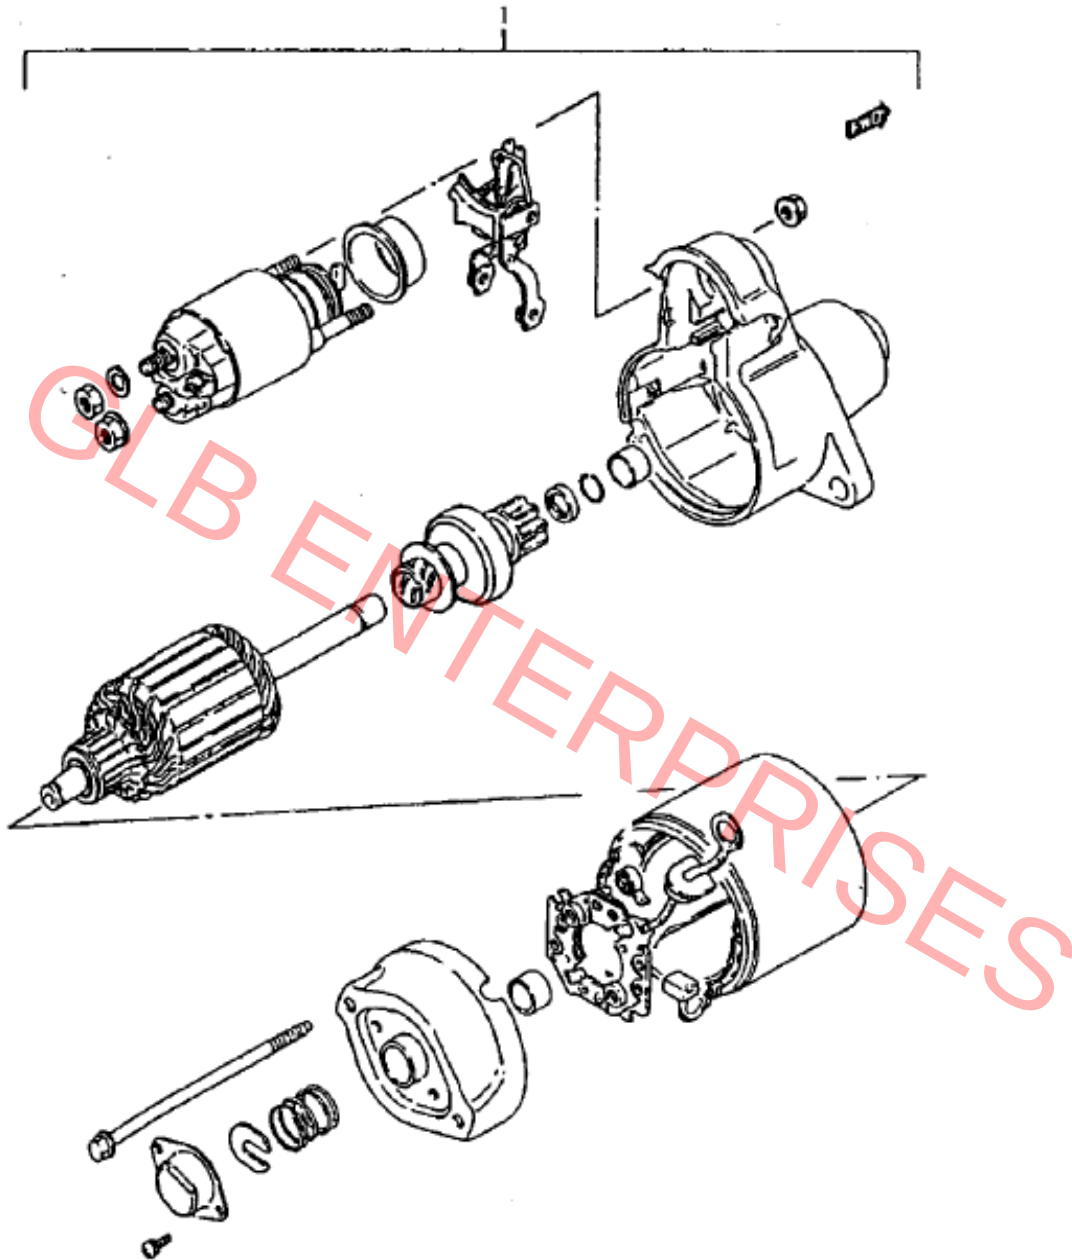


FIGURE 99 STARTER

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	STARTER (MANUAL TRANSMISSION)	462-3708950-01	1	3708010D
		471QLR-3708950		471 ENGINE
	STARTER AUTOMATIC TRANSMISSION	169225	1	

GLB ENTERPRISES

FIGURE 100 ALTERNATOR

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	ALTERNATOR	462-3701950	1	3701010D
		462-1A/D-3701950	1	V-BELT TYPE
		462-1A2DJ-3701950	1	SERPENTINE BELT TYPE



462-3701950



462-1A/D-3701950



462-1A2DJ-3701950

FIGURE 101 DISTRIBUTOR

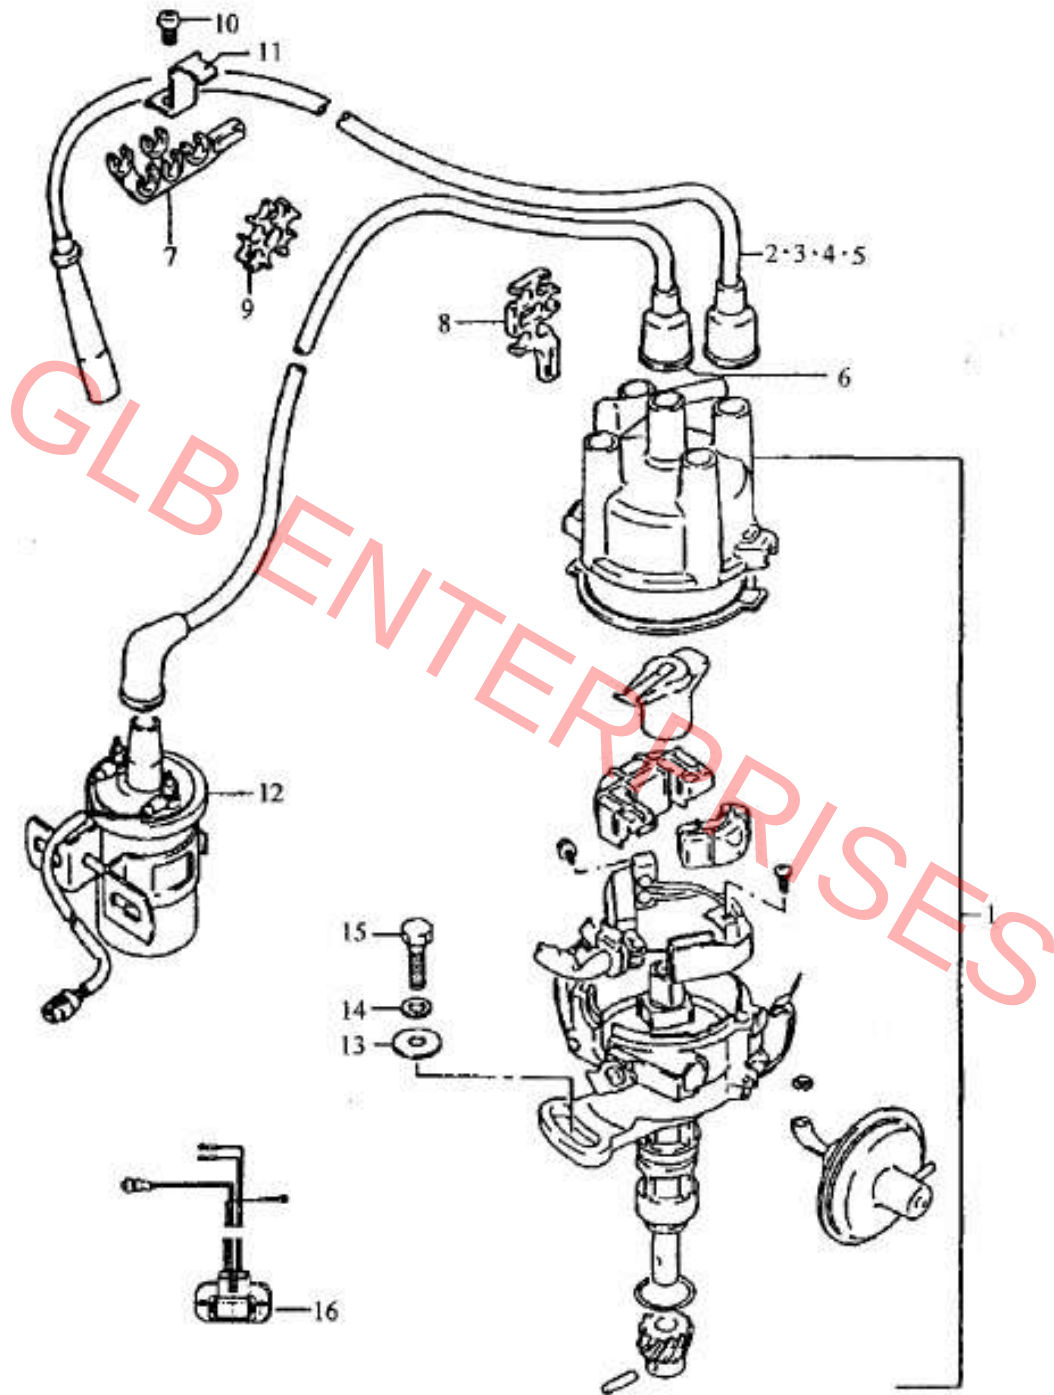


FIGURE 101 DISTRIBUTOR

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	DISTRIBUTOR ASM	465Q-3706950	1	WITH VACUUM ADVANCE
		3706010A8(G)	1	ELECTRONIC IGNITION
2	PLUG WIRE SET	465-3707800DA	1	5-WIRE
		462-1A2D-3707900	1	NO DISTRIBUTOR- HFJ1011H, HFJ1011G, USE WITH COIL AC37050003, XC
		462-1AD-3707900		NO DISTRIBUTOR- HFJ1020A
	DISTRIBUTOR CAP	465Q-1AD-6581002	1	
	DISTRIBUTOR ROTOR	465Q-1AD-6561007	1	
12	IGNITION COIL	HFJ3705100DC	1	HFJ6351B, HFJ6350B
		3705010-2J0	1	DELPHI, 3-PIN
		AC37050003	1	MT20U, 3-PIN
		AC37050010	1	4-PIN, X-CAB
		471QLR-3705950-01	1	
16	IGNITION MODEL ASM	HFJ3706100FA	1	HFJ6351B, HFJ6350B



3705010-2J0



HFJ3705100DC



3705010-2J0



AC37050003



471QLR-3705950-01



AC37050010

FIGURE 102 BATTERY

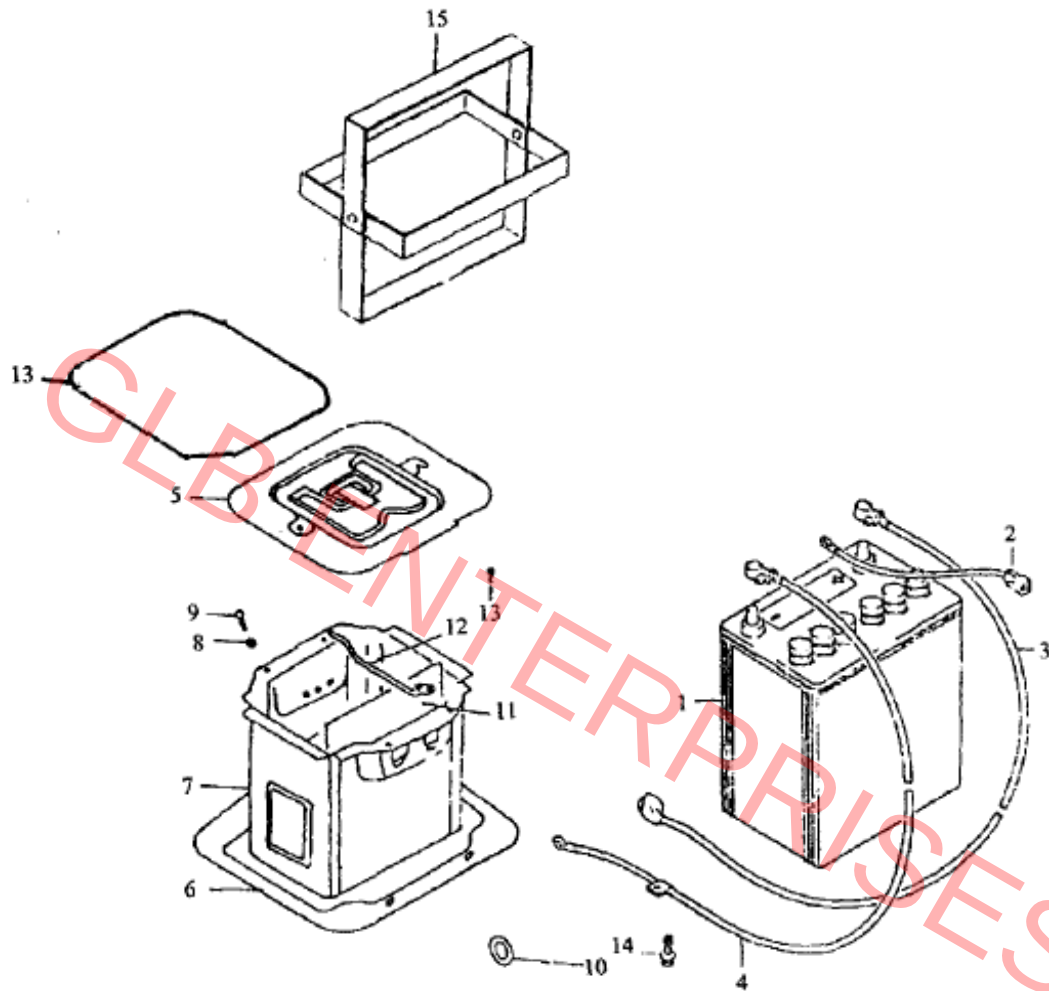


FIGURE 102 BATTERY

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	BATTERY	HFJ3703100DA	1	HFJ6351B, HFJ6351C
2	FUSIBLE LINK	HFJ3724620DA	1	HFJ6350B, HFJ6350C
3	POSITIVE BATTERY CABLE	HFJ3724640DA	1	HFJ6371, HFJ6376, HFJ1011H
4	NEGATIVE BATTERY CABLE	HFJ3724650DA	1	
5	BATTERY BOX LID	HFJ3703400DA	1	
6	CUSHION	HFJ3703006CA	1	
7	BATTERY BOX LID	HFJ3703200CA	1	
8	WASHER	Q40106	5	
9	SCREW	Q2140620	1	
10	GROMMET	HFJ3703008CA	2	
11	SIDE PANEL INSULATOR	HFJ3703009CA	1	
12	BATTERY HOLDER	HFJ3703007CA	1	
13	ID PANEL INSULATOR	HFJ3703017DA	1	
14	BOLT	Q/2A-CJ-81 M6X25	1	
15	BATTERY HANGER	HFJ3703300CA	1	

FIGURE 103 BATTERY (HFJ1011G)

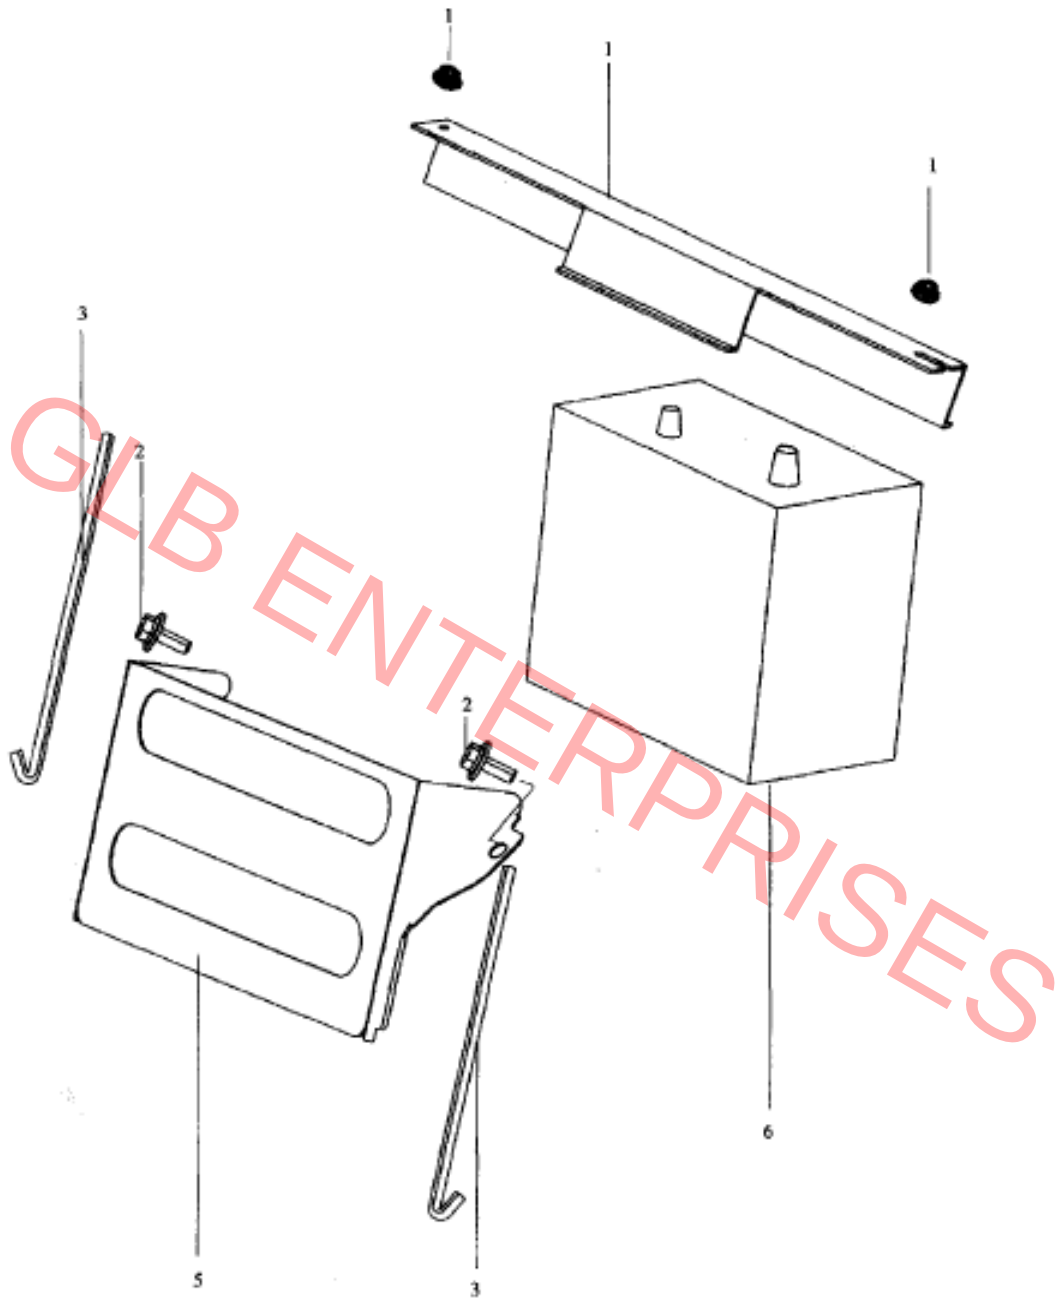


FIGURE 103 BATTERY (HFJ1011G)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	BATTERY LID	HFJ3703400DA	1	
2	BOLT	Q2140612	2	
3	BOLT	HFJ3703103DA	2	
4	NUT	Q34005	2	
5	BATTERY SIDE PANEL	HFJ37030113DA	1	
6	BATTERY	HFJ3703100DA	1	

GLB ENTERPRISES

FIGURE 104 SWITCHES

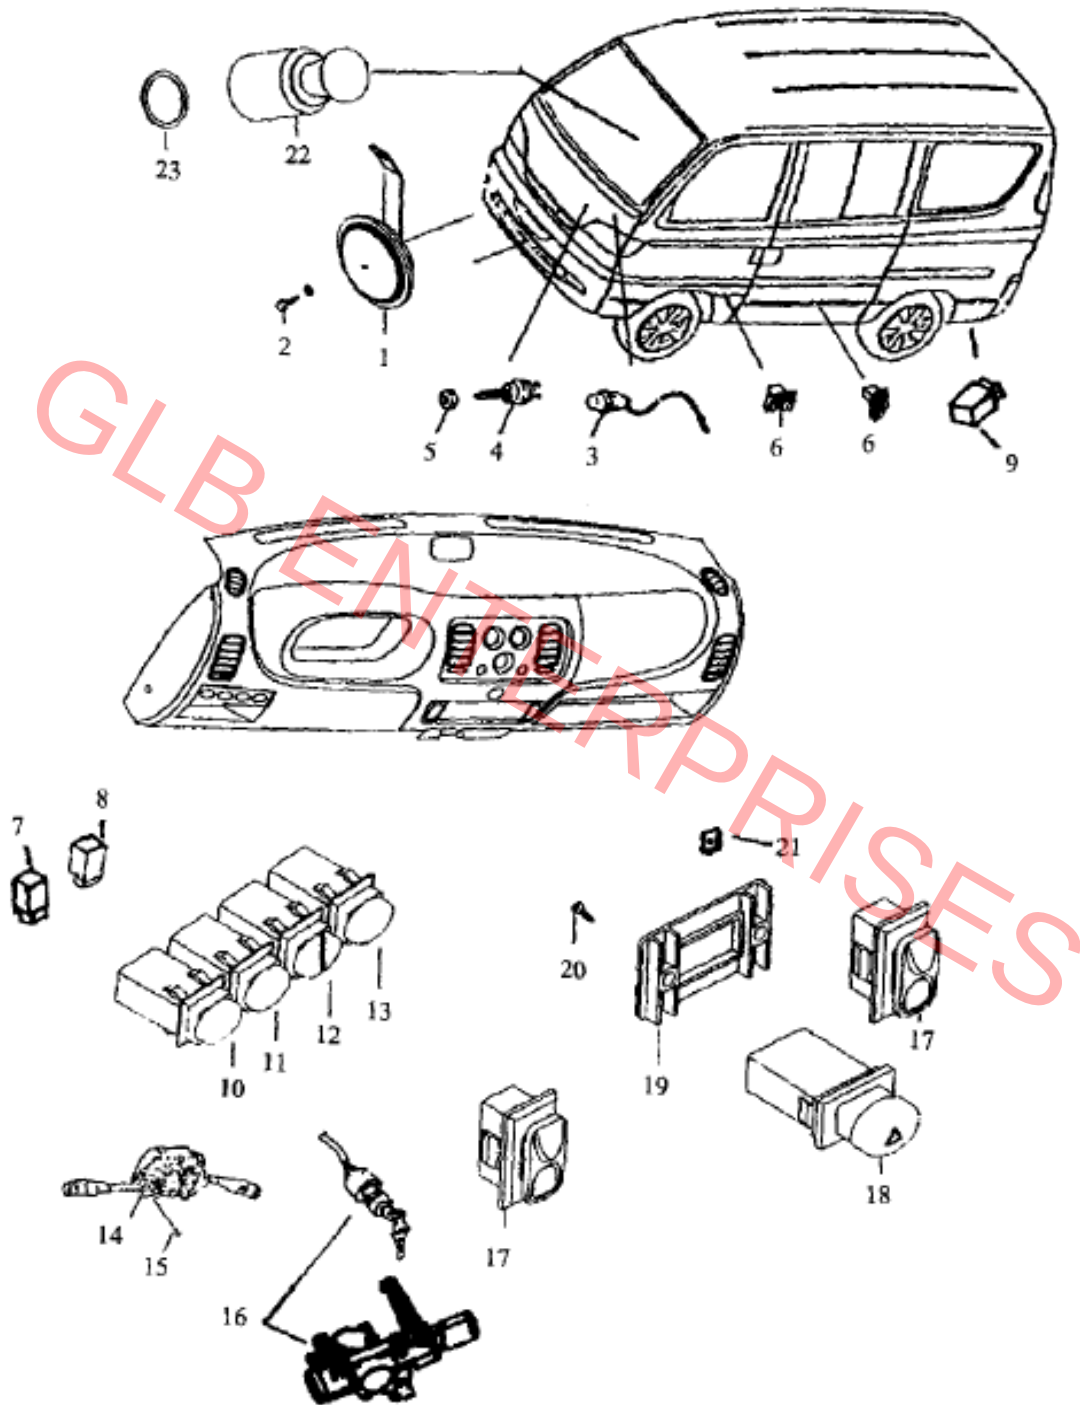


FIGURE 104 SWITCHES

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	HORN	HFJ3721100DA	1	
2	BOLT	Q/2A-CJ-31 M8X18	1	
3	PARKING BRAKE INDICATOR LAMP	HFJ3718110CA	1	
4	BRAKE LIGHT SWITCH	HFJ3720100CA	1	
5	NUT	GB76-53 M10X1.5	1	
6	DOOR SWITCH	HFJ3775110DA	4	
7	FUEL PUMP RELAY	HFJ3735310DA	1	
8	FLASHER RELAY	HFJ3735110DA	1	
9	A/C RELAY	HFJ3735510DA	1	
11	FRONT/REAR FOG LAMP SWITCH	HFJ3750210DA	2	HFJ3750110DA
12	REAR WIPER & WASHER SWITCH	HFJ3741100DA	1	
13	REAR DEFROST SWITCH	HFJ3778100DA	1	OPTIONAL
		HFJ3778100FA	1	OPTIONAL
14	COMBINATION SWITCH	HFJ3774110DA	1	WITH INTERMITT WIPER
		HFJ3774110DB	1	W/O INTERMITT WIPER
		6400100CA3	1	VAN, WITH ALL LOCKS
15	SCREW	Q271B4816	4	
16	IGNITION SWITCH	HFJ3704100CA	1	W/O COLUMN LOCK
		HFJ3704100CB	1	W/ COLUMN LOCK
17	POWER WIDONW SWITCH	HFJ3746100DA	2	
18	HAZARD SWITCH	HFJ3746100DA	1	
19	HAZARD SWITCH BRACKET	HFJ3777005DA	1	
20	CLIP	HFJ3801107DA	2	
21	SCREW	Q271B4816	2	
22	CIGARETTE LIGHTER	HFJ3725110DA	1	
23	CIGARETTE LIGHTER BASE	HFJ3725120DA	1	

FIGURE 105 SPEEDO CLUSTER & SPEEDO SENSOR

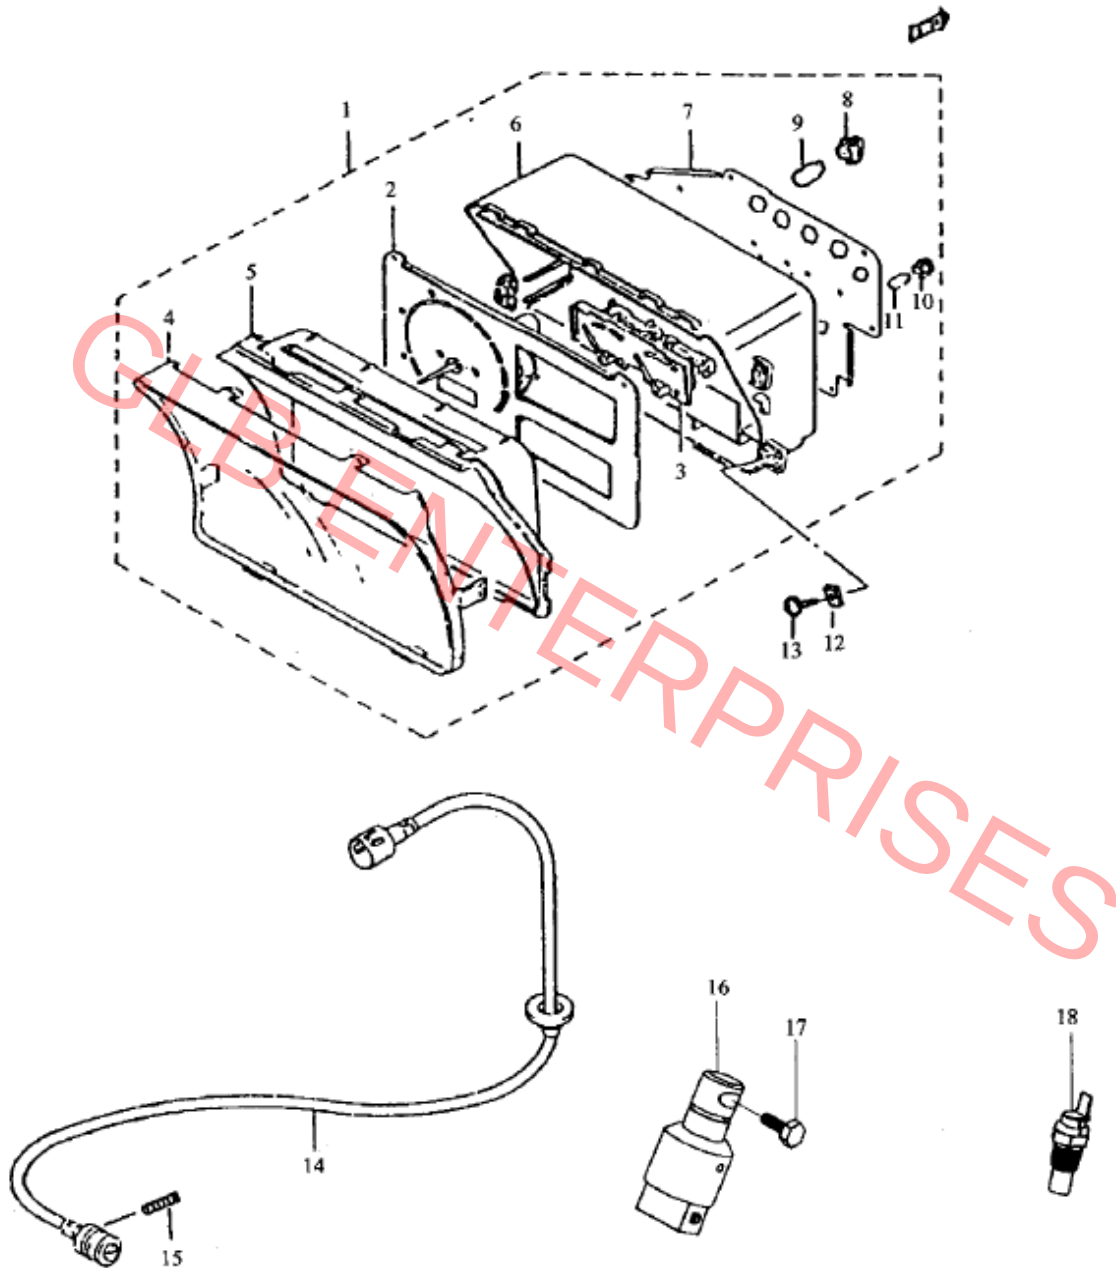


FIGURE 105 SPEEDO CLUSTER & SPEEDO SENSOR

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	SPEEDO CLUSTER	HFJ3820100DC	1	HFJ6351B, HFJ6371B, HFJ6371C, HFJ6376
		HFJ3820100DA	1	HFJ1011G, HFJ1011H
14	SPEEDOMETER CABLE	HFJ3802100DA	1	HFJ1011G, HFJ1011H
15	SCREW	Q2800616	1	HFJ1011G, HFJ1011H
16	SPEEDO SENSOR	HFJ3802120DB	1	HFJ6351B, HFJ6371B, HFJ6371C, HFJ6376
17	SCREW	HFJ3802001DB	1	HFJ6351B, HFJ6371B, HFJ6371C, HFJ6377

GLB ENTERPRISES

FIGURE 106 RADIO

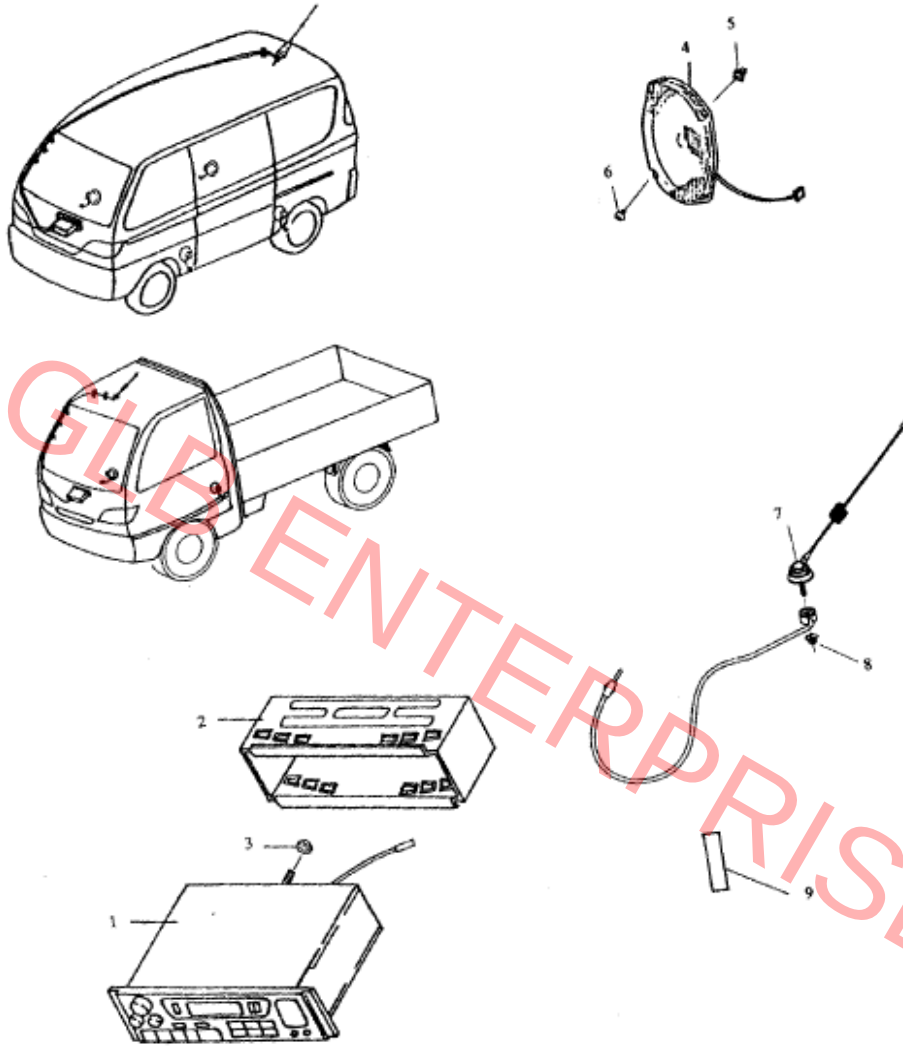


FIGURE 106 RADIO

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	RADIO	HFJ7901110DA	1	HFJ6351B, HFJ6371B, HFJ6371C
		HFJ7901110FB	1	
2	RADIO BRACKET	HFJ7901120DA	1	
3	NUT	Q340B05	1	
4	SPEAKER	HFJ7901310DA	4	HFJ6351B, HFJ6371B, HFJ6371C, HFJ6371B
		HFJ7901310FB	2	
5	NYLON NUT	Q/2AM-35-4	16	
6	SCREW	Q271B4213	8-16	
7	ANTENNA	HFJ7903100DA	1	HFJ6351B, HFJ6371B, HFJ6371C, HFJ6371B
		HFJ7903100DB	1	HFJ1011G, HFJ1011H
8	FLANGE NUT	GB6177-86 M5	1	
9	ADHESIVE TAPE	HFJ3724301EA	4-5	

GLB ENTERPRISES

FIGURE 107 WIRING HARNESS (VAN)

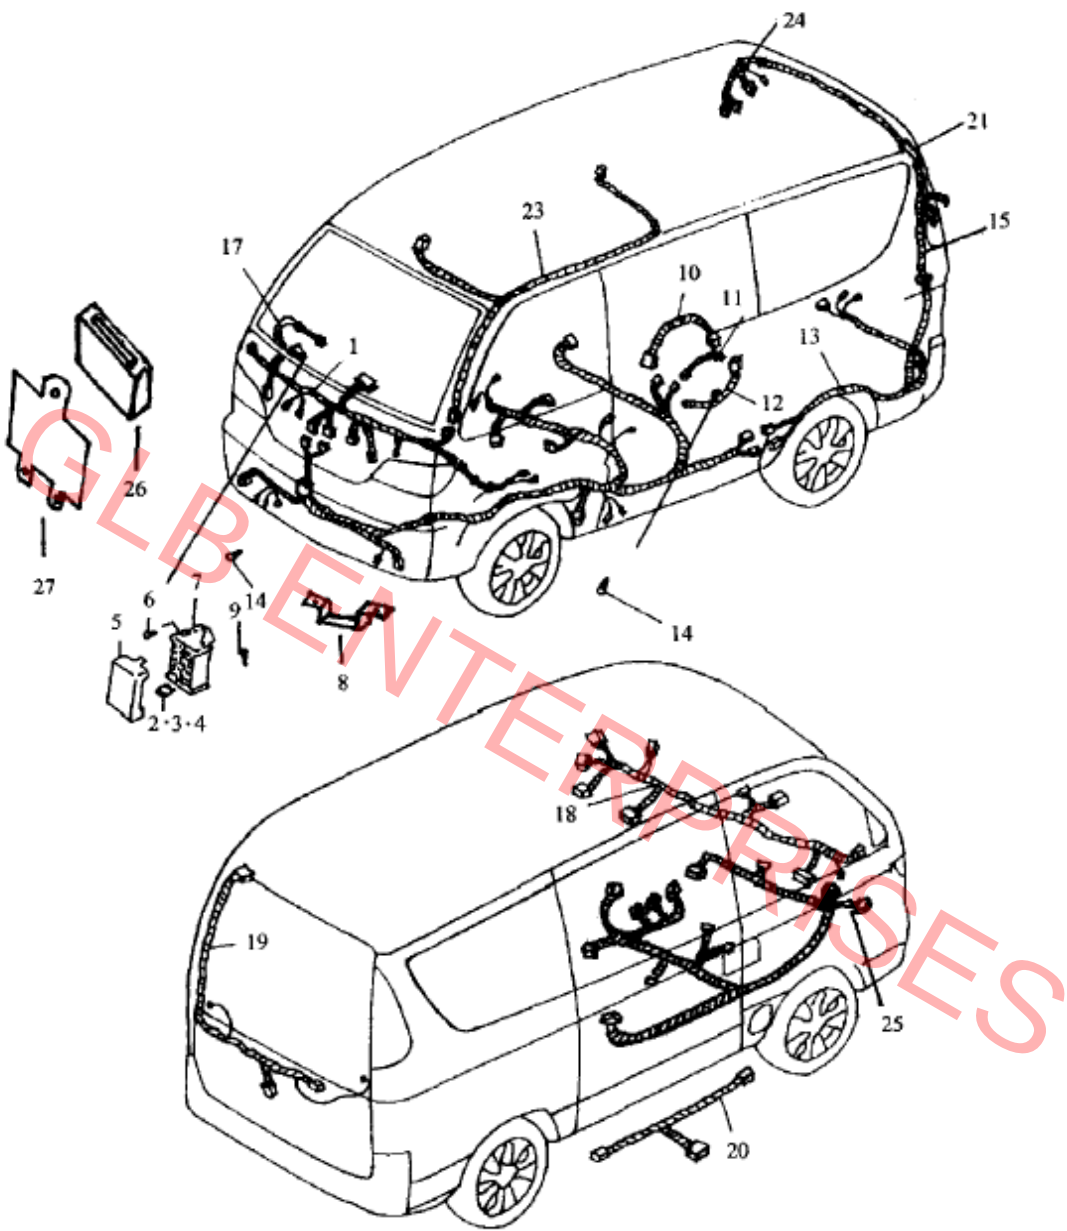


FIGURE 107 WIRING HARNESS (VAN)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	FRONT HARNESS	HFJ3724110DA	1	HFJ6351B, HFJ6350B, HFJ6350C, HFJ6351C
		HFJ3724110FG	1	HFJ6371, HFJ6376
2	FUSE 5A	HFJ3724105DA	2	
3	FUSE 10A	HFJ3724106DA	5	
4	FUSE 15A	HFJ3724107DA	9	
5	FUSE BOX LID	HFJ3724201DA	1	
6	SCREW	Q71B5513	4	
7	FUSE BOX	HFJ3724202DA	1	
8	RELAY BRACKET	HFJ3724101DB	1	
9	BOLT	Q/2A-CJ-36 M5X18	4	
	POSITIVE BATTERY			
10	CABLE	HFJ3724640DA	1	
11	FUSIBLE LINK	HFJ3724620DA	1	
	NEGATIVE BATTERY			
12	CABLE	HFJ3724620DA	1	
13	REAR BODY HARNESS	HFJ3724710DA	1	
14	BOLT	Q/2A-CJ-128 M6X16	4	
15	TIGHT SIDE HARNESS	HFJ3724720DA	1	
16	DOOR HARNESS LH	HFJ3724410FA	1	
17	DOOR HARNESS RH	HFJ3724510FA	1	
18	I/P HARNESS	HFJ3724210DA	1	HFJ6351B, HFJ6350B, HFJ6350C, HFJ6351C
		HFJ3724210DB	1	HFJ6371, HFJ6376
19	TAIL DOOR HARNESS	HFJ3724810DA	1	
20	FUEL TANK HARNESS	HFJ3724630DA	1	HFJ6351B, HFJ6350B
21	GROMMET	HFJ3724801DA	1	
22	CHASSIS HARNESS	HFJ3724610DA	1	HFJ6351B, HFJ6350B, HFJ6350C, HFJ6351C
		HFJ3724610FH	1	HFJ6371, HFJ6376
23	ROOM LAMP HARNESS	HFJ3724310DA	1	
24	GROMMET	HFJ3724802DA	1	
25	ENGINE HARNESS	HFJ3624110DA	1	DELPHI
		HFJ3624110DC	1	UAES
		HFJ3624120DC	1	UAES
		HFJ3624130DC	1	UAES
		HFJ3601100DA	1	UAES
26	ECU	HFJ360110DA	1	DELPHI
		HFJ3601100DC	1	UAES
27	ECU BRACKET	HFJ3601005DA	1	

FIGURE 108 WIRING HARNESS (TRUCK)


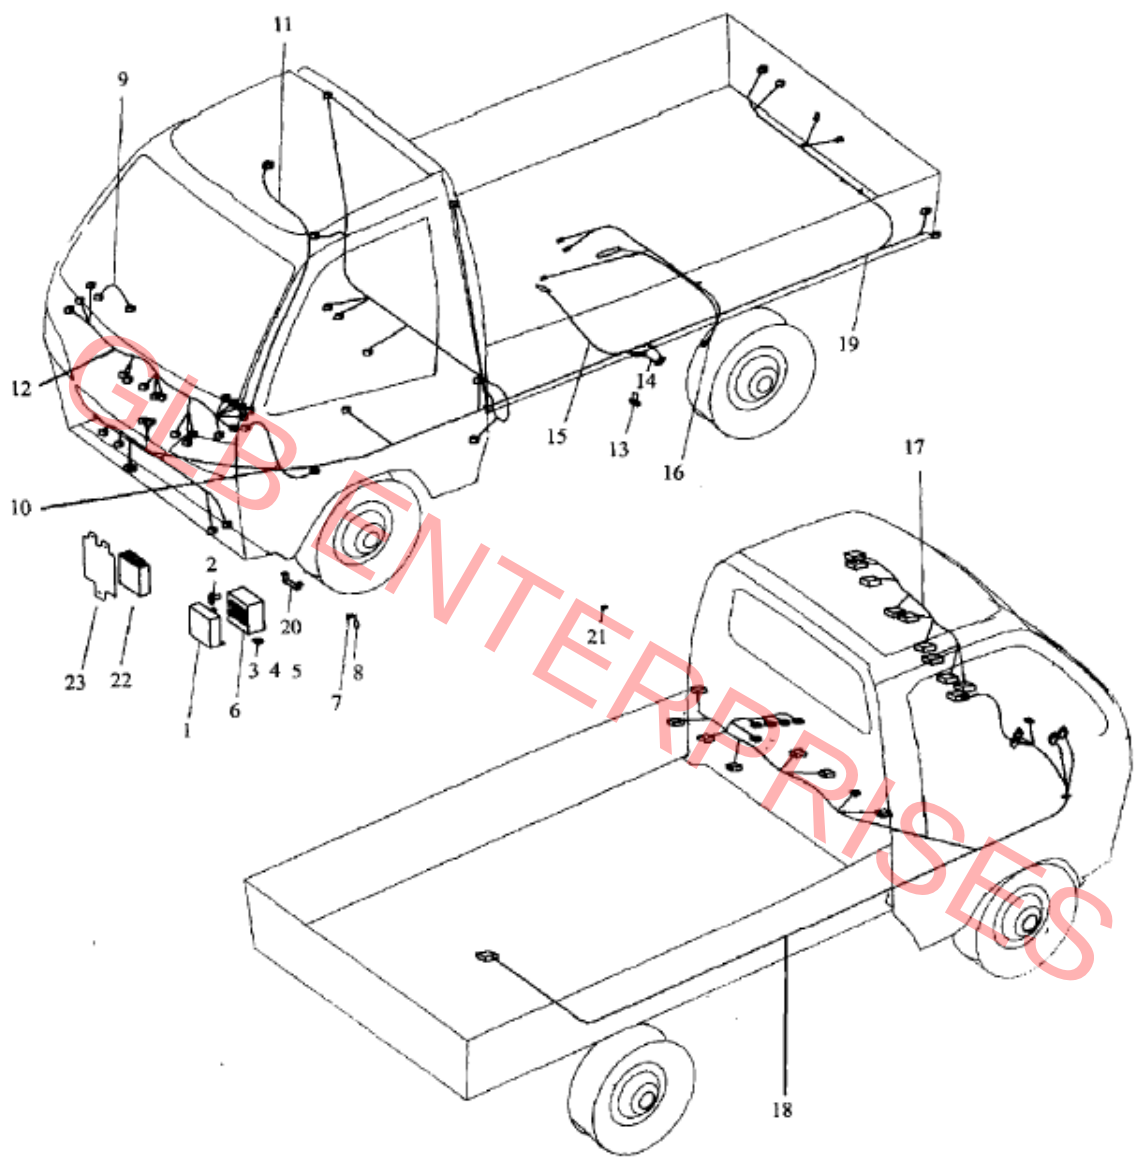


FIGURE 108 WIRING HARNESS (TRUCK)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	FUSE BOX LID	HFJ3724201DA	1	
2	BOLT	Q/2A-CJ-36 M5X18	2	
3	FUSE 5A	HFJ3724105DA	2	
4	FUSE 10A	HFJ3724106DA	5	
5	FUSE 15A	HFJ3724107DA	9	
6	FUSE BOX	HFJ3724202DA	1	
7	SCRW	Q271B5513	7	
8	CLIP	HFJ3724590CA	7	
9	DOOR HARNESS RH	HFJ3724510FA	1	
10	DOOR HARNESS LH	HFJ3724410FA	1	
11	ROOM LAMP HARNESS	HFJ3724310DC	1	HFJ1011G
		HFJ3724310DA	1	HFJ1011H
12	FRONT HARNESS	HFJ3724110FJ	1	HFJ1011G
		HFJ3724110FH	1	HFJ1011H
13	BOLT	Q/2A-CJ-128 M6X16	4	
14	FUSIBLE LINK	HFJ3724620DA	1	
	POSITIVE BATTERY			
15	CABLE	HFJ3724640DB	1	HFJ1011G
		HFJ3724640DC	1	HFJ1011H
	NEGATIVE BATTERY			
16	CABLE	HFJ3724650DC	1	HFJ1011G
		HFJ3724210DP	1	HFJ1011H
17	I/P HARNESS	HFJ3724210DP	1	HFJ1011G
		HFJ3724210DB	1	HFJ1011H
18	ENGINE HARNESS	HFJ3624110DD	1	HFJ1011G
		HFJ3624110DL	1	HFJ1011H
19	CHASSIS HARNESS	HFJ3724610DA-A3	1	HFJ1011G
		HFJ3724610FY	1	HFJ1011H
20	REALY BRACKET	HFJK3724101DB	1	
21	BOLT	Q/2A-CJ-36 M5X14	1	HFJ1011G
22	ECU	HFJ3601100DG	1	
23	ECU BRACKET	HFJ3601005DA	1	

FIGURE 109 WIPER MOTOR & BLADES

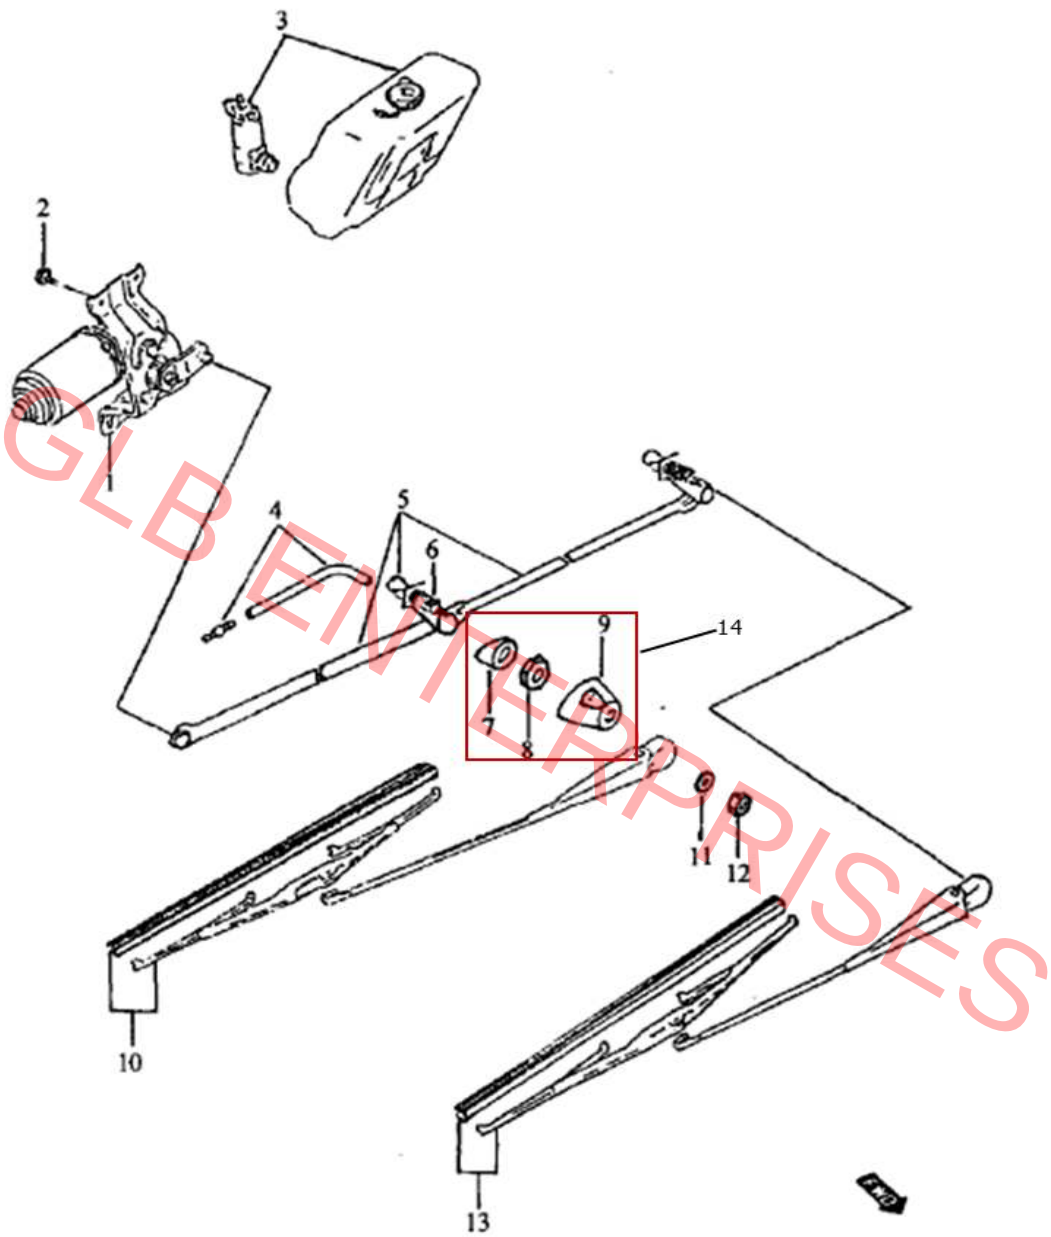

#14, HFJ5205120DA, PART OF HFJ5205120DA

FIGURE 109 WIPER MOTOR & BLADES

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	WIPER MOTOR W/ BRACKET	HFJ5205100DA	1	HFJ6371B, HFJ6371C, HFJ1011G, FHJ1011G
2	BOLT	Q/2A-CJ-30 M6X16	4	
3	WINDSHIELD WASHER TANK W/MOTOR	HFJ5207120DA	1	
4	FRONT WASHER HOSE	HFJ5207130DA	1	
5	WIPER LINK ASM	HFJ5205120DA	1	
6	FRONT WASHER NOZZLE	HFJ5207110DA	2	
7	SLANT WISE MAT	HFJ5205121DA	2	
8	NUT	HFJ5205122DA	2	
9	COVER	HFJ5207111DA	2	
10	WIPER ARM ASM LH	HFJ5205130DA	1	
	WIPER BLADE LH	HFJ5205132DA	1	
11	SPRING GASKET	Q40404	2	
12	HEX NUT	Q340B04	2	
13	WIPER ARM ASM RH	HFJ5205140DA	1	
	WIPER BLADE RH	HFJ5205142DA	1	

FIGURE 110 REAR WIPER MOTOR & BLADE

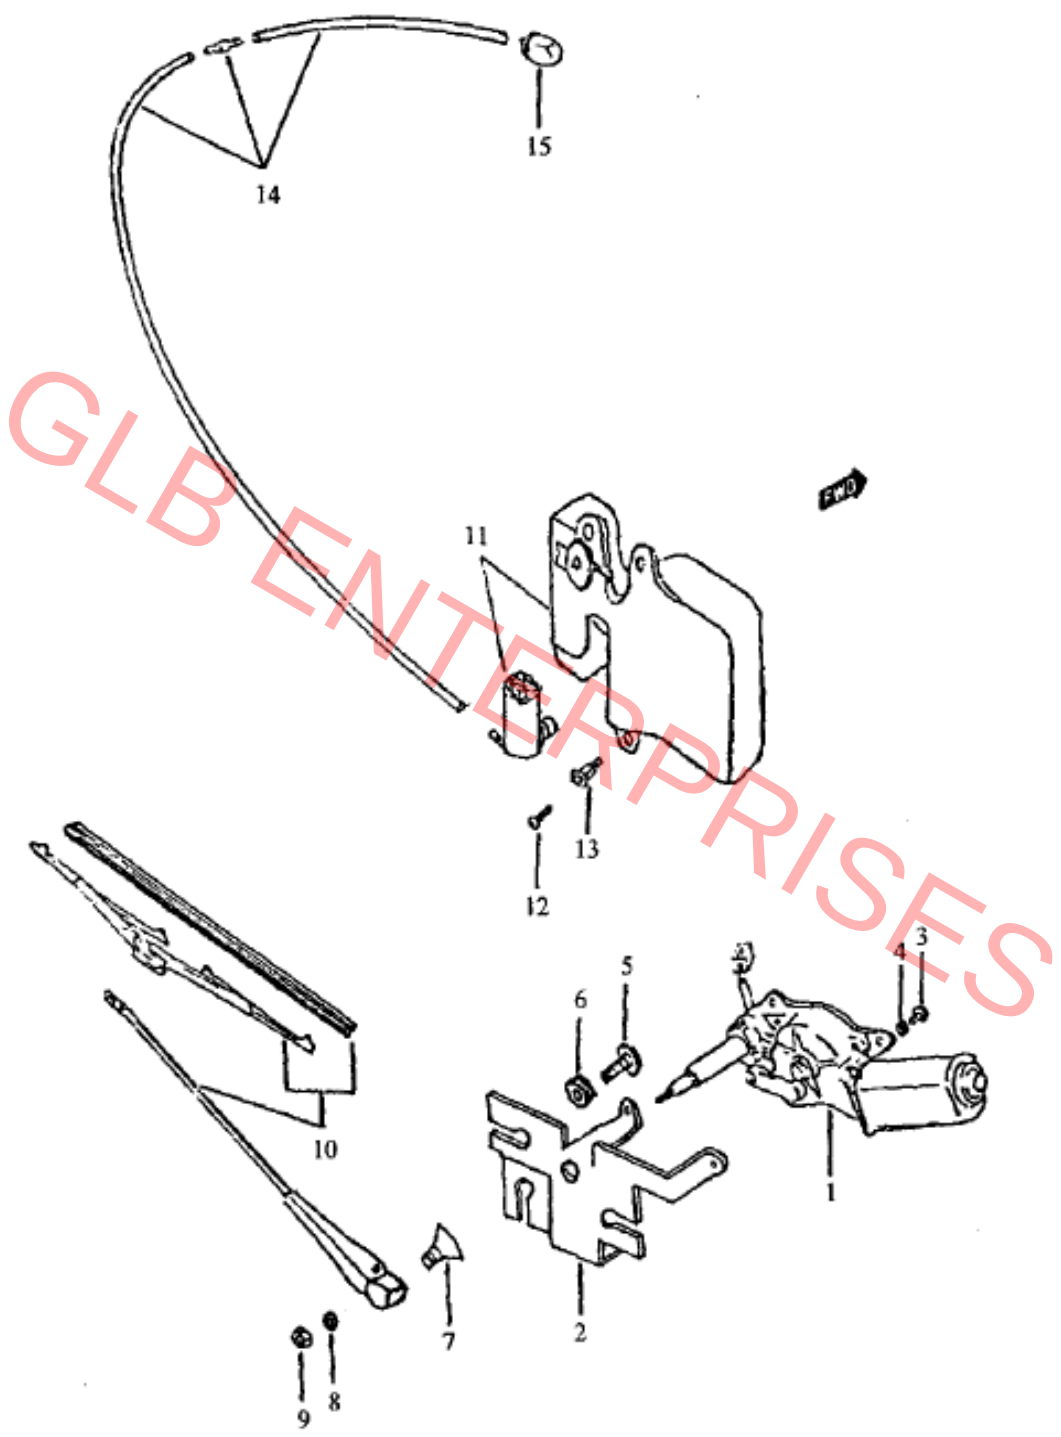


FIGURE 110 REAR WIPER MOTOR & BLADE

NO	DESCRIPTION	PART NO.	ALL	NOTE
	REAR WIPER MOTOR			
1	ASM	HFJ5205210DA	1	HFJ6371B, HFJ6371C
2	BRACKET	HFJ5205230DA	1	
3	BOLT	Q/2A-CJ-30 M6X20	3	
4	SPRING GASKET	HFJ5205212DA	3	
5	BOLT	Q/2A-CJ-30 M6X20	3	
6	GASKET	HFJ5205201DA	3	
7	NET	HFJ5205203DA	1	
8	NUT	Q340B06	1	
9	SPRING GASKET	Q40306	1	
	REAR WIPER ARM & BLADE ASM	HFJ5205220DA	1	
10				
11	REAR WASHER TANK SNAP HEAD	HFJ5207220DA	1	
12	OSCILLATING	Q/2A-CJ-13A M4X12	3	
13	NYLON NUT	Q/2AM35-4	3	
14	REAR WASHER HOSE	HFJ5207230DA	1	
15	REAR WASHER NOZZLE	HFJ5207210DA	1	

FIGURE 111 FRONT HEAD LAMP

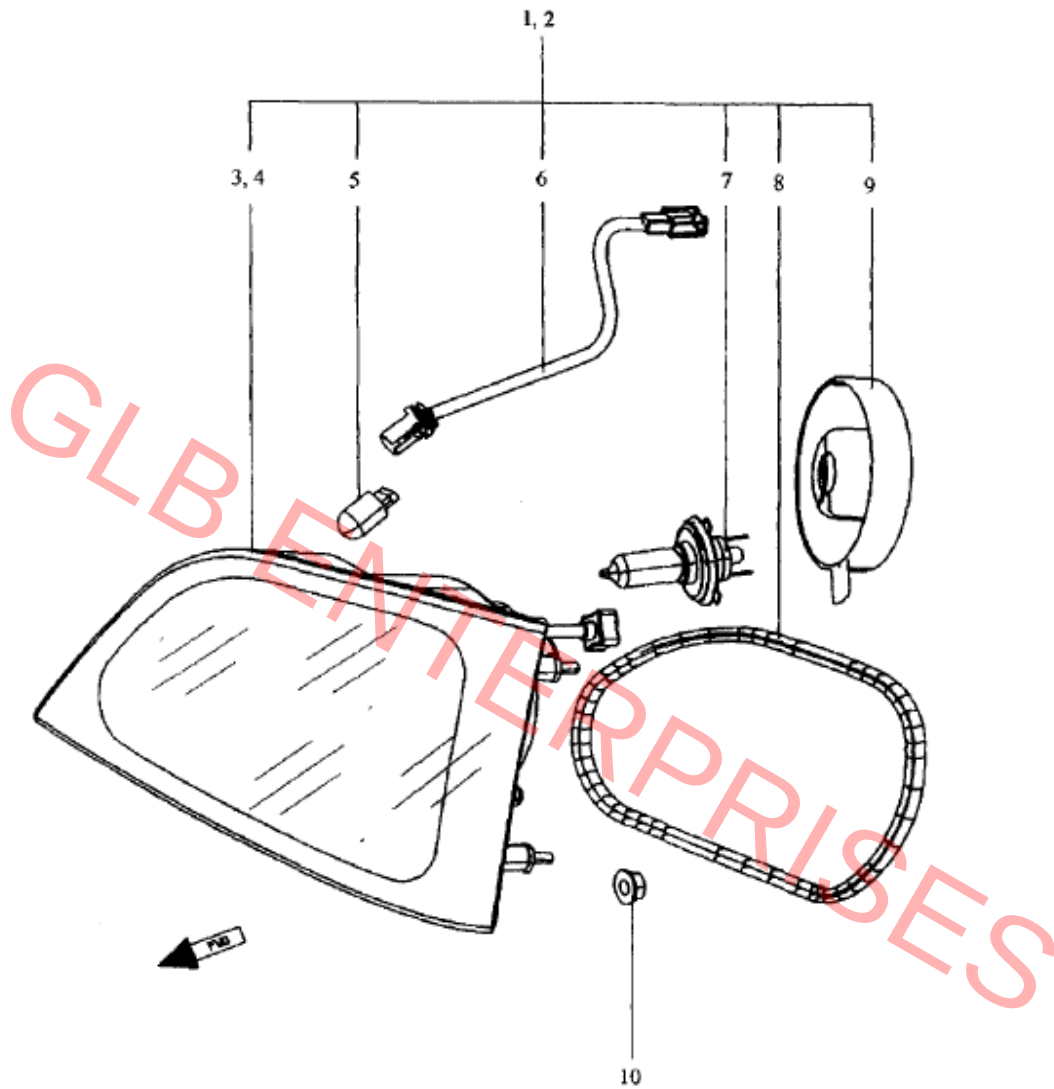


FIGURE 111 FRONT HEAD LAMP

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	HEAD LAMP ASM LH	HFJ3711300DA	1	SAME AS FA, HFJ6371B, HFJ6371C, HFJ1011G, HFJ1011H
		HFJ3711300FA	1	HFJ6371B, HFJ6371C, HFJ1011G, HFJ1011H
2	HEAD LAMP ASM RH	HFJ3711400DA	1	SAME AS FA, HFJ6371B, HFJ6371C, HFJ1011G, HFJ1011H
		HFJ3711400FA	1	HFJ6371B, HFJ6371C, HFJ1011G, HFJ1011H

GLB ENTERPRISES

FIGURE 112 FRONT HEAD LAMP (CRYSTAL)

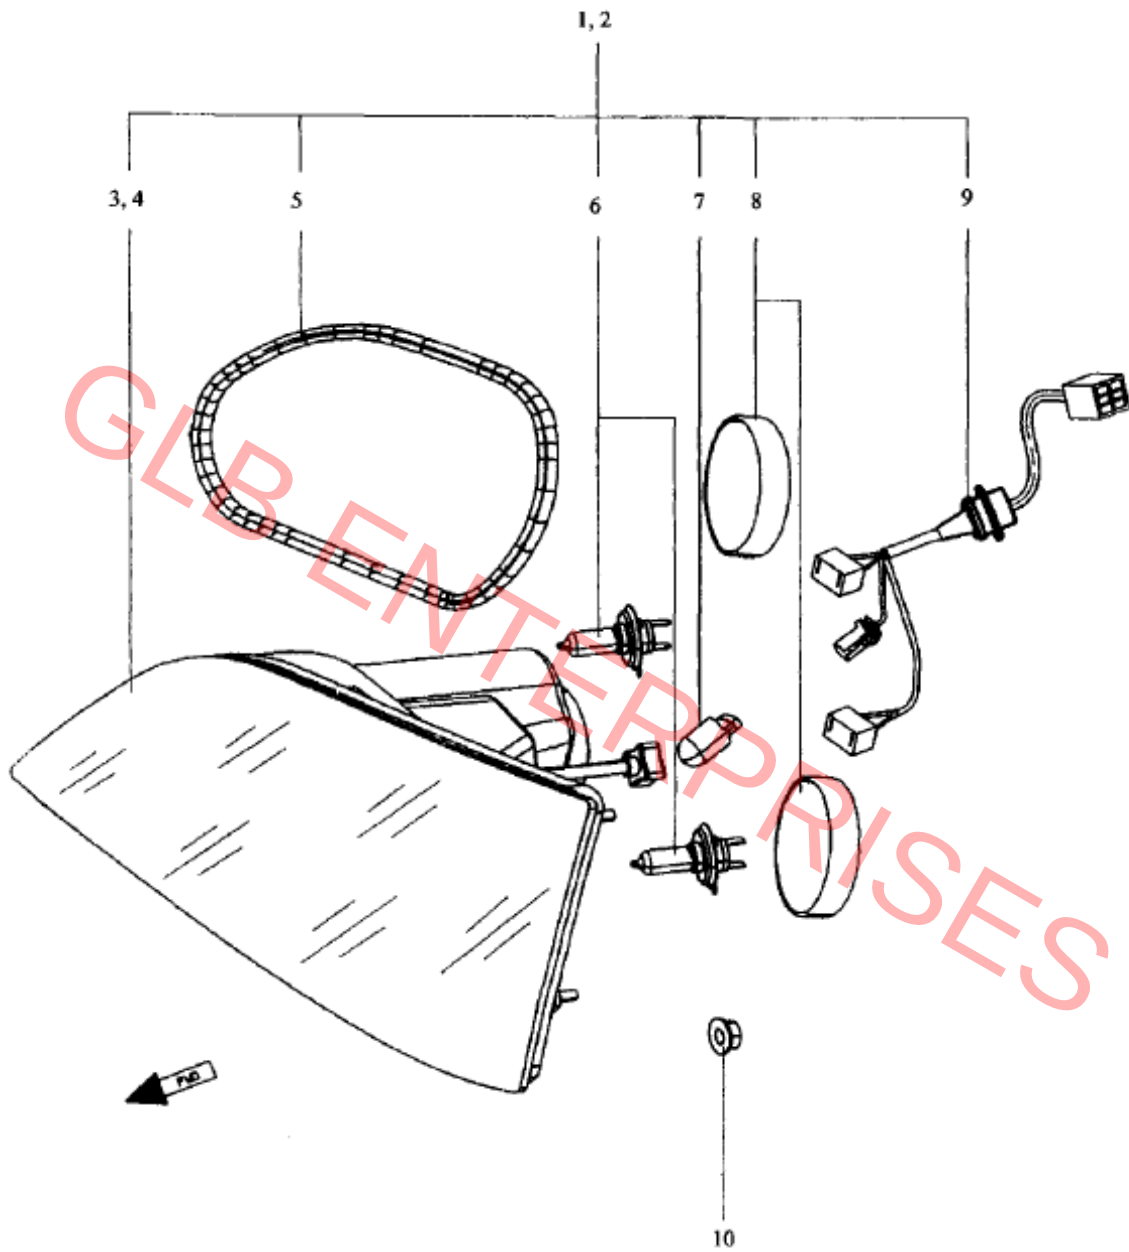


FIGURE 112 FRONT HEAD LAMP (CRYSTAL)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	HEAD LAMP ASM LH	HFJ3711300FB	1	HFJ6371B, HFJ6371C
2	HEAD LAMP ASM RH	HFJ3711400FB	1	HFJ6371B, HFJ6371C

GLB ENTERPRISES

FIGURE 113 FRONT HEAD LAMP (HFJ6376)

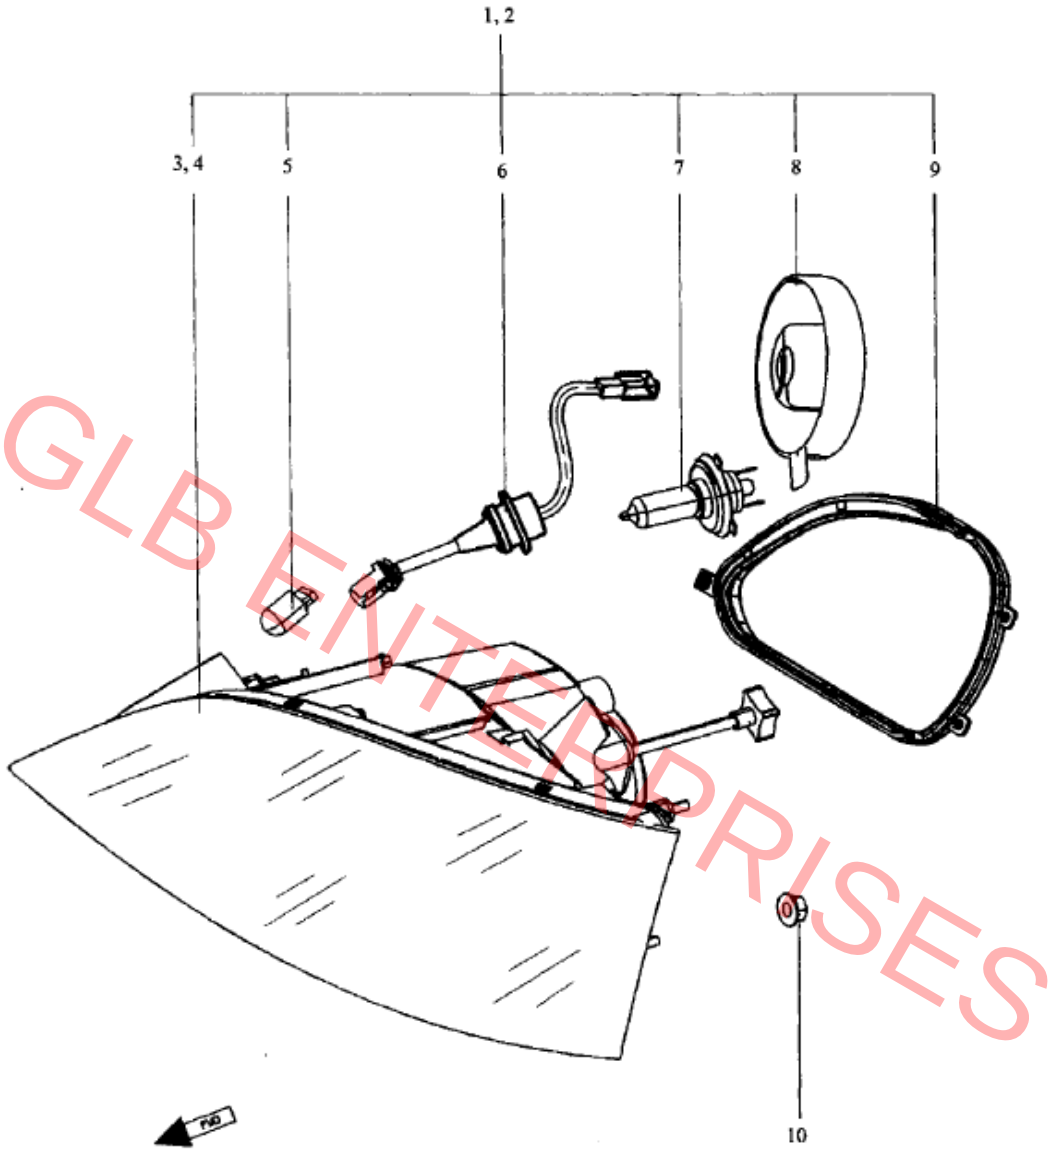


FIGURE 113 FRONT HEAD LAMP (HFJ6376)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	HEAD LAMP ASM LH	HFJ3711300FC	1	
2	HEAD LAMP ASM RH	HFJ3711400FC	1	

GLB ENTERPRISES

FIGURE 114 CORNER LAMP

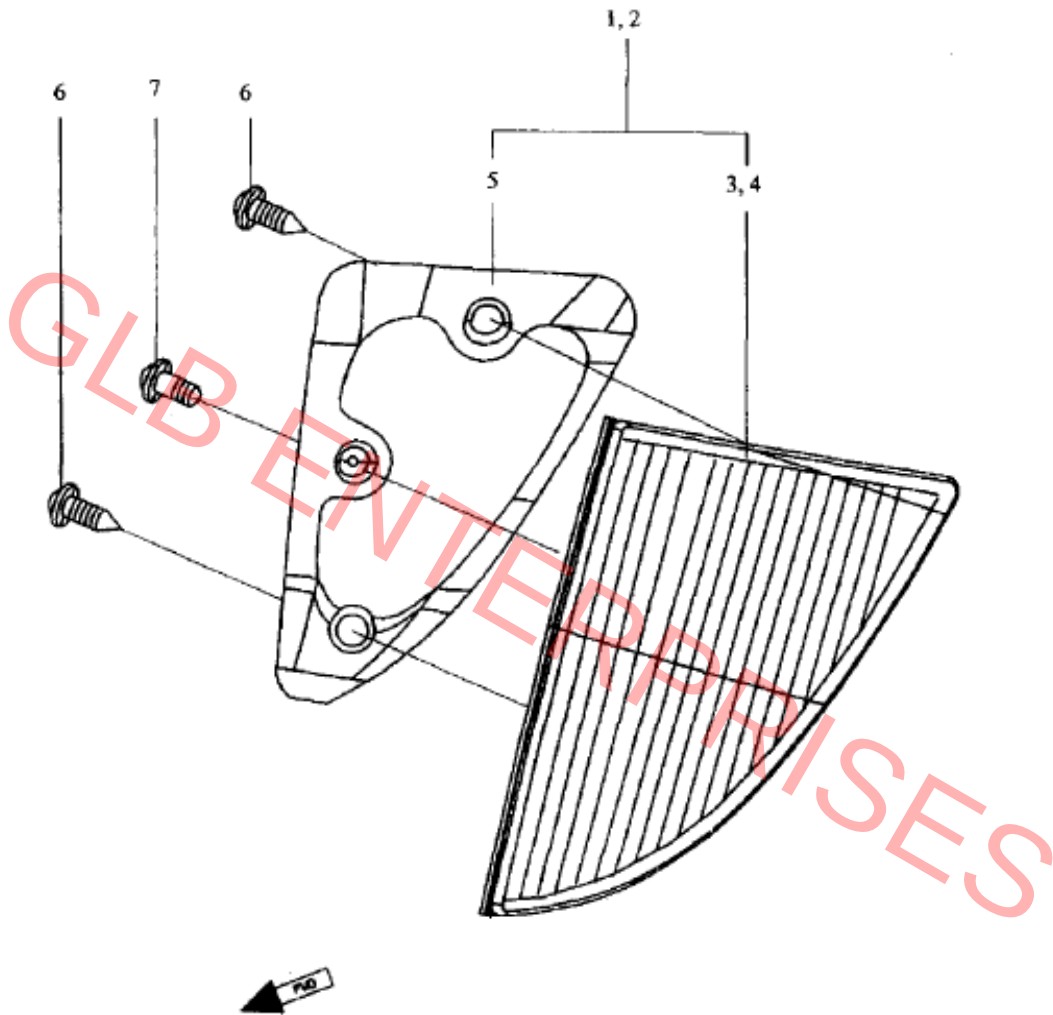


FIGURE 114 CORNER LAMP

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	CORNER LAMP ASM LH	HFJ3712110DA	1	SAME AS FA, HFJ6371B, HFJ6371C
		HFJ3712110FA	1	HFJ1011G, HFJ1011B
2	CORNER LAMP ASM RH	HFJ3712120DA	1	SAME AS FA, HFJ6371B, HFJ6371C
		HFJ3712120FA	1	HFJ1011G, HFJ1011B

GLB ENTERPRISES

FIGURE 115 CORNER LAMP (HFJ6376)

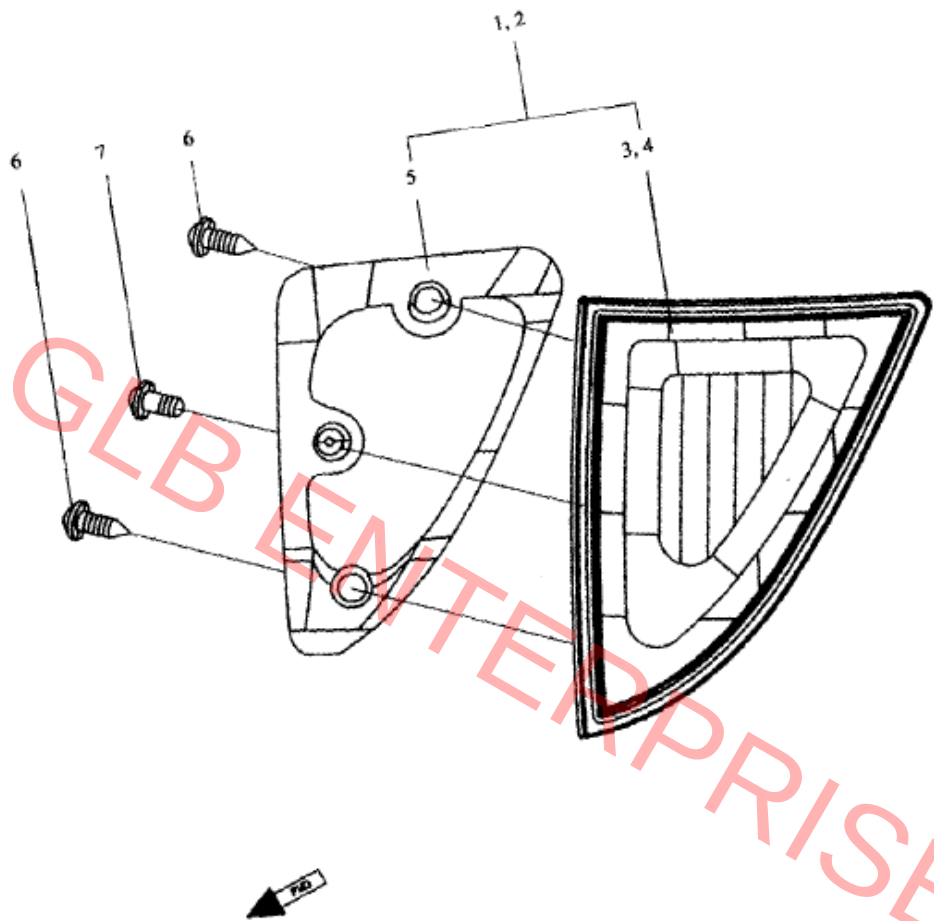


FIGURE 115 CORNER LAMP (HFJ6376)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	CORNER LAMP ASM LH	HFJ3712110FC	1	
2	CORNER LAMP ASM RH	HFJ3712120FC	1	

GLB ENTERPRISES

FIGURE 116 CABIN LAMP

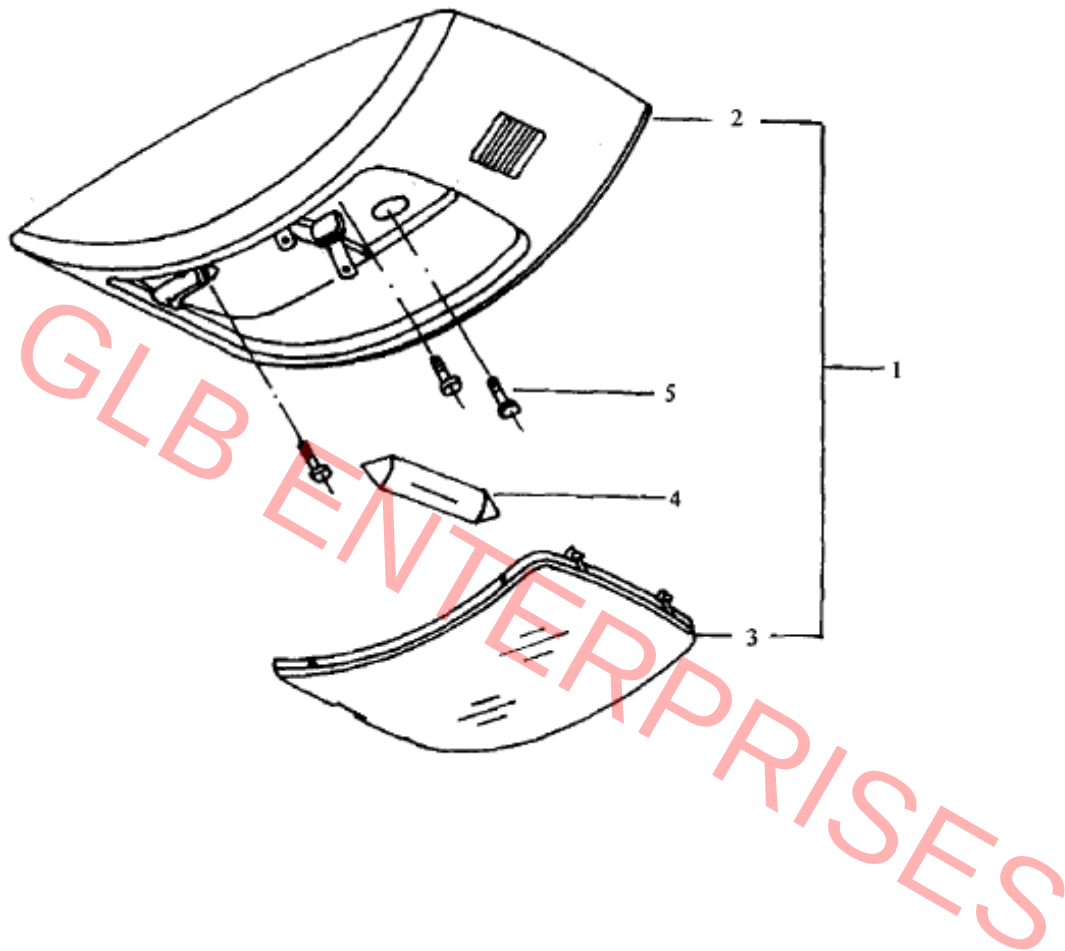


FIGURE 116 CABIN LAMP

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	CABIN DOME LAMP ASM	HFJ3714110FA	1	HFJ6371B, HFJ6371C, HFJ6376, HFJ1011G, HFJ1011H
		HFJ3714210FA	1	PASSENGER LAMP, HFJ6371B, HFJ9371C, FHJ6376

GLB ENTERPRISES

FIGURE 117 TAIL LAMP

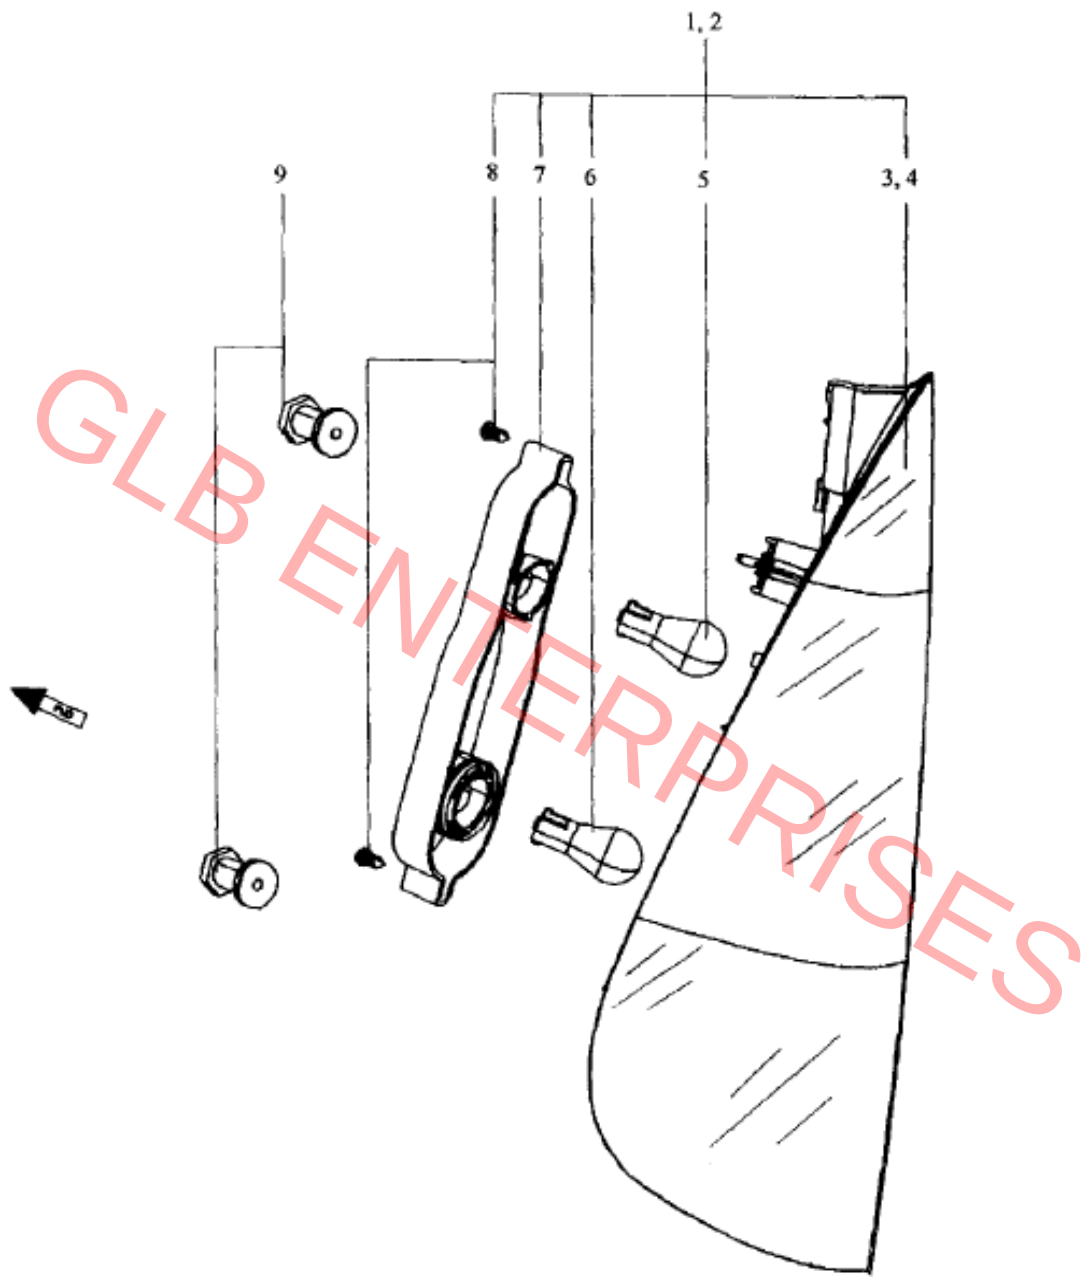


FIGURE 117 TAIL LAMP (VAN TYPE I)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	TAIL LAMP ASM LH	HFJ3716110FA	1	HFJ6371B, HFJ9371C, MINYI
2	TAIL LAMP ASM RH	HFJ3716120FA	1	HFJ6371B, HFJ9371C, MINYI

GLB ENTERPRISES

FIGURE 118 TAIL LAMP (VAN TYPE II)

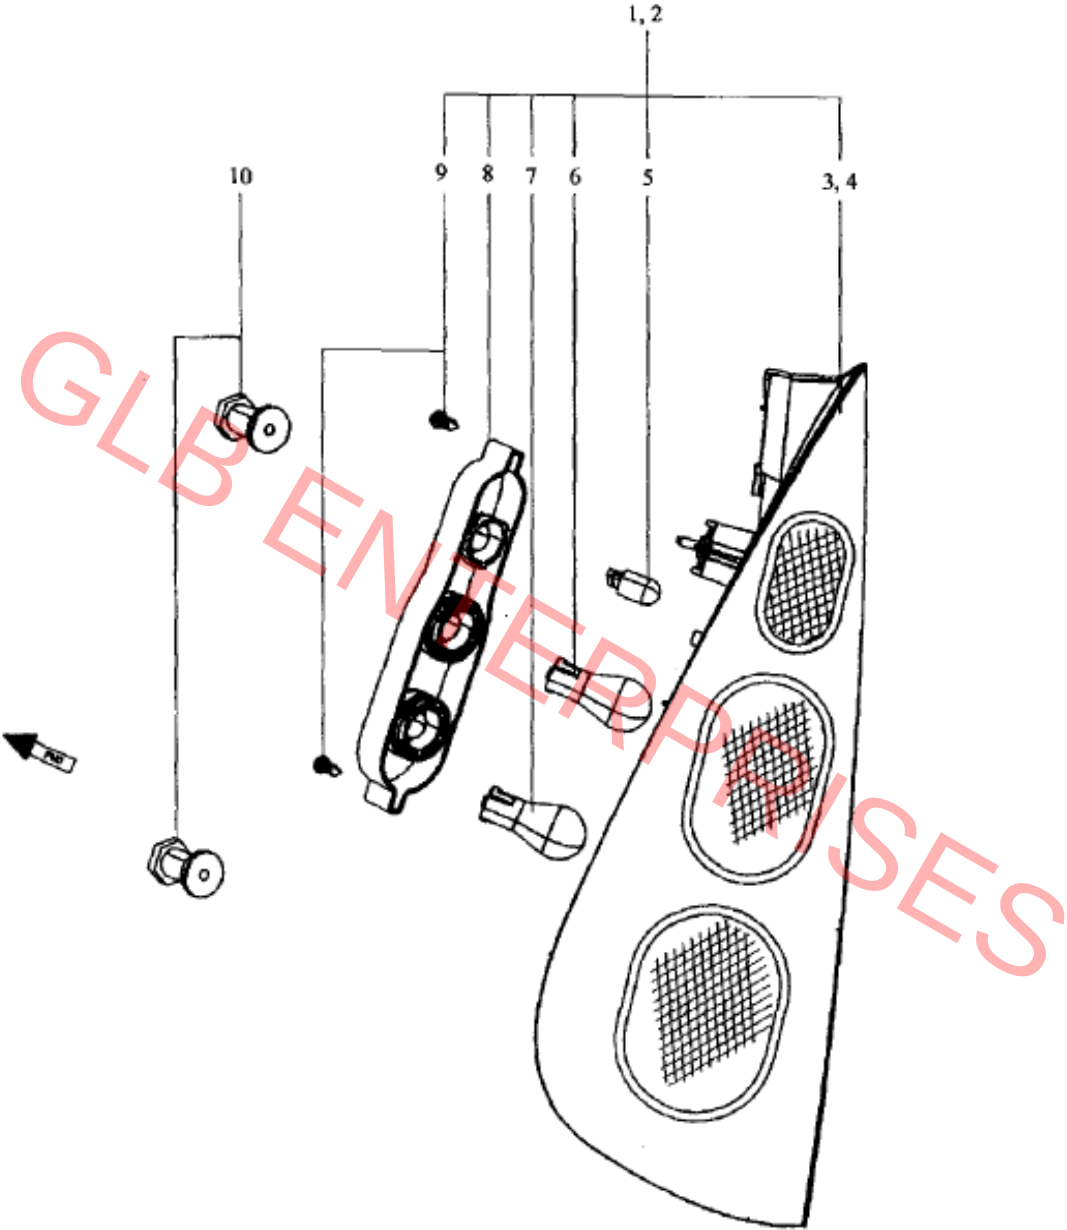


FIGURE 118 TAIL LAMP (VAN TYPE II)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	TAIL LAMP ASM LH	HFJ3716110FB	1	HFJ6371B, HFJ9371C, HFJ6376
2	TAIL LAMP ASM RH	HFJ3716120FB	1	HFJ6371B, HFJ9371C, HFJ6376
3	BACKUP LAMP W/ALARM	HFJ3729110DA	1	

GLB ENTERPRISES

FIGURE 119 COMBINATION LAMP

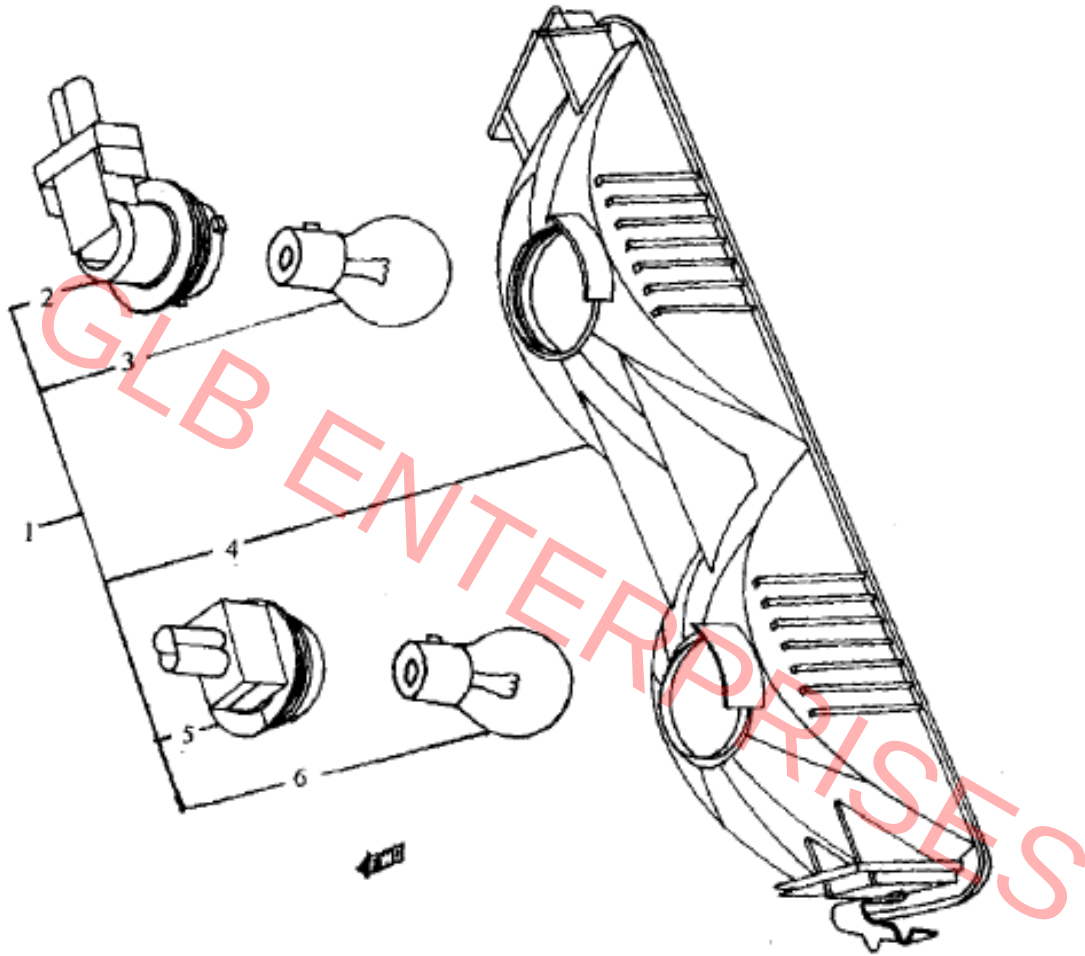


FIGURE 119 COMBINATION LAMP

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	REAR COMBINATION LAMP	HFJ3773100DA	1	HFJ6371B
		HFJ3773100FA	1	HFJ6371C
		HFJ3773120DA	1	HFJ6376

ALL ARE BUMPER MOUNT



GLB ENTERPRISES

FIGURE 120 TAIL LAMP (TRUCK)

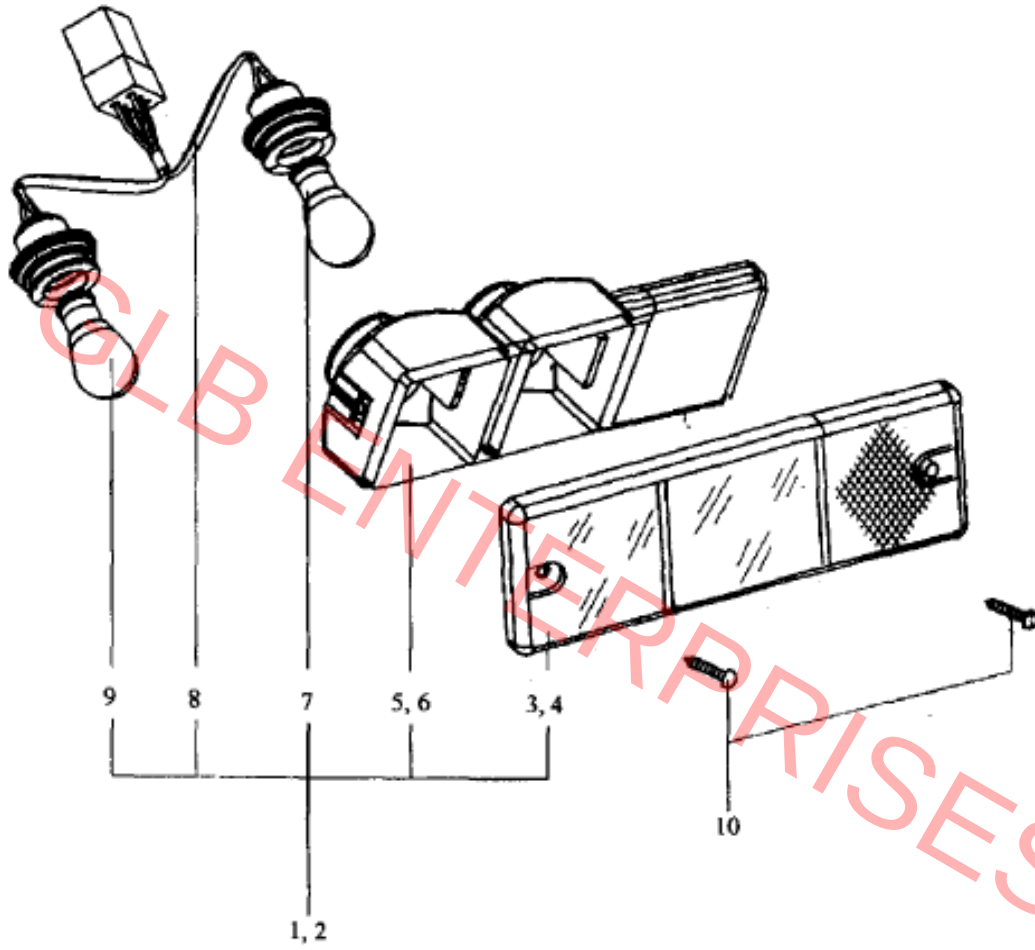


FIGURE 120 TAIL LAMP (TRUCK)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	TAIL LAMP ASM LH	HFJ3773110DC	1	HFJ1011G, HFJ1011H, FEMAL PLUG
2	TAIL LAMP ASM RH	HFJ3773120DC	1	HFJ1011G, HFJ1011H, MALE PLUG
3-4	TAIL LAMP LENS LH/RH	HFJ3773113DC	2	

GLB ENTERPRISES

FIGURE 121 REAR FOG LAMP

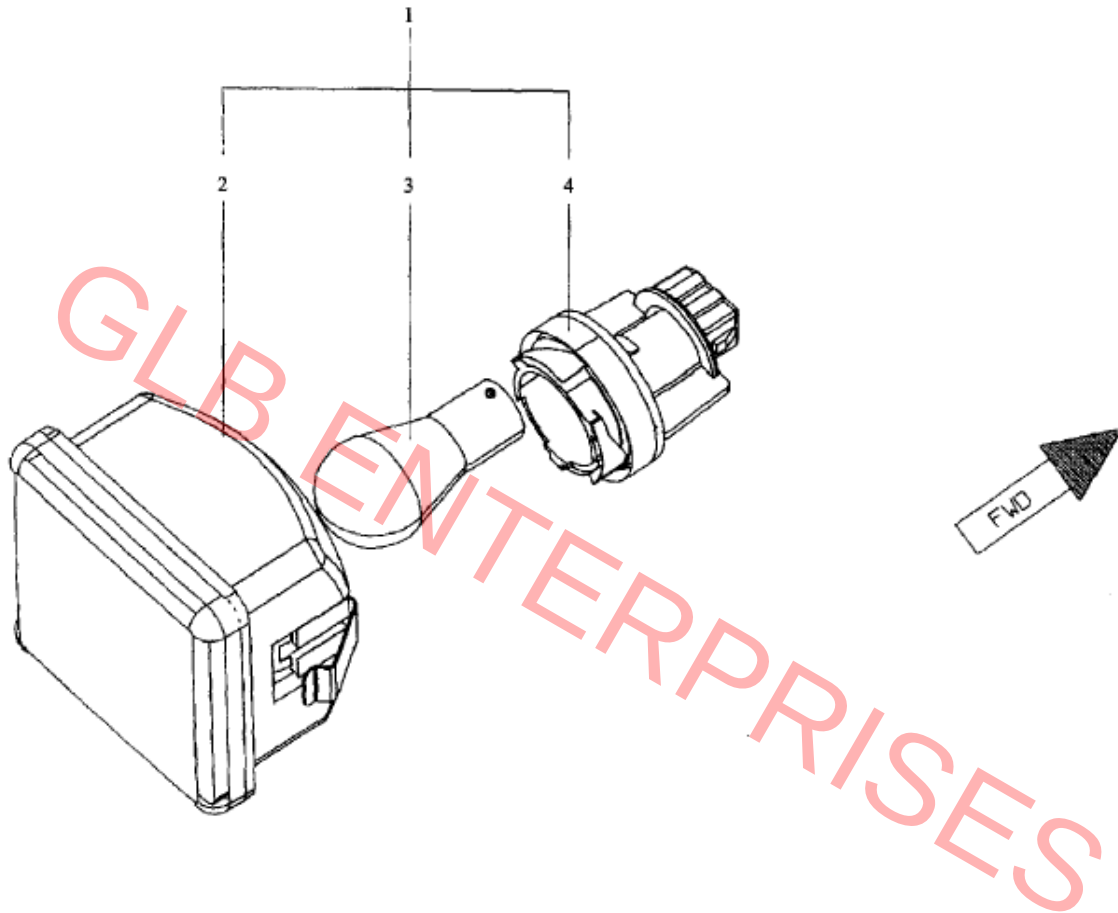


FIGURE 121 REAR FOG LAMP

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	REAR FOG LAMP	HFJ3732110DB	1	RED LENS

GLB ENTERPRISES

FIGURE 122 FRONT FOG LAMP (TYPE I)

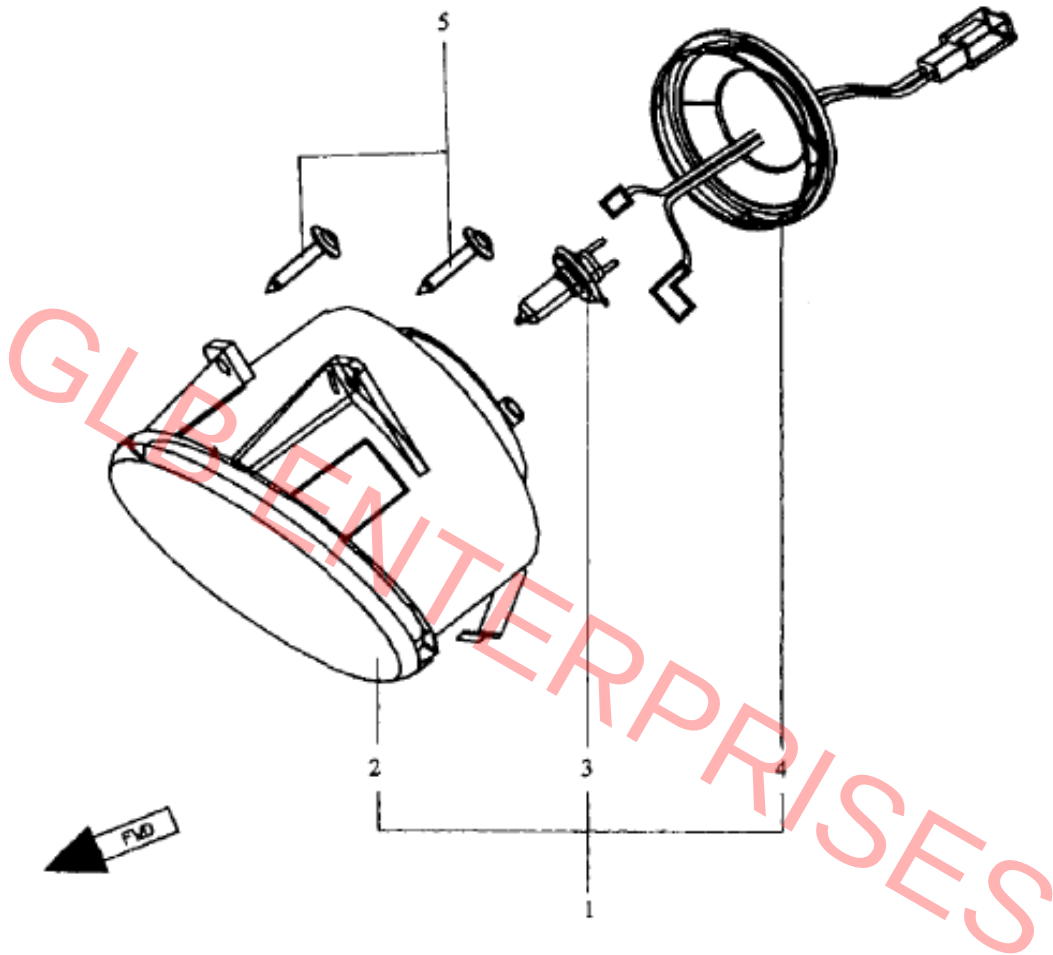


FIGURE 122 FRONT FOG LAMP

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	FRONT FOG LAMP LH/RH	HFJ3732110DA	2	HFJ1011H, HFJ1011H, HFJ6376

GLB ENTERPRISES

FIGURE 123 BACKUP LAMP

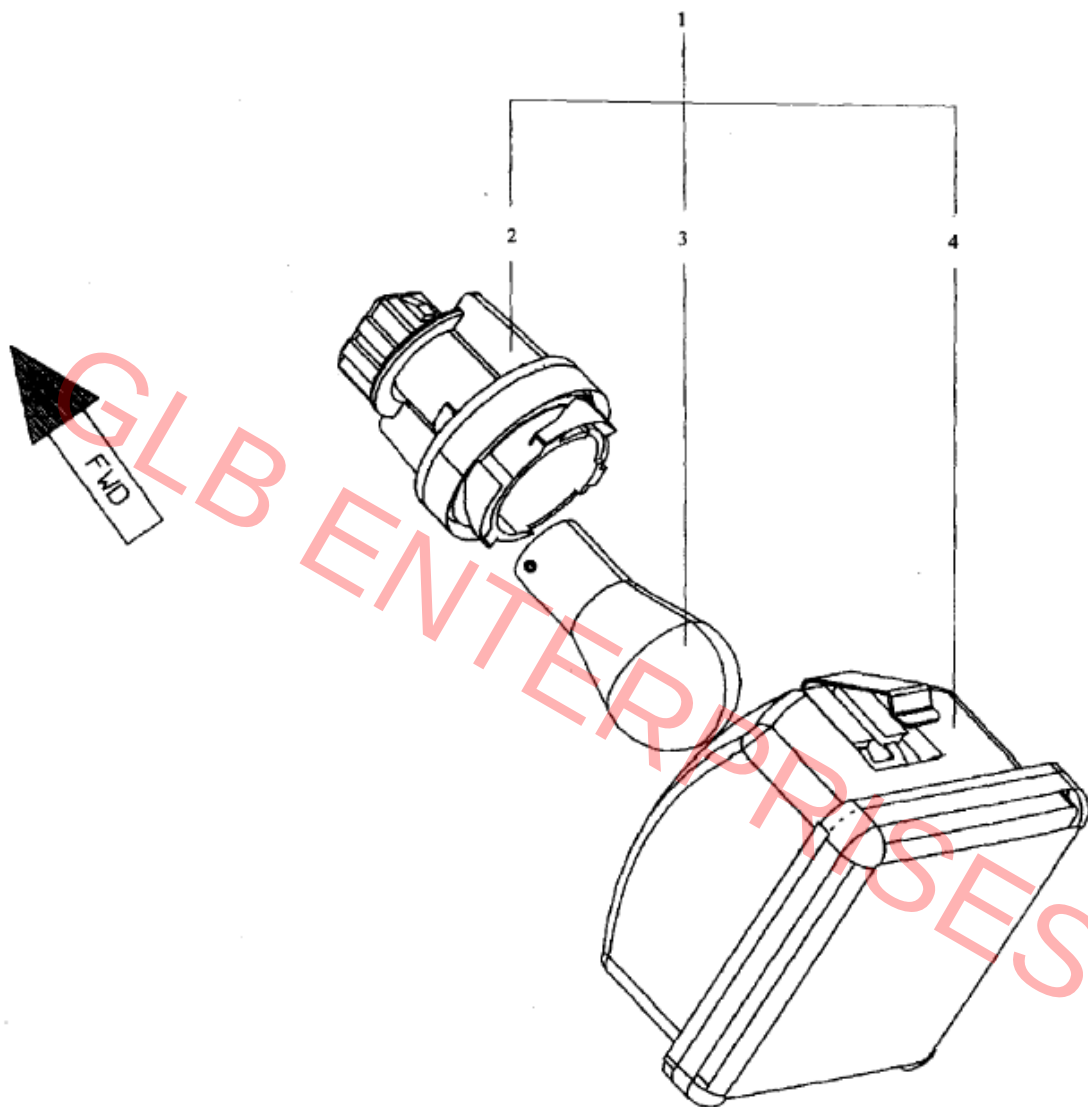


FIGURE 123 BACKUP LAMP

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	BACKUP LAMP ASM	HFJ3729100DA	2	HFJ1011H, HFJ1011H

GLB ENTERPRISES

FIGURE 124 LICENSE PLATE LAMP

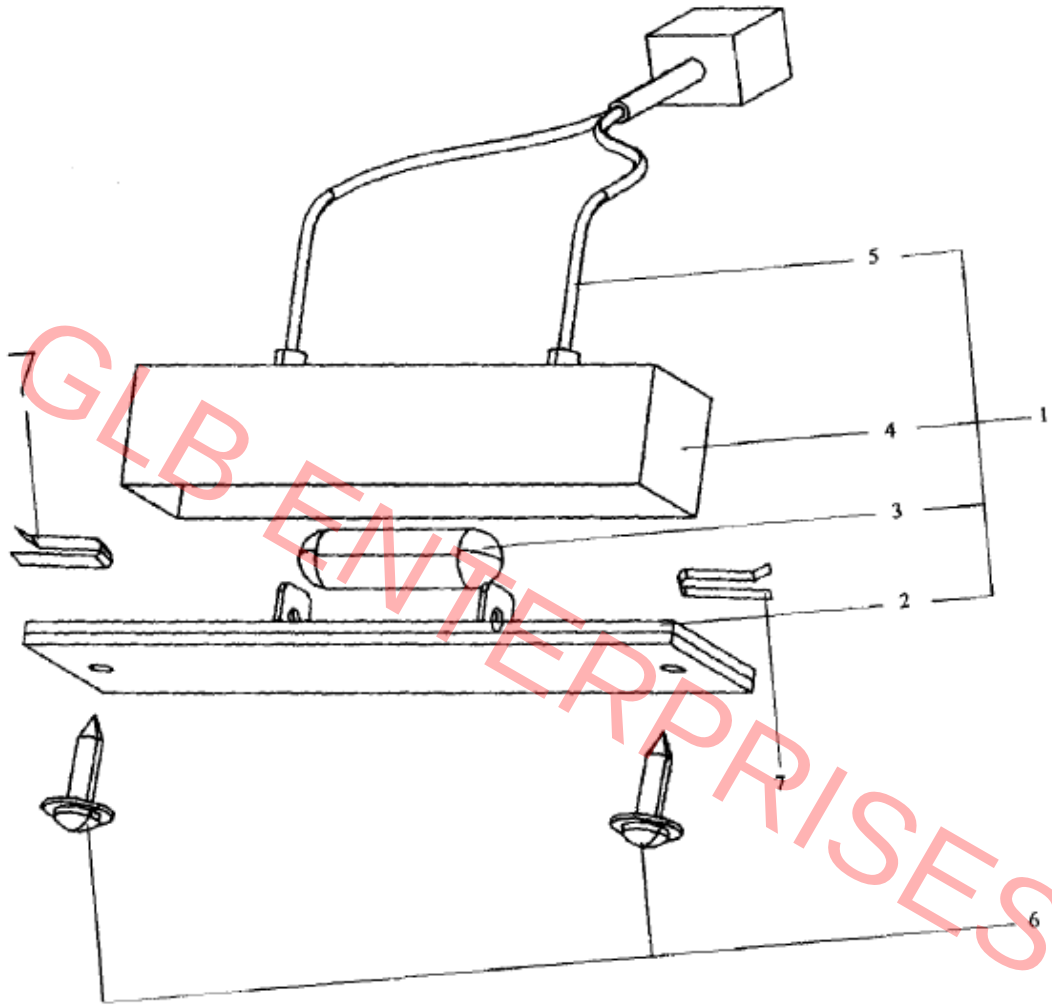


FIGURE 124 LICENSE PLATE LAMP

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	LICENSE PLATE LAMP ASM	HFJ3717100FA	1	HFJ6371B, HFJ6371C, HFJ6376
		HFJ3717100DB	1	HFJ1011B, HFJ1011H

GLB ENTERPRISES

FIGURE 125 REAR REFLECTOR

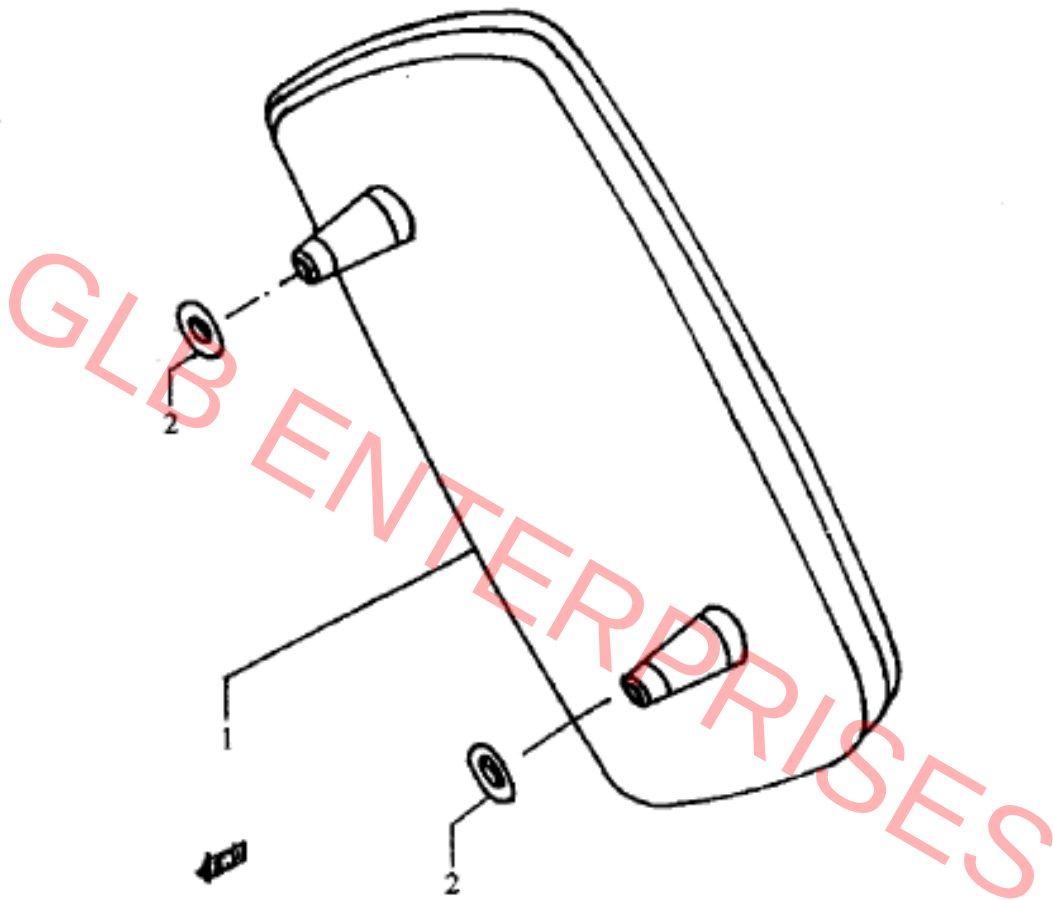


FIGURE 125 REAR REFLECTOR

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	REAR REFLECTOR	HFJ3760110FA	1	HFJ6371B, HFJ6371C, HFJ6376

GLB ENTERPRISES

FIGURE 126 FRONT TURN LAMP LAMP

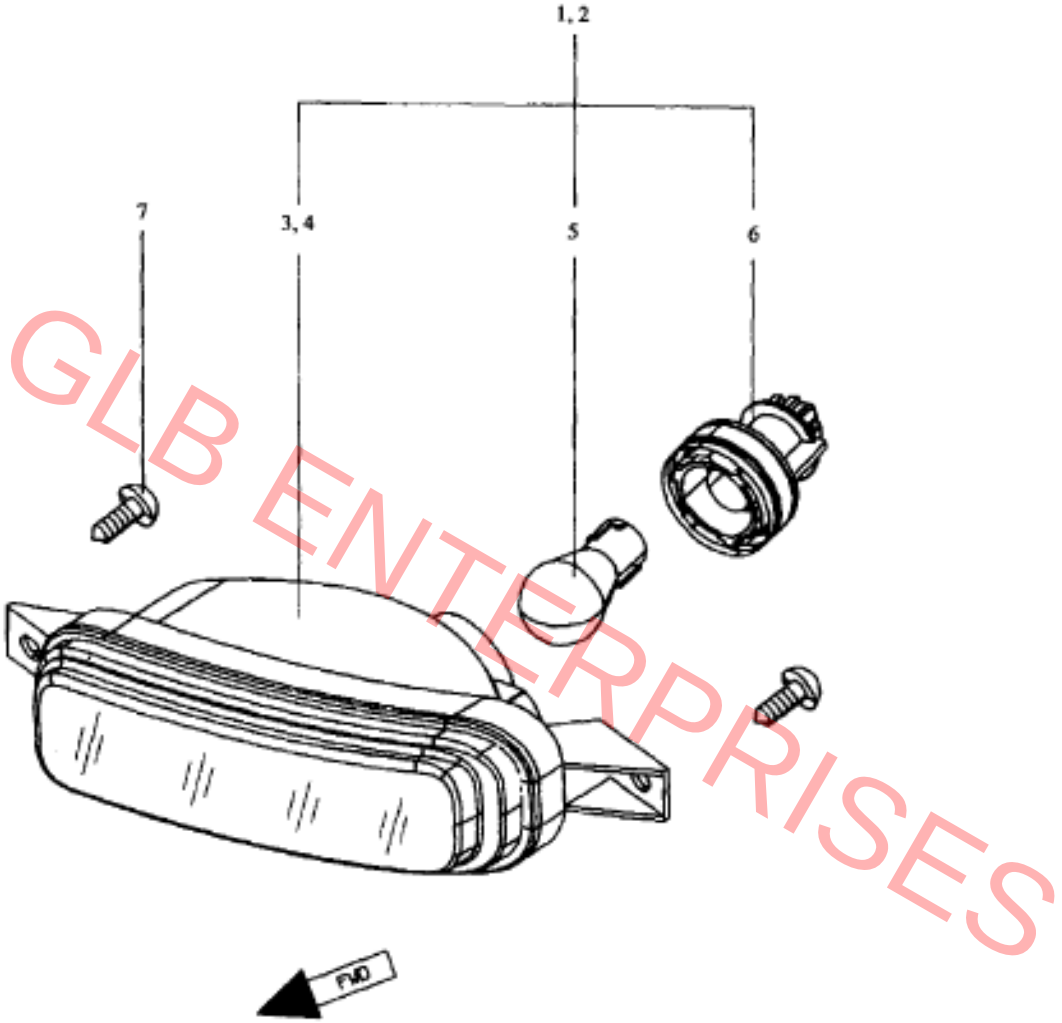


FIGURE 126 FRONT TURN LAMP LAMP

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	TURN SIGNAL LAMP ASM LH/RH	HFJ3726110DD	1	HFJ6371B, HFJ6371C

GLB ENTERPRISES

FIGURE 127 TURN SIGNAL LAMP

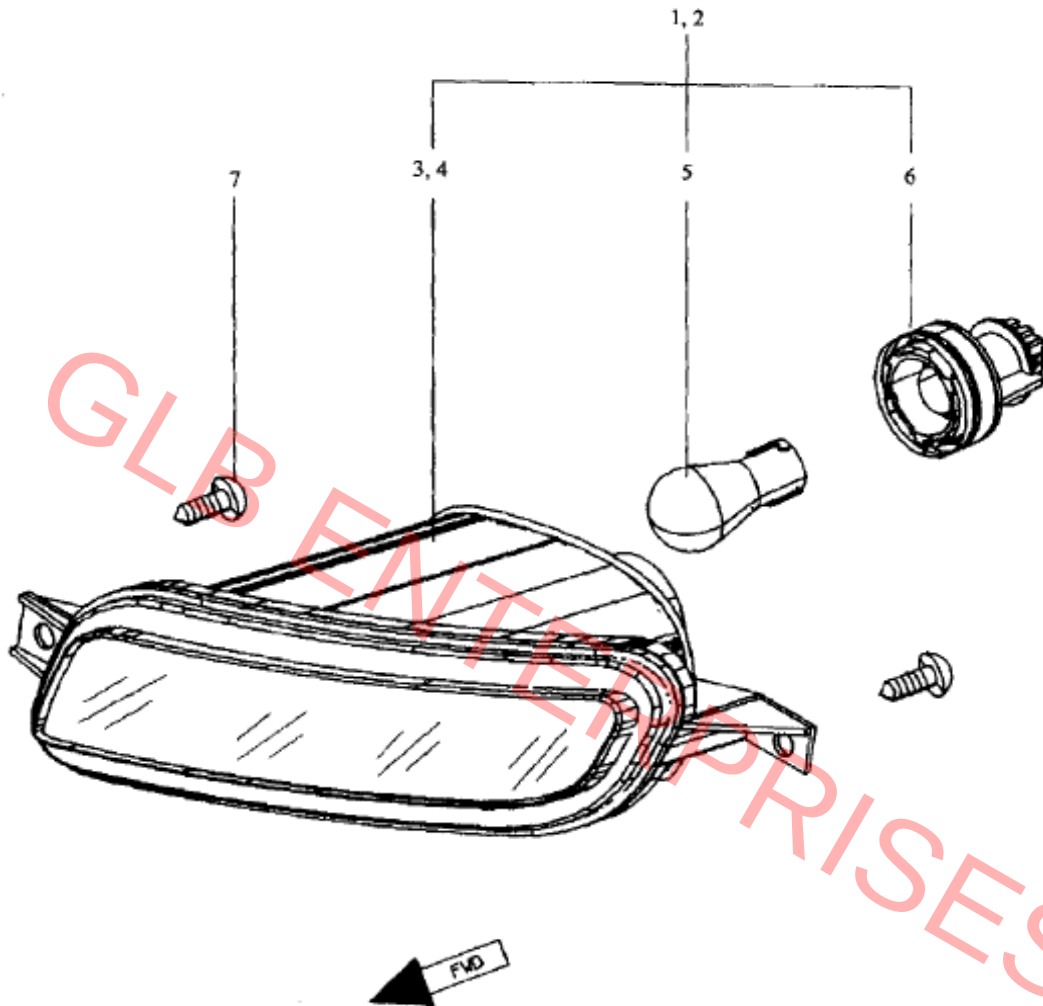


FIGURE 127 TURN SIGNAL LAMP

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	TURN SIGNAL LAMP ASM LH	HFJ3726110FA	1	HFJ6376, AMBER LENS
2	TURN SIGNAL LAMP ASM RH	HFJ3726120FA	1	HFJ6376, AMBER LENS

GLB ENTERPRISES

FIGURE 128 TURN SIGNAL LAMP

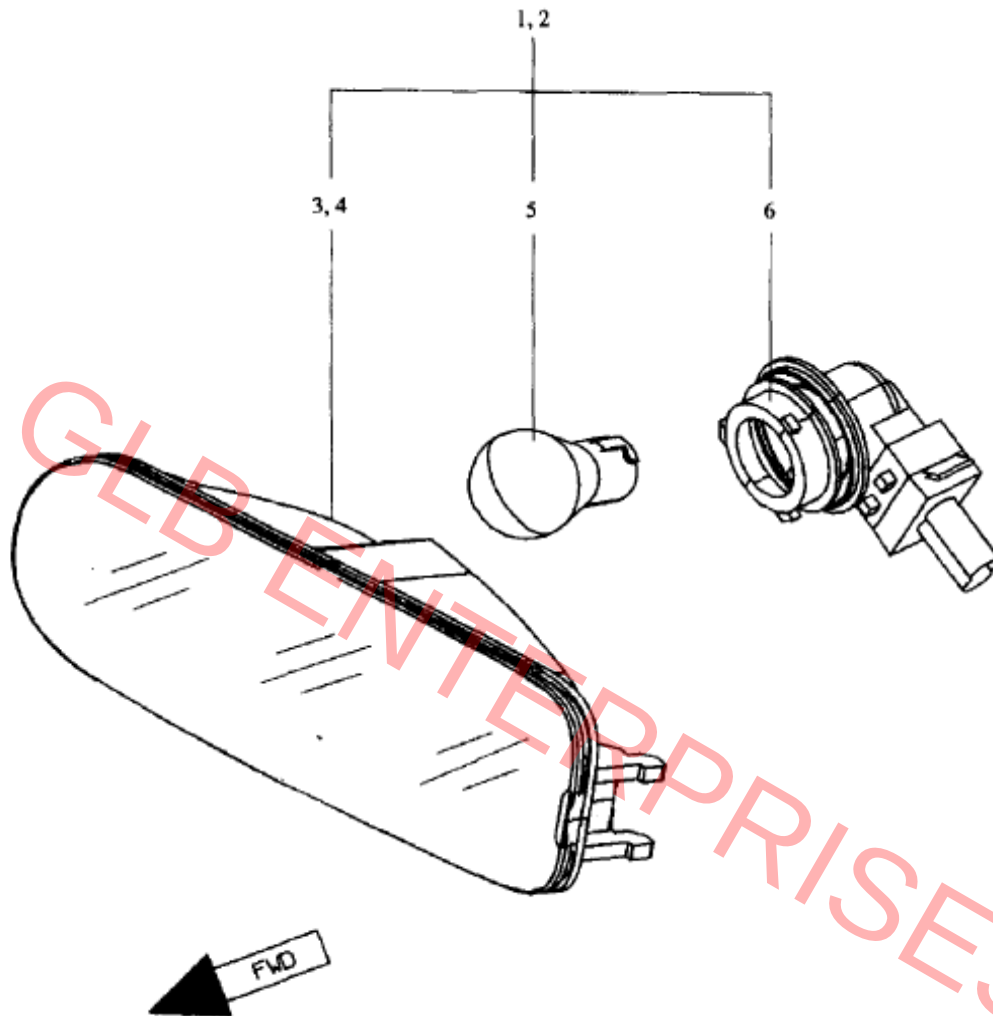


FIGURE 128 TURN SIGNAL LAMP

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	TURN SIGNAL LAMP ASM LH	HFJ3726110FA	1	HFJ1011G, HFJ1011H, CLEAR LENS
2	TURN SIGNAL LAMP ASM RH	HFJ3726120FA	1	HFJ1011G, HFJ1011H, CLEAR LENS

GLB ENTERPRISES

FIGURE 129 SIDE TURN SIGNAL LAMP

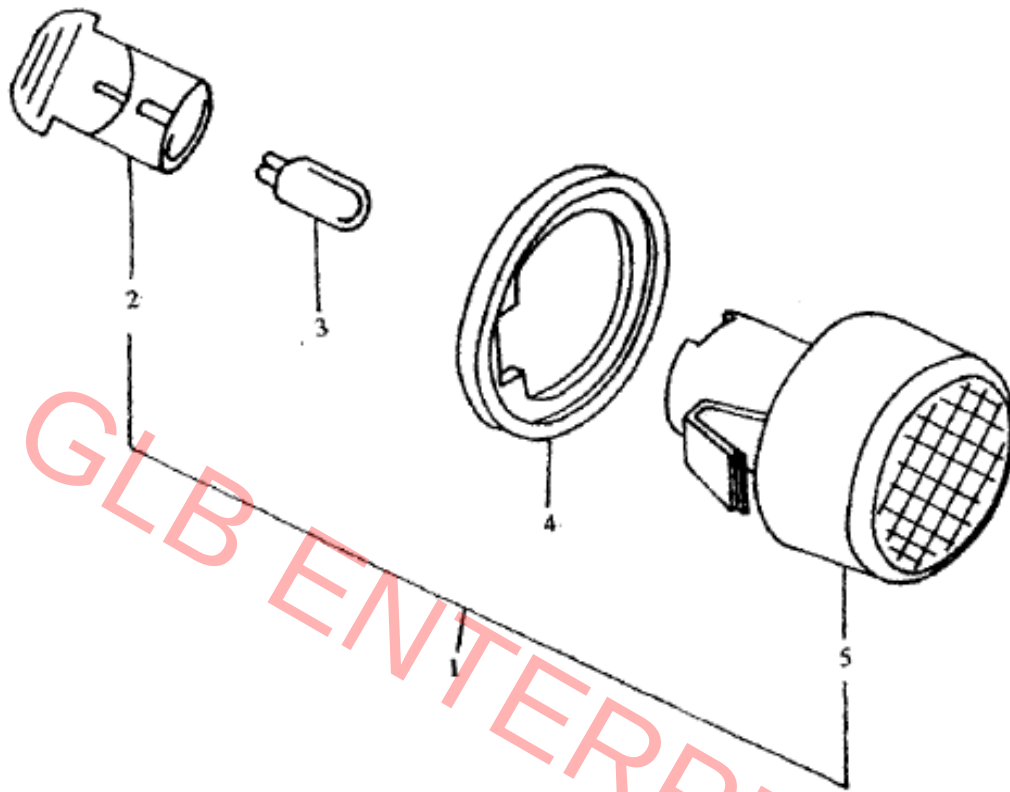


FIGURE 129 SIDE TURN SIGNAL LAMP

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	SIDE TURN SIGNAL LAMP ASM	HFJ3726310FA	1	ALL

GLB ENTERPRISES

FIGURE 130 HEATER SYSTEM

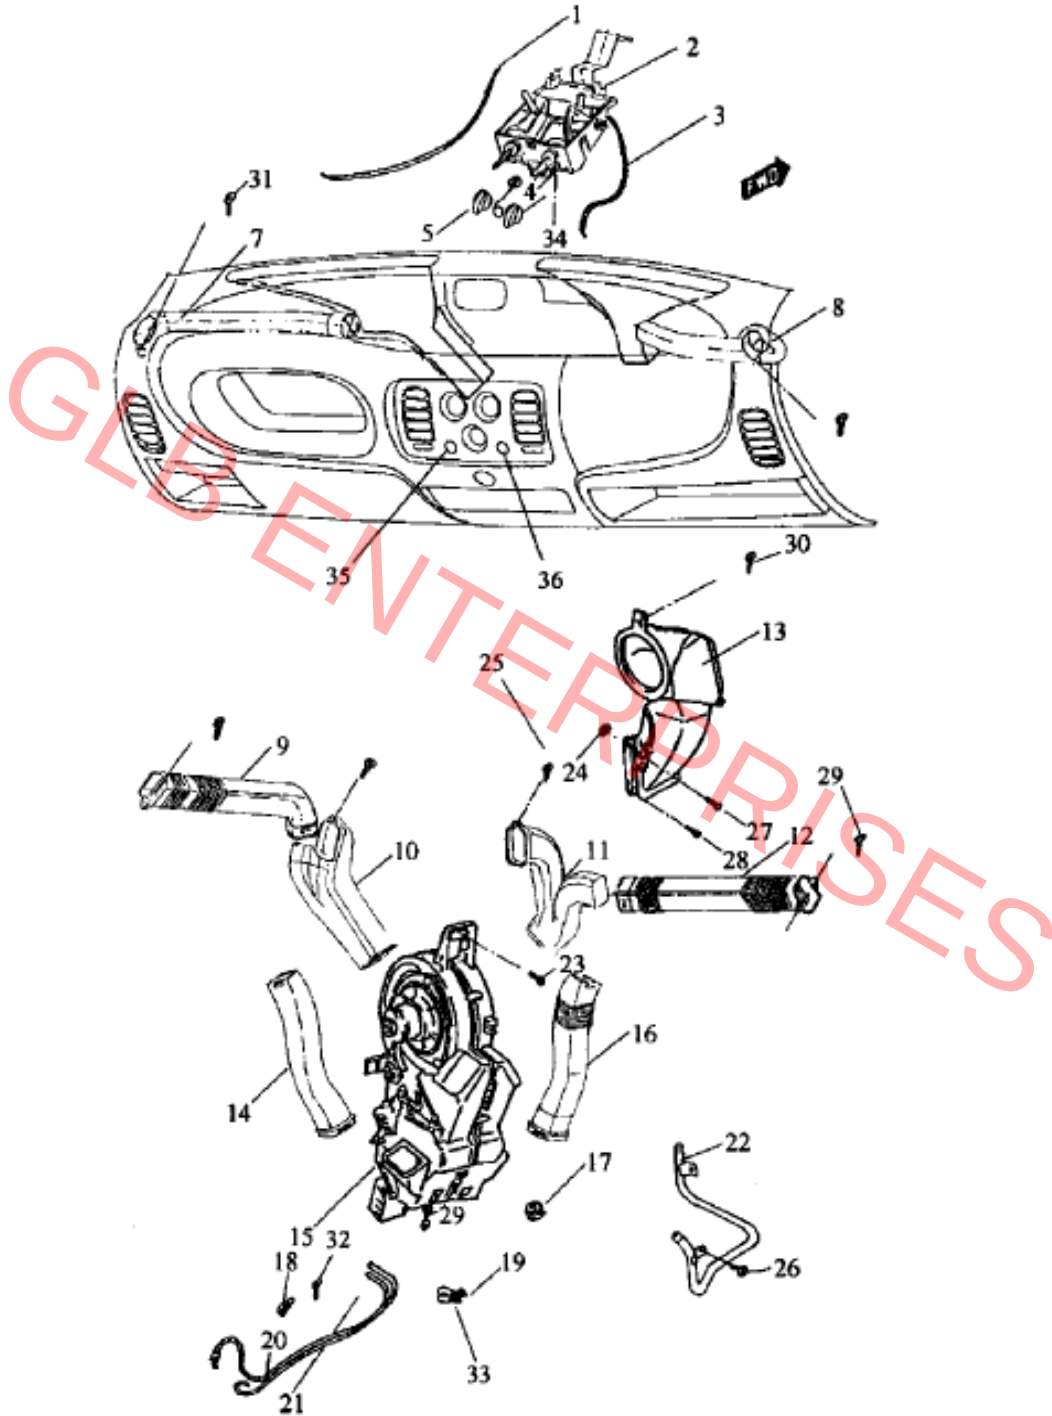


FIGURE 130 HEATER SYSTEM

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	TEMPERATURE CONTROL WIRE	HFJ8101021DA	1	
2	CONTROL MODULE	HFJ8101022DA	1	
3	CLIMATE CONTROL/BLEND SWITCH	HFJ8101050DA	1	
4	SPRING NUT	Q/2AM13-5-2	3	
5	HEATER CONTROL KNOB	HFJ8101017DA	2	BIG
6	BLOWER SWITCH	HFJ8101005DA	1	SEE PART NUMBER HFJ8101009FA
7	DEFROST CONNECT DUCT LH	HFJ8101015DA	1	
8	DEFROST CONNECT DUCT RH	HFJ8101023DA	1	
9	VENT DUCT LH	HFJ8101016DA	1	
10	CENTRAL VENT DUCT LH	HFJ8101007DA	1	
11	CENTRAL VENT DUCT RH	HFJ8101006DA	1	
12	VENT DUCT RH	HFJ8101024DA	1	
13	AIR INTAKE BOX	HFJ8101040DA	1	
14	DEFROST DUCT LH	HFJ8101008DA	1	
15	HEATER ASM	HFJ8101060DA	1	
16	DEFROST DUCT RH	HFJ8101005CA	1	
17	RUBBER RING	HFJ8101009CA	2	
18	CLAMP	HFJ8101027CA	4	
19	CLIP	HFJ8101011CA	2	
20	HEATER INLET HOSE	HFJ8101025CA	1	HFJ6371, HFJ6371B, HFJ6371C
21	WATER HOSE HEATER OUTLET	HFJ8101026CA	1	HFJ6371, HFJ6371B, HFJ6371C
	WATER HOSE HEATER OUTLET	HFJ8101026DC	1	HFJ6371, HFJ6371B
22	HEATER OUTLET HOSE	HFJ8101110CA	1	HFJ6371, HFJ6371B
23	BOLT	Q/2A-CJ-30 M6X20	1	
24	NUT	Q/2A-CJ-44 M6	6	
25	SCREW	Q/2A-CJ-47A-ST5.5X13	2	
26	BOLT	Q/2A-CJ-30 M8X12	1	
27	BOLT	Q/2A-CJ-30 M6X50	2	
28	BOLT	Q/2A-CJ-30 M6X50	2	
29	SCREW	Q/2A-CJ-48A-ST3.5X13	4	
30	SCREW	Q/2A-CJ-47A-ST6.3X16	1	
31	SCREW	Q/2A-CJ-47A-ST3.5X16	2	
32	SCRW	Q/2A-CJ-47A-ST4.8X16	1	
33	SCREW	Q/2A-CJ-25A M6X16	1	
34	SCREW	Q/2A-CJ-13A M5X16	3	
35	A/C SWITCH	HFJ8101009DB	1	WITH A/C
NS	FAN BLOWER SWITCH	HFJ8101009FA	1	
36	RECIRCULATING/ OUTSIDE DAMPER CONTROL SWITCH	HFJ8101011DA	1	



FIGURE 131 HEATER ASM & BOX

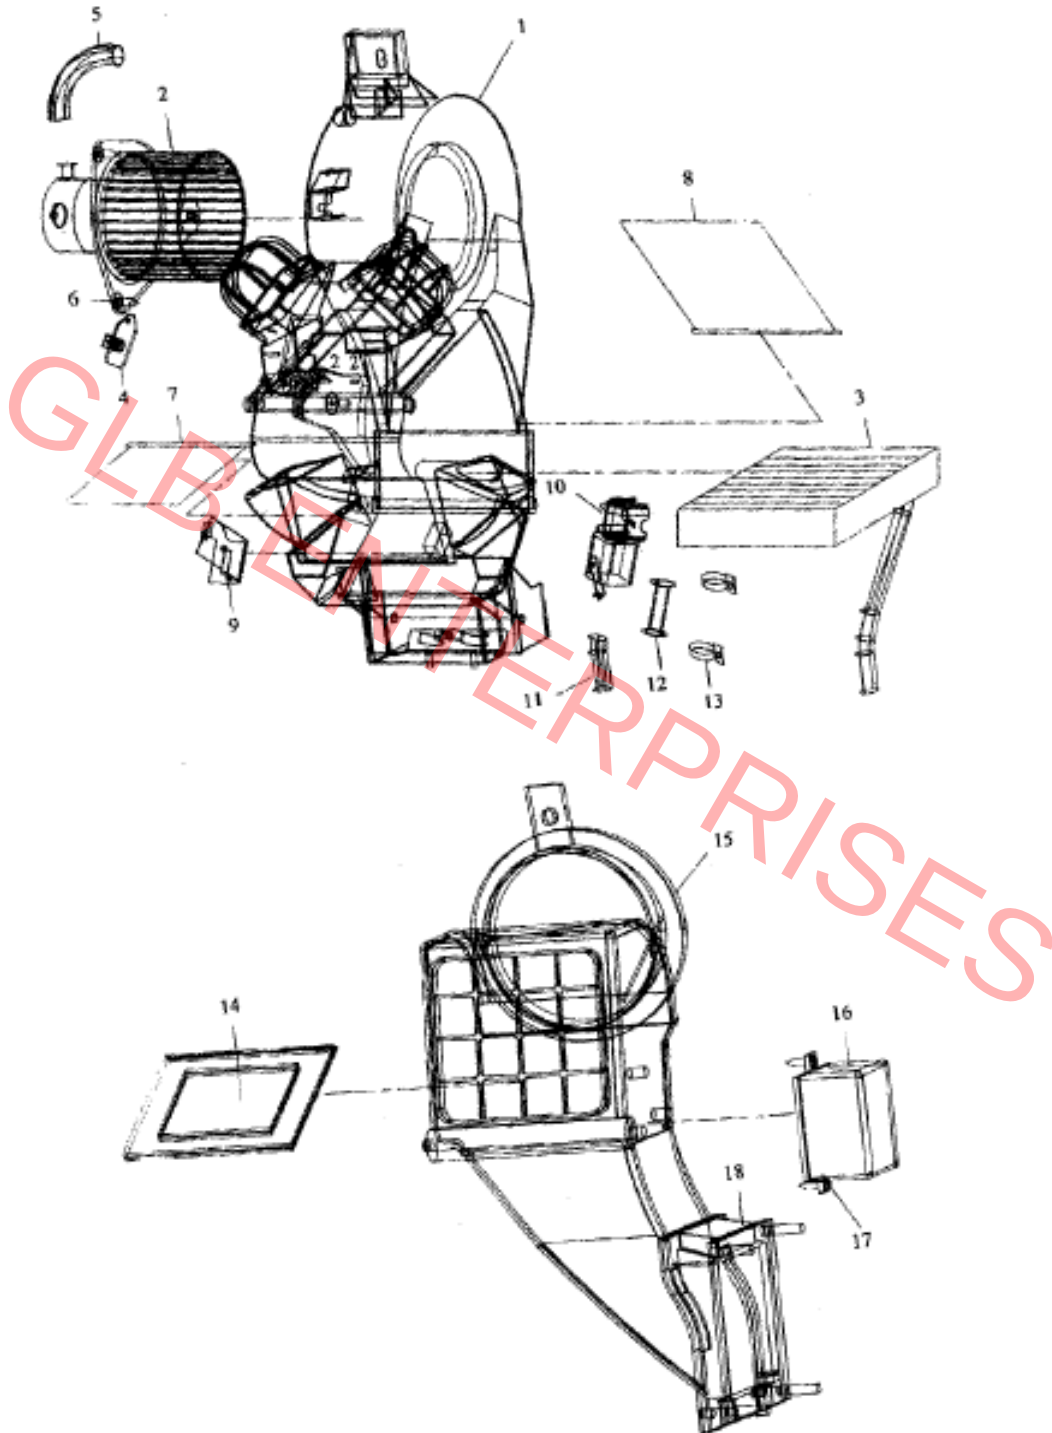


FIGURE 131 HEATER ASM & BOX

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	HEATER CAS	HFJ8101060DA-1	1	
2	BLOWER MOTOR ASM	HFJ8101060DA-2	1	
3	HEATER CORE	HFJ8101060DA-3	1	
4	RESISTOR	HFJ8101060DA-4	1	
5	DUCT	HFJ8101060DA-5	1	
6	SCREW	HFJ8101060DA-6	3	
7	DAMPER CONTROL MODUAL	HFJ8101060DA-7	1	
8	TEMPERATURE CONTROL DAMPNER	HFJ8101060DA-8	1	
9	BRACKET	HFJ8101060DA-9	1	
10	HEATER CONTROL VALVE	HFJ8101060DA-10	1	
11	WATER PIPE	HFJ8101060DA-11	1	
12	HOSE	HFJ8101060DA-12	1	
13	CLAMP	HFJ8101060DA-13	2	
14	DAMPNER	HFJ8101040DA-1	1	
15	CASE	HFJ8101040DA-2	1	
16	MOTOR	HFJ8101040DA-3	1	
17	SCREW	HFJ8101040DA-4	3	
18	AIR INLET	HFJ8101040DA-5	1	

FIGURE 132 A/C SYSTEM (TWO EVAPS & TWO CONDENSERS)

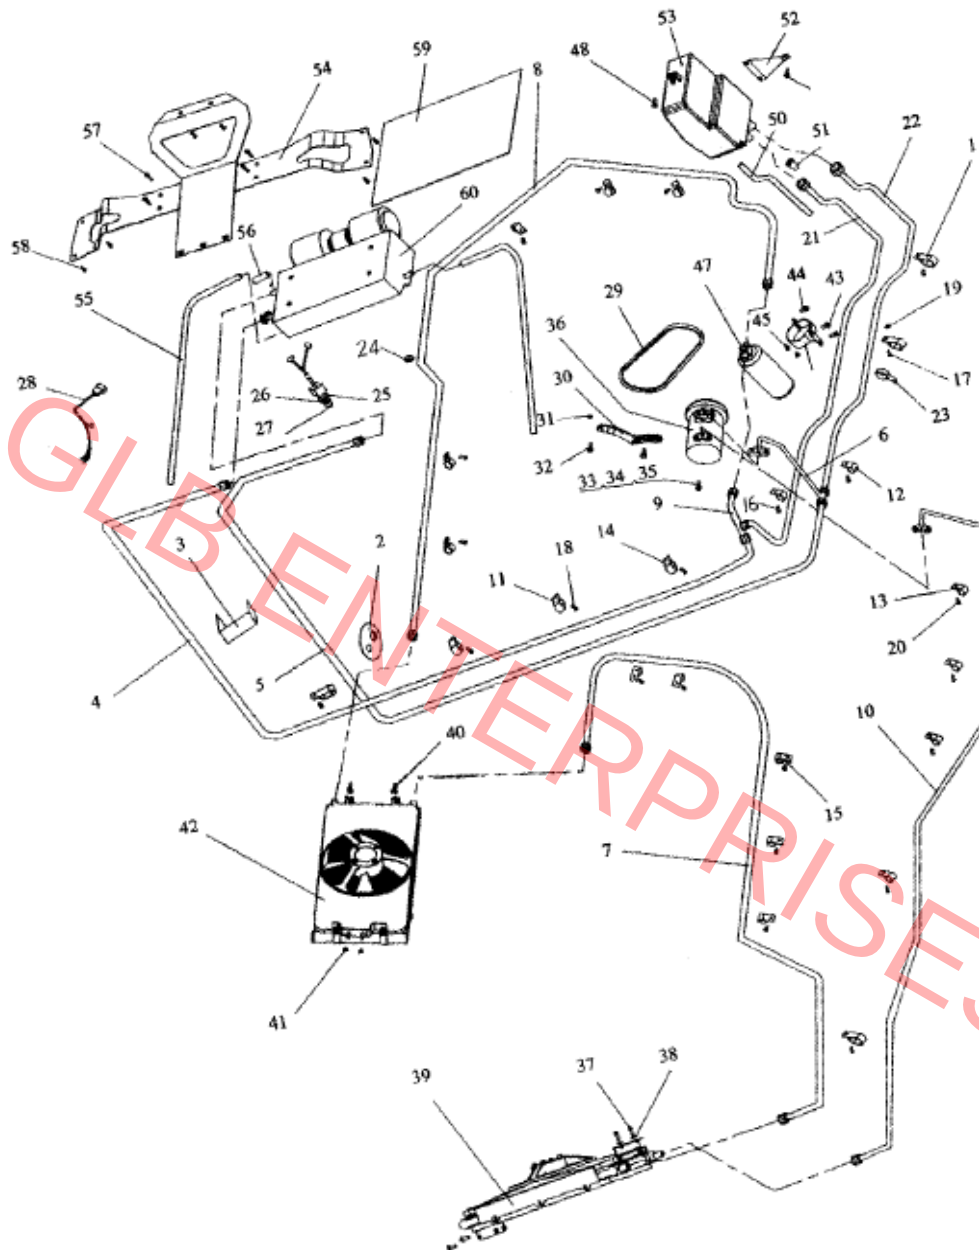


FIGURE 132 A/C SYSTEM (TWO EVAPS & TWO CONDENSERS)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	CLAMP	HFJ8108006DA	4	
2	TIE	HFJ8108007DA	1	
3	CLIP	HFJ8108008DA	1	
4	HIGH PRESSURE 3-WAY PIPE UPPER EVAP	HFJ8108020DB	1	
5	LOW PRESSURE 3-WAY PIPE UPPER EVAP	HFJ8108030DA	1	
6	LOW PRESSURE 3-WAY PIPE LOW PRESSURE COMPRESSOR	HFJ8108060DD	1	
7	HIGH PRESSURE HOSE SIDE CONDENSER REAR	HFJ8108070DE	1	
8	HIGH PRESSURE HOSE CONDENSER RECEIVER SIDE	HFJ8108080DC	1	
9	HIGH PRESSURE 3-WAY PIPE	HFJ8108090DB	1	
10	HIGER PRESSURE HOSE CONDENSER REAR	HFJ8108110DG	1	
11	CLAMP	HFJ8108120DA	2	
12	CLIP	HFJ8108140DA	1	
13	CLIP	HFJ8108150DA	13	
14	CLIP	HFJ8108160DA	1	
15	CLIP	HFJ8108170DA	1	
16	SCREW	Q/2A-CJ-24A 6X16	10	
17	SCREW	Q/2A-CJ-25A 5X16	2	
18	BOLT	Q/2A-CJ-36 M6X16	8	
19	PLASTIC NUT	Q/2AJ19-5	1	
20	SCRW	Q/2A-CJ-47A-ST6.3X16	2	
21	HIGH PRESSURE HOSE 3-WAY FRONT EVAP	HFJ8108040DJ	1	
22	HIGH PRESSURE HOSE 3- WAY PIPE FRONT EVAP			
23	LOW PRESSURE	HFJ8108050DJ	1	
24	CLAMP	HFJ3774101EA	2	
25	RUBBER CUSHION	HFJ8112201DA	1	
26	BRACKET	HFJ8112202DA	1	
27	GARNISH COVER	HFJ8112203DA	1	
28	UPPER EVAP FAN MOTOR SWITCH	HFJ8112210DA	1	
29	A/C HARNESS UPPER EVAP	HFJ8112110DA	1	
30	A/C COMPRESSOR V- BELT	HFJ8104007DA	1	
31	COMPRESSOR			
32	ADJUSTING BRACKET	HFJ8104006CA	1	
33	NUT	Q340B08	1	
34	BOLT	Q/2A-CJ-36 M8X25	1	
35	BOLT	Q1501030T	3	
36	WASHER	Q40110	3	
37	WASHER	Q40310	3	
38	A/C COMPRESSOR ASM	HFJ8104100DA	1	
39	BOLT	Q/2A-CJ-30 M6X20	4	
40	WASHER	Q40208	2	

FIGURE 132 A/C SYSTEM (TWO EVAPS & TWO CONDENSERS)

NO	DESCRIPTION	PART NO.	ALL	NOTE
39	REAR CONDENSER ASM	HFJ8105210DA	1	
40	BOLT	Q/2A-CJ-33 M6X20	2	
41	NUT	Q340B06	2	
42	SIDE CONDENSER ASM	HFJ8105210DA	1	
43	BOLT	Q/2A-CJ-36 M6X16	2	
44	BOLT	Q/2A-CJ-36 M6X25	1	
45	NUT	Q340B06	2	
46	CLIP	HFJ8109010DA	1	
47	A/C RECEIVER	HFJ8109100DA	1	
48	BOLT	Q/2A-CJ-63 M6X20	1	
49	BOLT	Q/2A-CJ-63 M6X30	1	
50	DRAIN HOSE	HFJ8107101CA	1	
51	TIE	HFJ8107106CA	1	
52	EVAP BRACKET	HFJ8107120CA	1	
53	EVAP ASM FRONT	HFJ8107110DC	1	
54	BRACKET UPPER EVAP DRAIN	HFJ8107201DA	1	
55	HOSE	HFJ8107202DA	1	
56	FITTING	HFJ8107202DA	1	
57	BOLT	Q/2A-CJ-36 M6X16	6	
58	BOLT	Q/2A-CJ-36 M6X25	4	
59	UPPER EVAP INSULATOR	HFJ8107310DA	1	
60	EVAP UPPER ASM	HFJ8107210DA	1	

FIGURE 133 A/C SYSTEM (SINGLE EVAP)

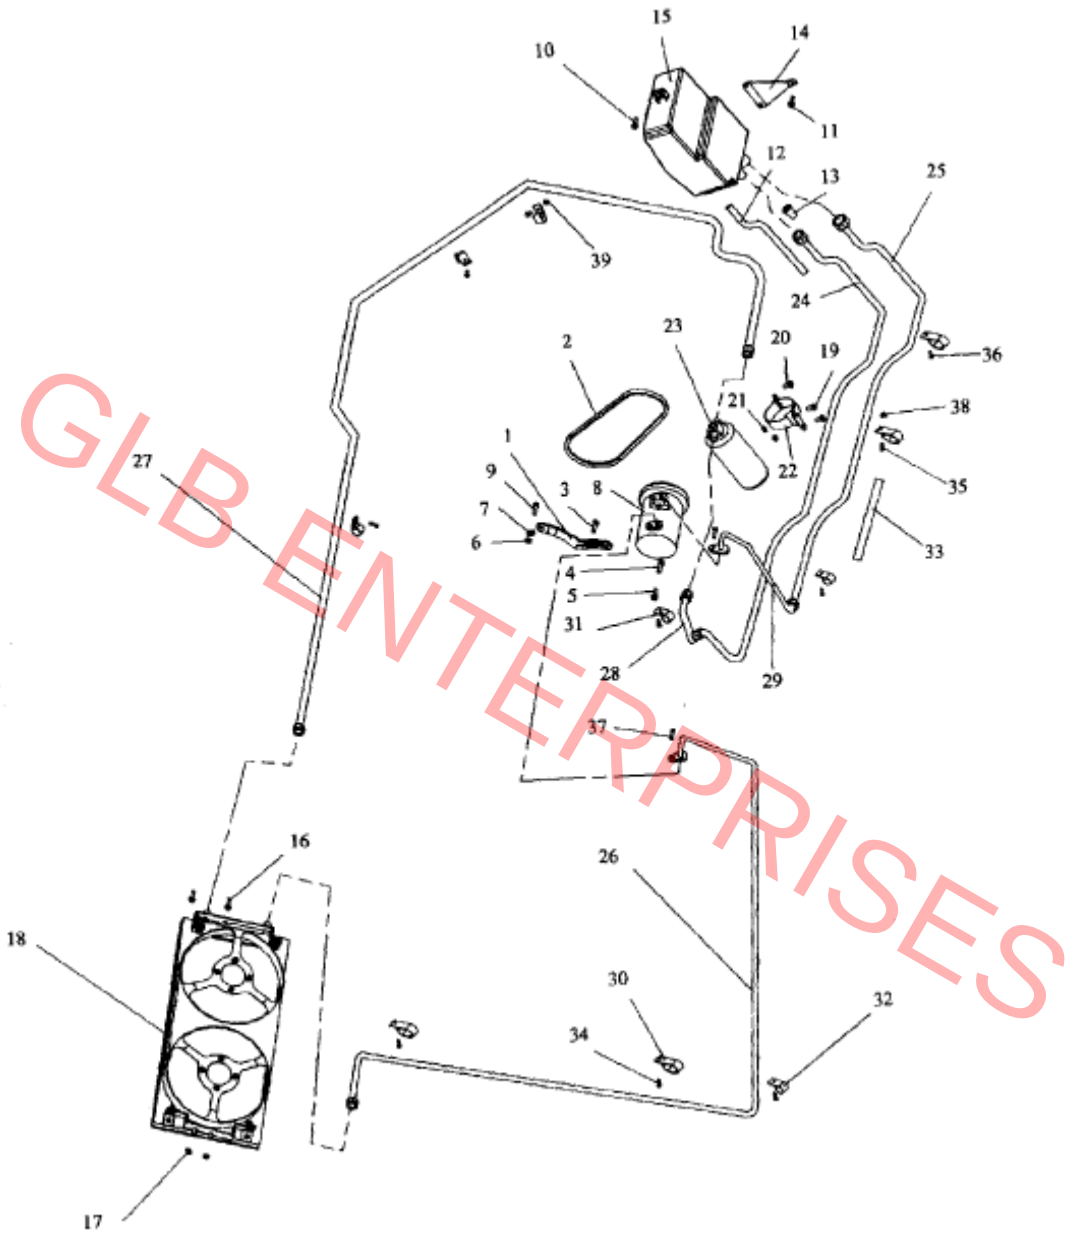


FIGURE 133 A/C SYSTEM (SINGLE EVAP)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	COMPRESSOR ADJSUTER BRACKET	HFJ8104006DB	1	
2	A/C COMPRESSOR V- BELT	HFJ8104007DB	1	
3	BOLT	Q/2A-CJ-101 M8X25	1	
4	BOLT	Q/2A-CJ-101 M8X35	1	
5	BOLT	Q/2A-CJ-101 M8X40	1	
6	NUT	Q340B08	1	
7	WASHER	Q40108	1	
8	A/C COMPRESSOR	HFJ8104100DB	1	
9	BOLT	Q/2A-CJ-101 M8X30	1	
10	BOLT	Q/2A-CJ-36 M3X16	1	
11	BOLT	Q/2A-CJ-63 M6X30	1	
12	DRAIN HOSE	HFJ8107101CA	1	
13	TIE	HFJ8107106CA	1	
14	EVAP BRACKET	HFJ8107120CA	1	
15	EVAP ASM FRONT	HFJ8107110DC	1	
16	BOLT	Q/2A-CJ-33 M6X16	2	
17	NUT	Q340B06	2	
18	CONDENSER ASM	HFJ815100DB	1	
19	BOLT	Q/2A-CJ-36 M6X16	2	
20	BOLT	Q/2A-CJ-36 M6X25	1	
21	NUT	Q340B06	2	
22	RECEIVER BRACKET	HFJ8109010DB	1	
23	RECEIVER ASM	HFJ8109100DB	1	
24	HIGH PRESSURE HOSE- EVAP	HFJ8108040DJ	1	
25	HIGH PRESSURE HOSE- EVAP LOW PRESSURE	HFJ8108050DJ	1	
26	HIGH PRESSURE HOSE- COMPRESSOR- CONDENSER	HFJ8108050DD	1	
27	HIGH PRESSURE HOSE- CONDENSER/RECEIVER	HFJ8108060DD	1	
28	HIGH PRESSURE PIPE	HFJ8108030DG	1	
29	LOW PRESSURE PIPE	HFJ8108120DG	1	
30	CLAMP	HFJ8108006DA	4	
31	CLAMP	HFJ8108140DA	2	
32	CLAMP	HFJ8108150DA	3	
33	CUSHION	HFJ8108150DA	3	
34	SCREW	Q/2A-CJ-24A M6X16	3	
35	SCREW	Q/2A-CJ-25A M5X16	1	
36	BOLT	Q/2A-CJ-36 M6X16	4	
37	BOLT	Q/2A-CJ-174 M8X25	2	
38	NUT	Q/2AJ19-5	1	
39	NUT	Q340B08	1	

FIGURE 134 A/C SYSTEM (SINGLE UPPER EVAP)

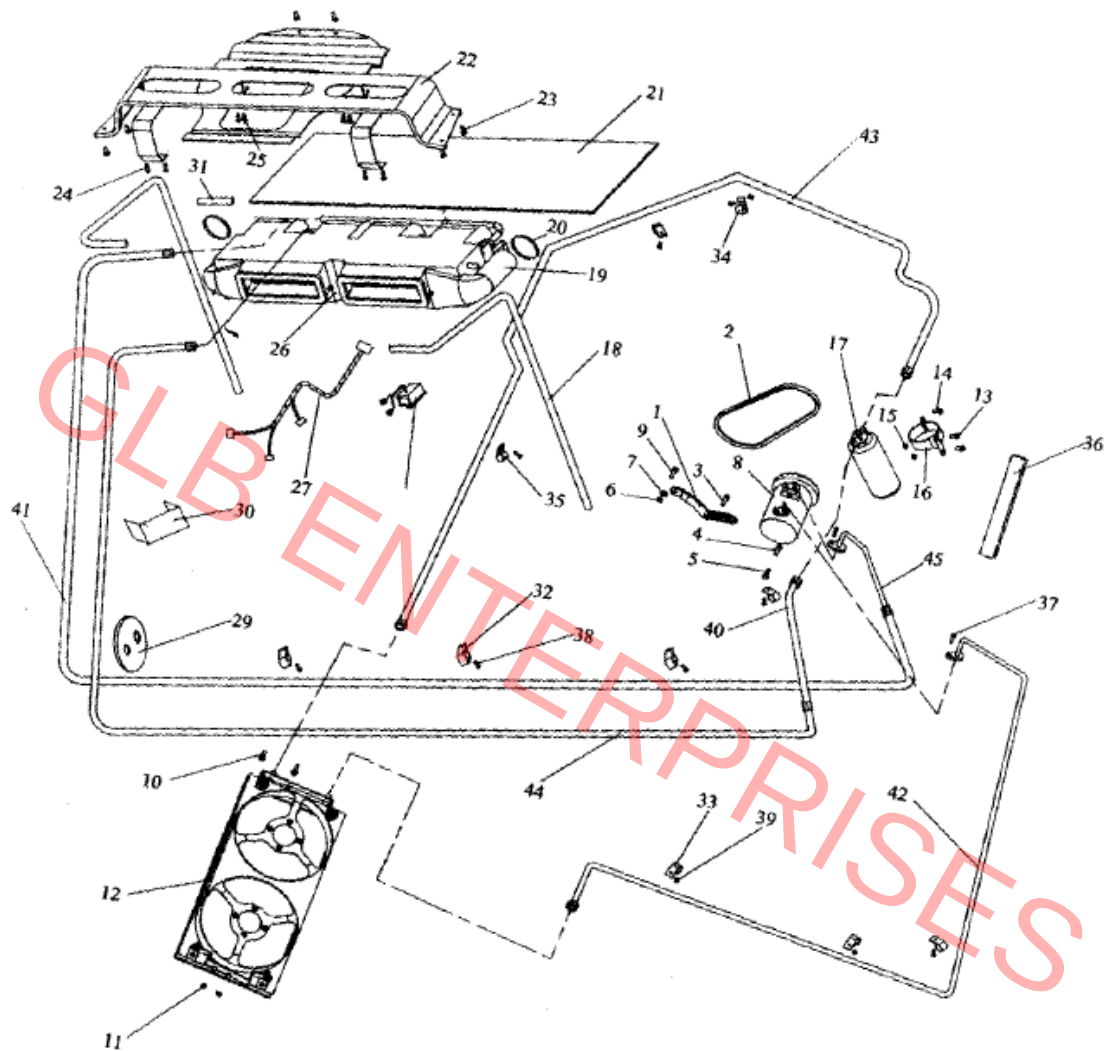


FIGURE 134 A/C SYSTEM (SINGLE UPPER EVAP)

NO	DESCRIPTION	PART NO.	ALL	NOTE
	COMPRESSOR			
1	ADJUSTING BRACKET	HFJ8104006DG	1	
2	A/C COMPRESSOR V-BELT	HFJ8104007DB	1	
3	BOLT	Q/2A-CJ-101 M8X25	1	
4	BOLT	Q/2A-CJ-101 M8X35	1	
5	BOLT	Q/2A-CJ-101 M8X40	1	
6	NUT	Q340B08	1	
7	WASHER	Q40108	1	
8	COMPRESSOR ASM	HFJ8104100DB	1	
9	BOLT	Q/2A-CJ-101 M8X16	1	
10	BOLT	Q/2A-CJ-33 M6X16	2	
11	NUT	Q340B06	2	
12	CONDENSER ASM	HFJ8105100DB	1	
13	BOLT	Q/2A-CJ-36 M6X16	2	
14	BOLT	Q/2A-CJ-36 M6X25	1	
15	NUT	Q340B06	2	
16	RECEIVER BRACKET	HFJ8109010DB	1	
17	A/C RECEIVER	HFJ8109100DB	1	
18	DRAIN HOSE	HFJ8107005DD	2	
19	DUCT	HFJ8107006DD	2	
20	CLAMP	HFJ8107007DD	2	
21	INSULATOR	HFJ8107009DB	1	
22	EVAP BRACKET	HFJ8107100DD	1	
23	BOLT	Q/2A-CJ-36 M6X16	6	
24	SCREW	Q/2A-CJ-18 M5X25	4	
25	SCREW	Q/2A-CJ-25A M5X12	4	
26	A/C EVAP ASM	HFJ8107200DE	1	
27	UPPER EVAP HARNESS	HFJ8112110DD	1	
28	UPPER EVAP FAN MOTOR SWITCH	HFJ8112210DB	1	
29	TIE	HFJ8108007DA	1	
30	CLIP	HFJ8108008DA	1	
31	ADAPTER	HFJ8108006DD	1	
32	CLAMP	HFJ8108160DA	3	
33	CLAMP	HFJ8108006DA	2	
34	CLAMP	HFJ8108140DA	2	
35	CLAMP	HFJ8108150DA	3	
36	CUSHION	HFJ8108012DA	1	
37	BOLT	Q/2A-CJ-174 M8X25	6	
38	BOLT	Q/2A-CJ-36 M6X16	3	
39	SCRW	Q/2A-CJ-24A M6X16	3	
40	HIGH PRESSURE PIPE	HFJ8108030DD	1	
41	LOW PRESSURE PIPE	HFJ8108040DD	1	
42	HIGH PRESSURE PIPE-COMPRESSOR / CONDENSER	HFJ8108050DD	1	
43	HIGH PRESSURE PIPE-RECEIVER/ CONDENSER	HFJ8108060DD	1	
44	HIGH PRESSURE PIPE-EVAP	HFJ8108110DD	1	
45	LOW PRESSURE PIPE	HFJ8108120DD	1	

FIGURE 135 EVAPORATOR ASM

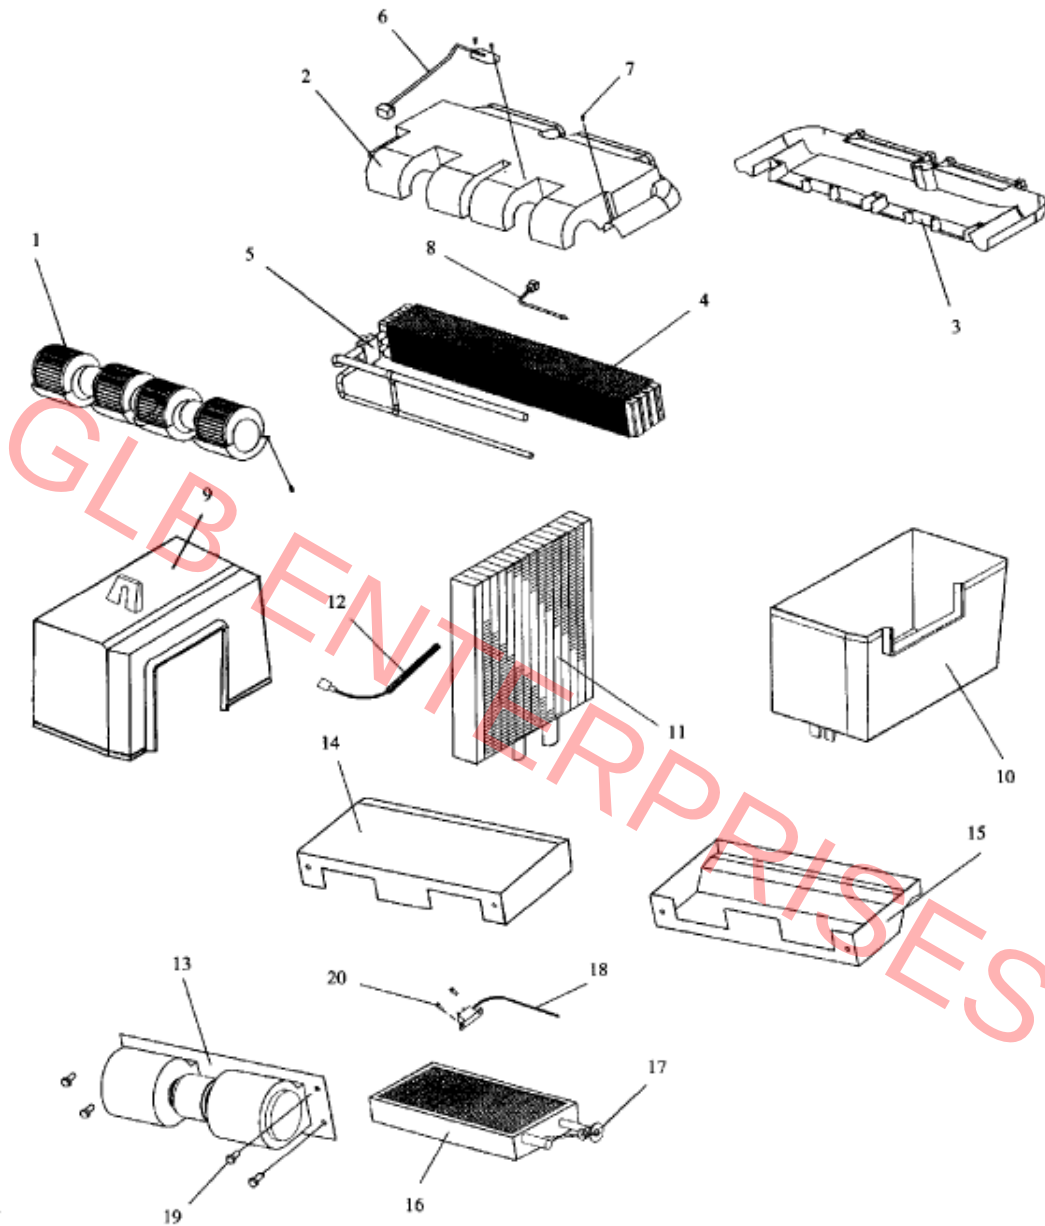


FIGURE 135 EVAPORATOR ASM

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	FAN & MOTOR ASM	HFJ8107200DE-1	2	
2	UPPER CASE	HFJ8107200DE-2	1	
3	LOWER CASE	HFJ8107200DE-3	1	
4	EVAPORATOR	HFJ8107200DE-4	1	
5	EXPANSION VALVE	HFJ8107200DE-5	1	
6	RESISTOR & HARNESS ASM	HFJ8107200DE-6	1	
7	SCRW	HFJ8107200DE-7	1	
8	TEMPERATURE SENSOR	HFJ8107200DE-8	1	
9	UPPER CASE	HFJ8107110DC-1	1	
10	LOWER CASE	HFJ8107110DC-2	1	
11	EVAPORATOR	HFJ8107110DC-3	1	
12	TEMPERATURE SENSOR	HFJ8107110DC-4	1	
13	FAN & MOTOR ASM	HFJ8107210DA-1	1	
14	UPPER CASE	HFJ8107210DA-2	1	
15	LOWER CASE	HFJ8107210DA-3	1	
16	EVAPORATOR	HFJ8107210DA-4	1	
17	EXPANSION VALVE	HFJ8107210DA-5	1	
18	TEMPERATURE SENSOR	HFJ8107210DA-6	1	
19	SCREW	HFJ8107210DA-7	4	
20	BOLT	HFJ8107210DA-8	2	

FIGURE 136 CONDENSER

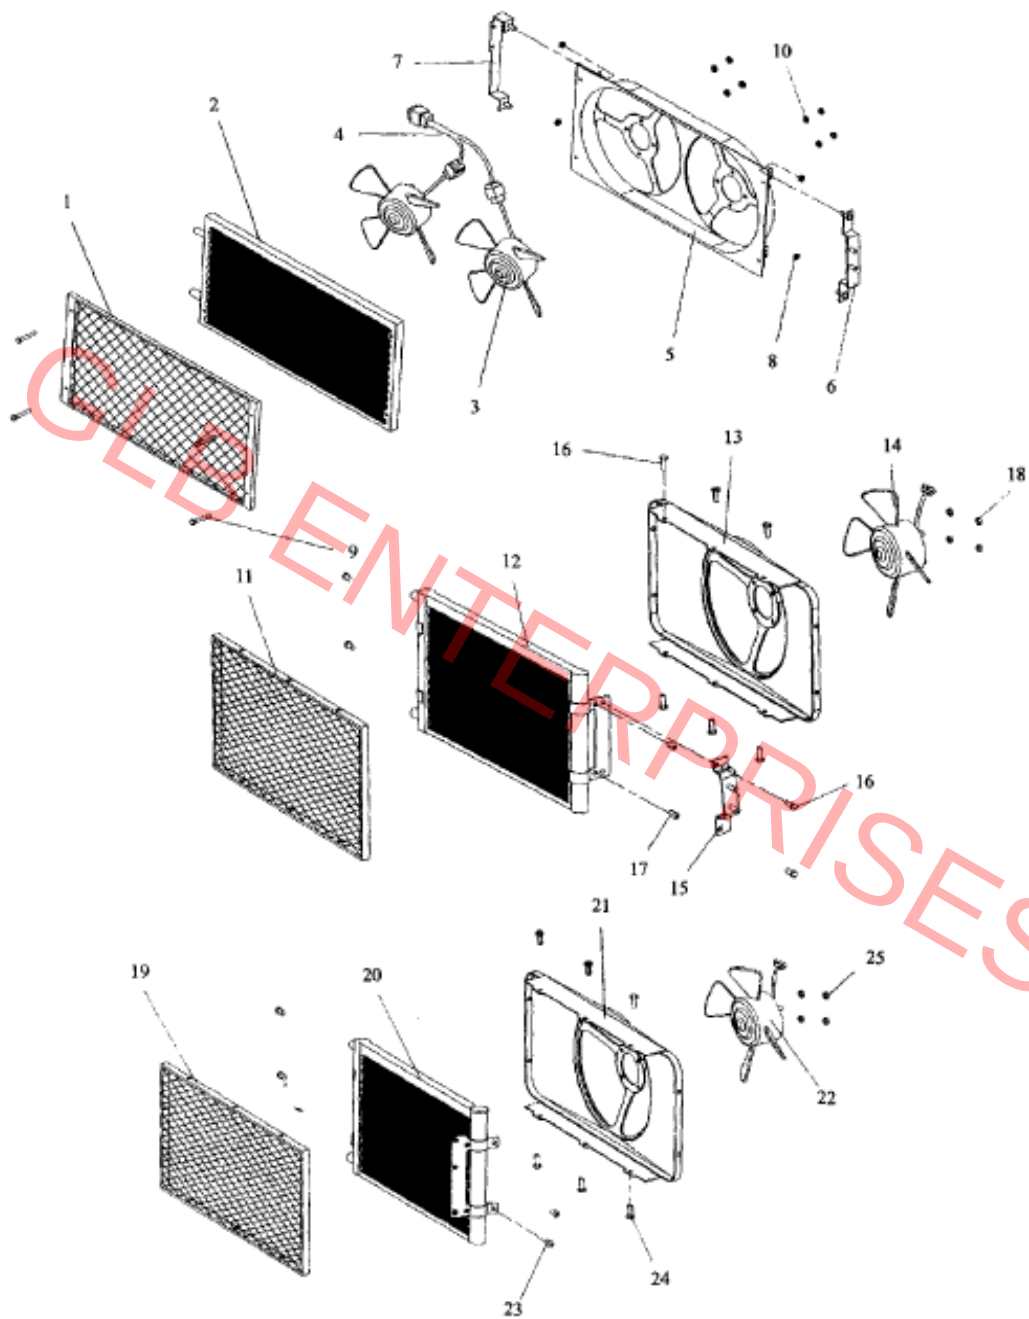


FIGURE 136 CONDENSER

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	AIR INTAKE COVER	HFJ8105100DB-1	1	
2	CONDENSER	HFJ8105100DB-2	1	
3	FAN & MOTOR ASM	HFJ8105100DB-3	2	
4	HARNESS	HFJ8105100DB-4	1	
5	FAN & MOTOR COVER	HFJ8105100DB-5	1	
6	BRACKET RH	HFJ8105100DB-6	1	
7	BRACKET LH	HFJ8105100DB-7	1	
8	NUT	HFJ8105100DB-8	4	
9	BOLT	HFJ8105100DB-9	4	
10	NUT	HFJ8105100DB-10	8	
11	AIRE INTAKE COVER CONDENSER SIDE	HFJ8105210CA-1	1	
12	CONDENSER	HFJ8105210CA-2	1	
13	FAN & MOTOR COVER CONDENSER SIDE	HFJ8105210CA-3	1	
14	FAN & MOTOR	HFJ8105210CA-4	1	
15	BRACKET LH	HFJ8105210CA-5	1	
16	BOLT	HFJ8105210CA-6	8	
17	SCREW	HFJ8105210CA-7	4	
18	NUT	HFJ8105210CA-8	4	
19	AIR INTAKE COVER REAR CONDENSER	HFJ8105210DA-1	1	
20	CONDENSER	HFJ8105210DA-2	1	
21	FAN & MOTOR COVER	HFJ8105210DA-3	1	
22	FAN & MOTOR ASM	HFJ8105210DA-4	1	
23	SCREW	HFJ8105210DA-5	4	
24	BOLT	HFJ8105210DA-6	6	
25	NUT	HFJ8105210DA-7	4	

FIGURE 137 STEERING COLUMN COVER

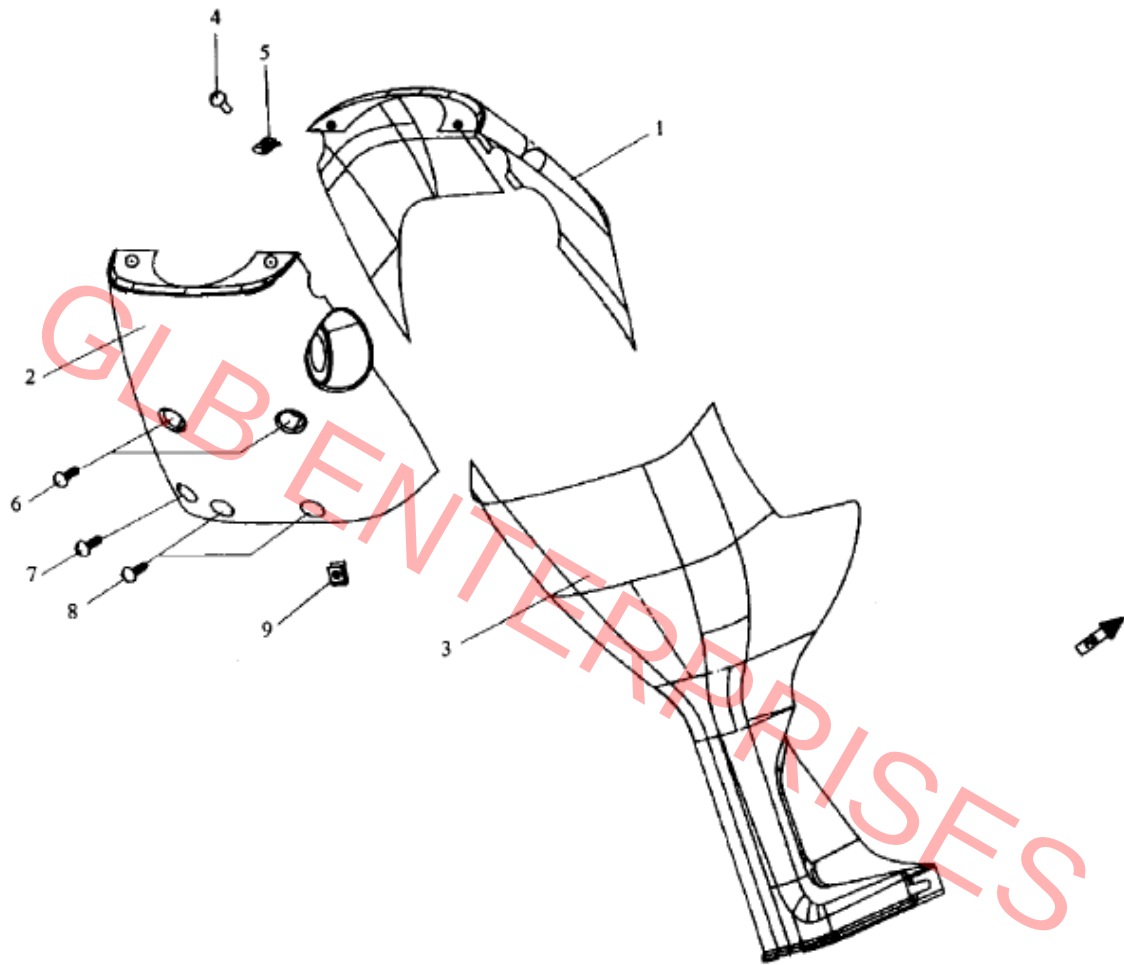


FIGURE 137 STEERING COLUMN COVER

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	UPPER STEERING COLUMN COVER	HFJ3774201DC	1	HFJ6371B HFJ6371C, HFJ6376
2	LOWER STEERING COLUMN COVER	HFJ3774202DB	1	
3	COLUMN COVER	HFJ3774203DA	1	
4	SCREW	Q/2A-CJ-13A M4X12	2	
5	CLIP	Q/2AM13-4	2	
6	BOLT	Q/2A-CJ-474 M5X10	2	
7	SCREW	Q/2A-CJ-104 M4.8X16	1	
8	SCREW	Q/2A-CJ-104-4.8X16	2	
9	CLIP	Q/2AM13-5	2	

GLB ENTERPRISES

FIGURE 138 STEERING COLUMN COVER

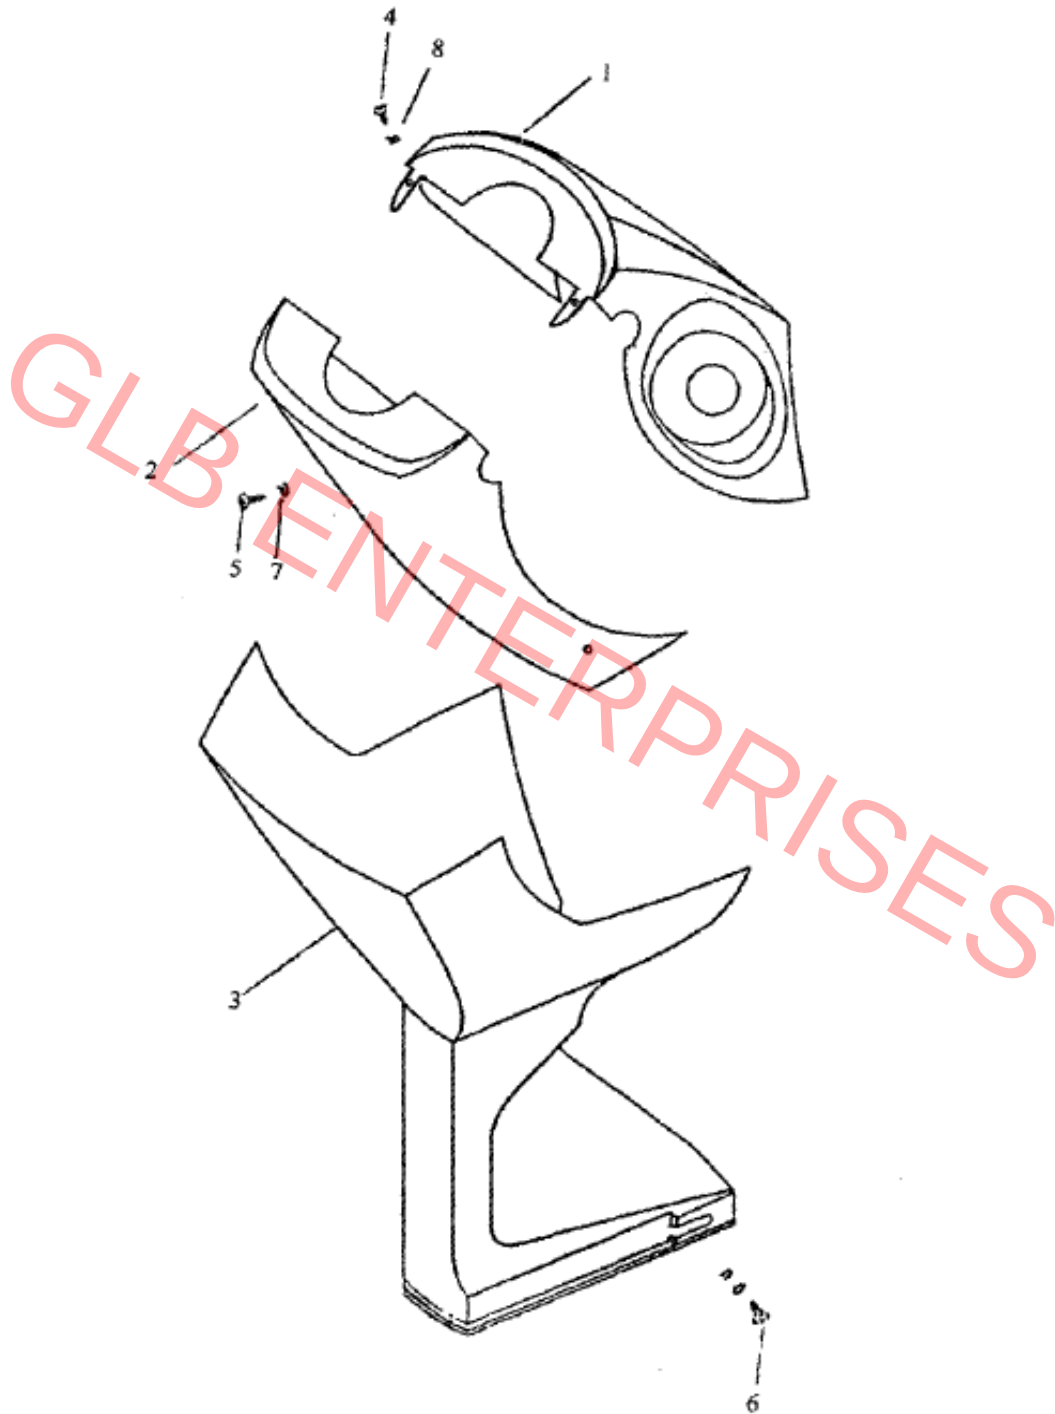


FIGURE 138 STEERING COLUMN COVER

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	UPPER STEERING COLUMN COVER	HFJ3774201DA	1	HFJ1011G, HFJ1011H
2	LOWER STEERING COLUMN COVER	HFJ3774202DA	1	
3	COLUMN COVER	HFJ3774203DA	1	
4	SCREW	Q271B4213	2	
5	SCREW	Q271B4816	7	
6	SCREW	Q/2A-CJ-47A-4.8X16	2	
7	CLIP	Q/2AM13-5	9	
8	Q/2AM13-4		2	

GLB ENTERPRISES

FIGURE 139 DASHBOARD

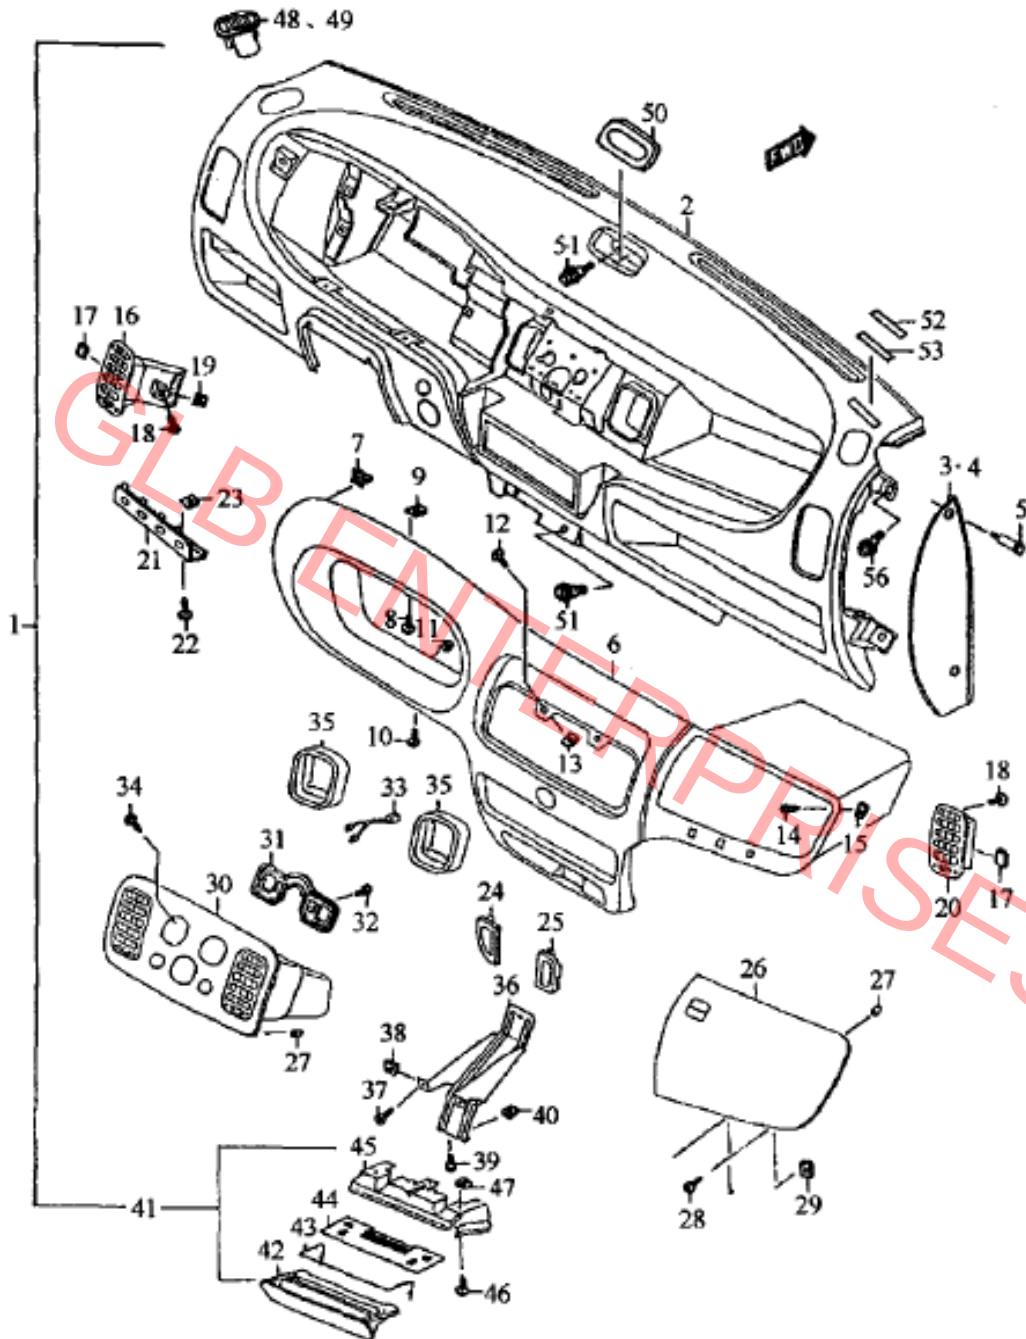


FIGURE 139 DASHBOARD

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	DASHBOARD ASM	HFJ3801100DA	1	
2	DASHBOARD FRAME	HFJ3801200DA	1	
		HFJ3801200DB	1	OPTIONAL
3	SIDE COVER LH	HFJ3801101DA	1	
4	SIDE COVER RH	HFJ3801102DA	1	
5	SCREW	HFJ3801103DA	1	
6	DASHBOARD BEZEL	HFJ3801105DA	1	
7	CLIP	HFJ3801106DA	1	
8	SCREW	Q/2A-CJ-13A-5X12	1	
9	SPEED NUT	HFJ3801107DA	1	
10	SCREW	Q/2A-CJ-13A-5X12	2	
11	SPEED NUT	HFJ3801107DA	2	
12	SCREW	Q/2A-CJ-13A-5X12	3	
13	SPEED NUT	HFJ3801107DA	2	
14	SCRW	Q/2A-CJ-13A-5X16	2	
15	SPEED NUT	HFJ3801107DA	2	
16	SIDE OUTLET DUCT LH	HFJ38011400DA	1	
17	CLIP	HFJ38011108DA	4	
18	SCREW	Q/2A-CJ-13A-5X16	2	
19	SPEED NUT	HFJ3801107DA	2	
20	SIDE OUTLET DUCT RH	HFJ38011500DA	1	
21	SWITCH BEZEL	HFJ38011109DA	1	
22	SCREW	Q/2A-CJ-13A-3X16	2	
23	SPEED NUT	HFJ3801107DA	2	
24	SWITCH-PW BEZEL LH	HFJ3801117DA	1	
		HFJ3801117DB	1	OPTIONAL
25	SWITCH-PW BEZEL RH	HFJ3801118DA	1	
		HFJ3801118DB	1	OPTIONAL
26	GOVE BOX ASM	HFJ3801600DA	1	
27	RUBBER BUFFER	HFJ3801112DA	6	
28	SCREW	Q/2A-CJ-13A 5X16	2	
29	SPEED NUT	HFJ3801107DA	2	
30	HAV CONTROL BEZEL	HFJ3801300DA	1	
31	SWITCH HOLDER	HFJ3801104DA	1	
32	SCREW	Q/2A-CJ-13A 3X12	2	
33	LIGHT	HFJ3715100DA	1	
34	SCREW	Q/2A-CJ-13A 4X12	3	
35	OUTLET GASKET	HFJ3801115DA	2	
36	BRACKET	HFJ3801116DA	1	
37	SCREW	Q/2A-CJ-13A 5X16	2	
38	SPEED NUT	HFJ3801107DA	1	
39	SCREW	Q/2A-CJ-13A 5X16	1	
40	SPEED NUT	HFJ3801107DA	1	
41	ASHTRAY	HFJ3801170DA	1	
42	ASHTRAY FRAME	HFJ3801171DA	1	
43	SRPING	HFJ3801172DA	1	
44	COVERING	HFJ3801173DA	1	
45	GUIDE RAIL	HFJ3801174DA	1	
46	SCREW	Q/2A-CJ-13A 5X16	1	
47	SPEED NUT	HFJ3801107DA	3	
48	DEFROSTER SIDE OUTLET LH	HFJ3801113DA	1	
49	DEFROSTER SIDE OUTLET RH	HFJ3801114DA	1	
50	COVER	HFJ3801119DA	1	
51	SCREW	HFJ3801020DA	6	
52	VIN PLATE	HFJ3903091DA	1	
53	TAPE	HFJ3903092DA	1	

FIGURE 140 DOOR PANEL & WINDOW REGULATOR

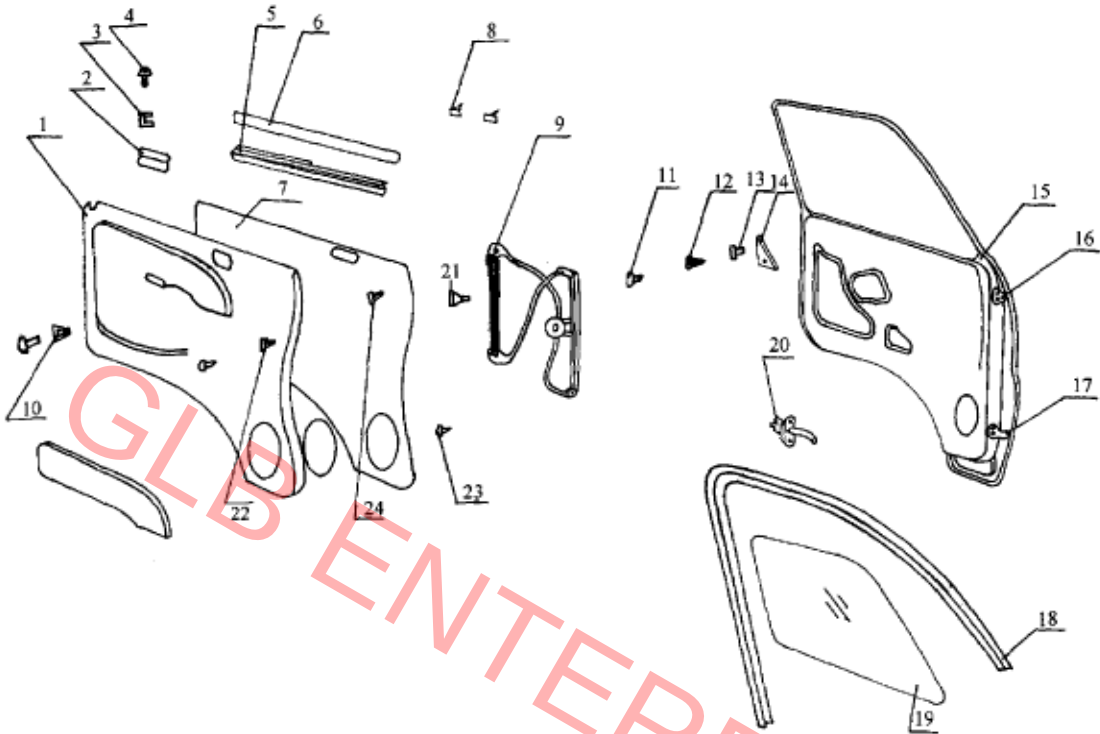


FIGURE 140 DOOR PANEL & WINDOW REGULATOR

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	INNER DOOR PANEL LH	HFJ6402110DA	1	
	INNER DOOR PANEL RH	HFJ6402120DA	1	
3	SPRING	Q/2A-CJ-147	2	
4	SCREW	Q/2A-CJ-48A ST1.8X22	2	
5	INNER WEATHER STRIP	HFJ6407300DA	2	
6	OUTER RAIL DR WEATHERSTRIP LH	HFJ6407401DA	1	
	OUTER RAIL DR WEATHERSTRIP RH	HFJ6407402DA	1	
7	WATERPROOF COVER LH	HFJ6402101DA	1	
	WATERPROOF COVER LH	HFJ6402102DA	1	
8	MOUNTING SLIK TRIMING	HFJ6407404DA	2	
9	WINDOW REGULATOR LH	HFJ6404110DA	1	
	WINDOW REGULATOR RH	HFJ6404120DA		
	WINDOW REGULATOR LH	HFJ6204110DA	1	CREW CAB REAR DOOR
	WINDOW REGULATOR RH	HFJ6204120DA	1	CREW CAB REAR DOOR
	WINDOW REGULATOR RH	HFJ6404110DA		
10	CLIP	Q/2A-CJ-93 4.8X1.5	2	
11	PLUG	HFJ6402107DA	2	
12	SCREW	Q/2A-CJ-24A 5X16	2	
13	NUT	Q/2A-CJ-100A	2	
14	INNER MIRROR COVER LH	HFJ6402103DA	1	
	INNER MIRROR COVER RH	HFJ6402104DA	1	
15	DOOR ASM LH	HFJ6401100DA	1	SHEET METAL ONLY
	DOOR ASM RH	HFJ6401200DA	1	SHEET METAL ONLY
16	DOOR HINGE UPPER BRACKET LH	HFJ6406110DA	1	
	DOOR HINGE UPPER BRACKET RH	HFJ6406102DA	1	
17	DOOR HINGE LOWER BRACKET LH	HFJ6406130DA	1	
	DOOR HINGE LOWER BRACKET RH	HFJ6406104DA	1	
18	DOOR WINDOW WEATHERSTRIP LH	HFJ6407100DA	1	
	DOOR WINDOW WEATHERSTRIP RH	HFJ6407200DA	1	
19	DOOR GLASS LH	HFJ6403005DA	1	
	DOOR GLASS RH	HFJ6403006DA	1	
20	DOOR STOPPER	HFJ6409100DA	2	
21	NUT	Q/2A-CJ-105 M6	12	
22	NUT	Q/2A-CJ-100	4	
23	WASHER	Q/2A-CJ-48A ST4.2X19	4	
24	CLIP	Q/2A-CJ-170	8	
N/S	HFJ6402106DA	INNER DOOR PULL CUP LH/RH	2	

FIGURE 140 DOOR PANEL & WINDOW REGULATOR

NO	DESCRIPTION	PART NO.	ALL	NOTE
N/S	HFJ6203005DA	DOOR GLASS LH REAR DOOR (CREW CAB)	1	
N/S	HFJ6203006DA	DOOR GLASS RH REAR DOOR (CREW CAB)	1	
N/S	HFJ6404130DB	WINDOW CRANK HANDLE W/CLIP	2	
N/S	HFJ3724511CA	DOOR BOOT	2	

GLB ENTERPRISES

FIGURE 141 VAN SLIDING DOOR

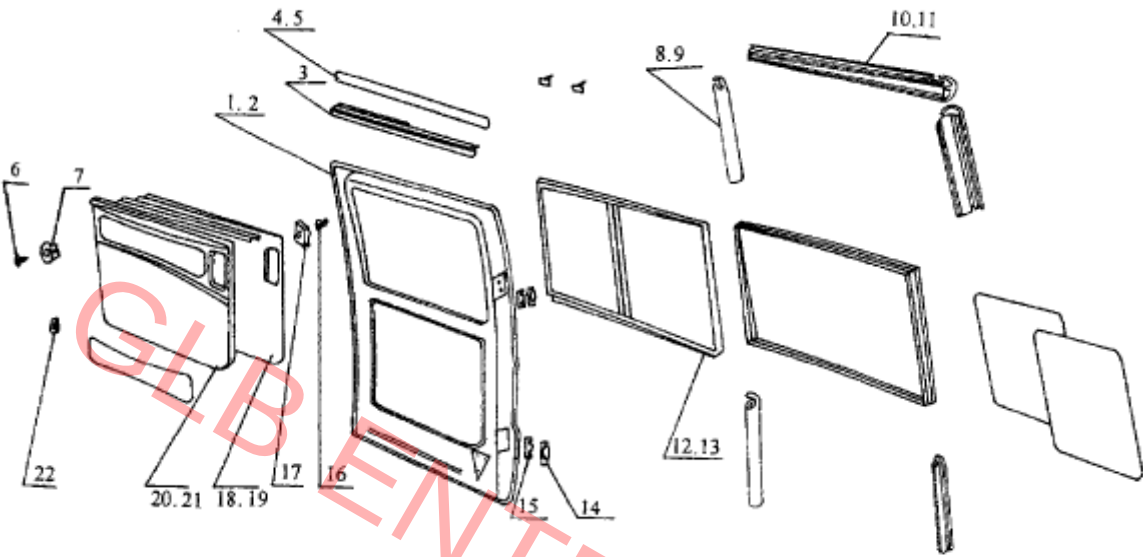


FIGURE 141 VAN SLIDING DOOR

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	DOOR ASM LH	HFJ6201100DA	1	HFJ6371, HFJ6371B, HFJ6371C, SHEET METAL ONLY
2	DOOR ASM RH	HFJ6201200DA	1	HFJ6371, HFJ6371B, HFJ6371C, SHEET METAL ONLY
3	INNER WEATHERSTRIP	HFJ6207030DA	2	
4	OUTER WEATHERSTRIP LH	HFJ6207005DA	1	
5	OUTER WEATHERSTRIP RH	HFJ6207006DA	1	
6	WASHER	Q/2A-CJ-47A ST 4.2X19	6	
7	NUT	Q/2A-CJ-100A	6	
8	INNER WEATHERSTRIP PLASTIC LH	HFJ6207013DA	2	
9	INNER WEATHERSTRIP PLASTIC RH	HFJ6207014DA	2	
10	SLIDING DOOR UPPER INNER TRIM LH	HFJ6207011DA	1	
11	SLIDING DOOR UPPER INNER TRIM RH	HFJ6207012DA	1	
12	SLIDING WINDOW ASM LH	HFJ6203100DA	1	
13	SLIDING WINDOW ASM RH	HFJ6203200DA	1	
14	GROMMET BUMPER	HFJ6200010DA	4	
15	BUMPER PAD	HFJ6200020DA	4	
16	WASHER	Q/2A-CJ-118 M6X18	8	
17	SPRING CLIP	Q/2A-CJ-121 6X2	8	
18	WATER PROOFING PANEL LH	HFJ6202005DA	1	
19	WATER PROOFING PANEL RH	HFJ6202006DA	1	
20	INNER DOOR PANEL LH	HFJ6202010DA	1	
21	INNER DOOR PANEL RH	HFJ6202020DA	1	
22	CLIP	Q/2A-CJ-170	10	

FIGURE 142 REAR HATCH DOOR

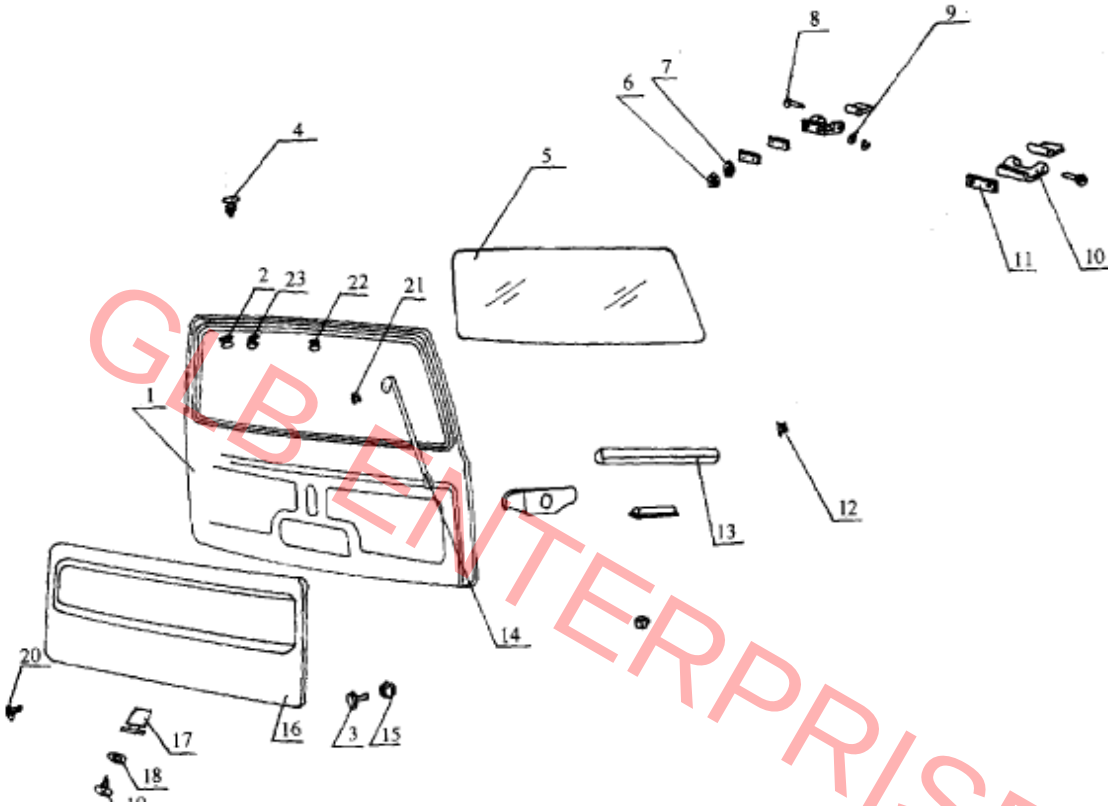


FIGURE 142 REAR HATCH DOOR

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	REAR HATCH ASM	HFJ6301100FA	1	SHEET MEAL ONLY
2	PLUG	HFJ6300007FA	1	
3	BOLT	Q/2A-CJ-101 M6X14	8	
4	PLASTIC BUTTON	Q/2A-CJ-176	4	
5	REAR HATCH GLASS	HFJ6303010DA	1	
6	NUT	Q/2A-CJ-104 M10X1.25-8	4	
7	WASHER	Q40108	2	
	HATCH DOOR HINGE			
8	PIN	HFJ6306005DA	2	
9	WASHER	Q/2A-CJ-111-7	2	
	HATCH DOOR FIXED			
10	HINGE HOLDER	HFJ6306010DA	2	
	HINGE ADJUSTING			
11	SHIM	HFJ6306006DA	4	
12	NUT	Q/2A-CJ-105 M10X1.25-8	4	
13	LICENSE COVER LAMP	HFJ6300010DA	1	
	REAR HATCH LIFT			
14	STRUT	HFJ6309000DA	2	
15	STOPPER	HFJ6300020DA	2	
	HATCH INNER TRIM			
16	PANEL	HFJ6302005DA	1	
17	NUT	Q/2A-CJ-112	2	
18	WASHER	Q/2AJ22 6X12X1	2	
19	SCREW	Q/2A-CJ-47A ST5.5X30FS	2	
20	PANEL TRIM CLIP	Q/2A-CJ-91	13	
21	SPRING	Q/2A-CJ-110-6	1	
	REAR WASHER NOZZLE			
22	PLUG	HFJ6300005FA	1	
23	REAR WIPER PLUG	HFJ6300006FA	1	

FIGURE 143 SLIDING DOOR HINGE

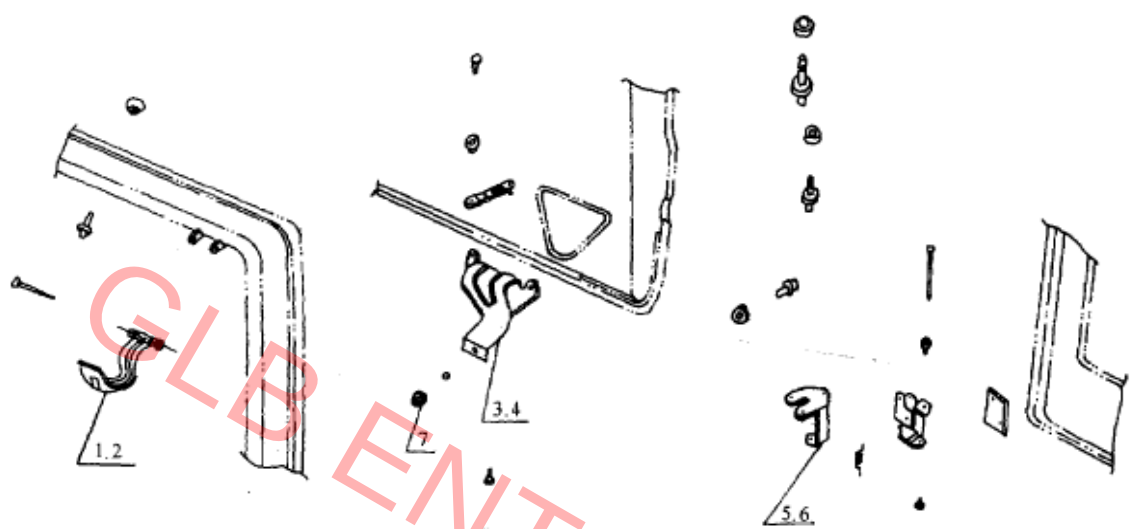


FIGURE 143 SLIDING DOOR HINGE

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	UPPER HINGE LH	HFJ6206100DA	1	
2	UPPER HINGE RH	HFJ6206200DA	1	
3	LOWER HINGE LH	HFJ6206500DA	1	
4	LOWER HINGE RH	HFJ6206600DA	1	
5	MIDDLE HINGE LH	HFJ6206300DA	1	
6	MIDDLE HINGE RH	HFJ6206400DA	1	
7	WASHER	Q/2A-CJ-35 M8X22-9.8	6	

GLB ENTERPRISES

FIGURE 144 FRONT DOOR LOCK

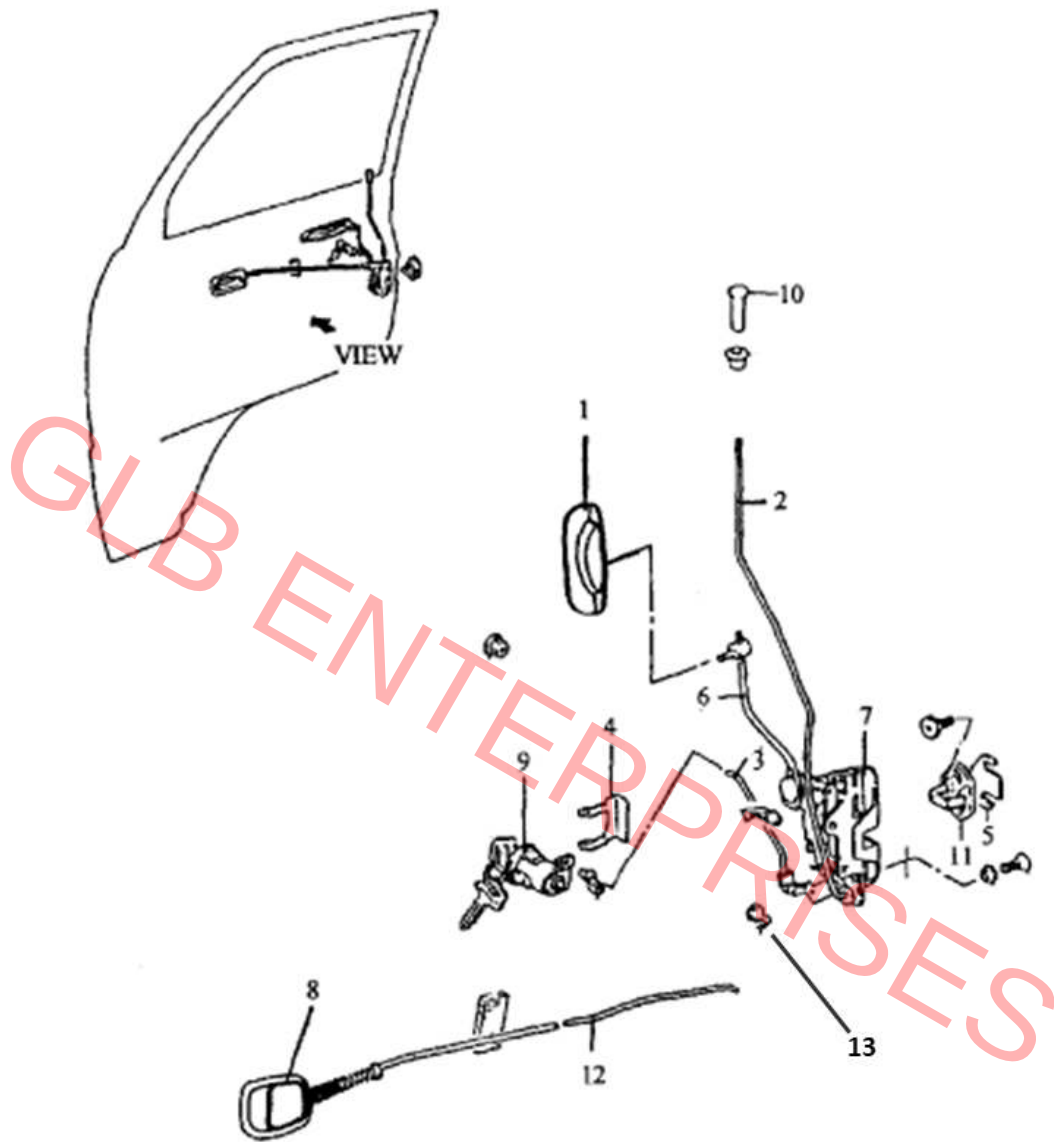


FIGURE 144 FRONT DOOR LOCK

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	DOOR HANDLE O/S LH	HFJ6405130DA	1	
	DOOR HANDLE O/S RH	HFJ6405140DA	1	
2	SAFETY LOCK ROD LH	HFJ6405101DH	1	
	SAFETY LOCK ROD RH	HFJ6405102DH	1	
3	DOOR LOCK TENSION ROD LH	HFJ6405103DA	1	
	DOOR LOCK TENSION ROD RH	HFJ6405104DA	1	
4	DOOR LOCK CYLINDER CLIP	HFJ6405105DA	2	
5	STRIKER SPACER	HFJ6405106DA	2	
6	DOOR HANDLE O/S LH TENSION ROD	HFJ6405107DA	1	
	DOOR HANDLE O/S RH TENSION ROD	HFJ6405108DA	1	
7	FRONT DOOR LATCH ASM LH	HFJ6405110DA	1	SEE PHOTO
		HFJ6405110DH	1	SEE PHOTO
	FRONT DOOR LATCH ASM RH	HFJ6405120DA	1	SEE PHOTO
		HFJ6405120DH	1	SEE PHOTO
8	INSIDE DOOR HANDLE LH	HFJ6405150DA-C	1	CABLE TYPE
	INSIDE DOOR HANDLE LH	HFJ6405150DA-R	1	ROD TYPE
	INSIDE DOOR HANDLE RH	HFJ6405160DA-C	1	CABLE TYPE
	INSIDE DOOR HANDLE RH	HFJ6405160DA-R	1	ROD TYPE
9	DOOR LOCK LH	HFJ6405170DA	1	
	DOOR LOCK RH	HFJ6405180DA	1	
10	LOCK KNOB	HFJ6405210DA	2	
11	DOOR STRIKER	HFJ6405220DA	2	
12	INSIDE DOOR HANDLE TENSION ROD LH	HFJ6405230DA	1	
	INSIDE DOOR HANDLE TENSION ROD RH	HFJ6405240DA	1	
13	DOOR INNER ROD JOINT CLIP	AC64050052	A/R	
N/S	INSIDE DOOR HANDLE CABLE LH 24"	HFJ6405230DH	1	
N/S	INSIDE DOOR HANDLE CABLE RH 24"	HFJ6405240DH	1	
N/S	INSIDE DOOR HANDLE BEZEL LH	DA6405B004LH	1	
N/S	INSIDE DOOR HANDLE BEZEL RH	DA6405B004RH	1	
N/S	DOOR LOCK KNOB BUCKLE\ CLIP	HFJ6405213DA	2	

PHOTO'S NEXT PAGE

FIGURE 144 FRONT DOOR LOCK



FIGURE 145 REAR HATCH LOCK

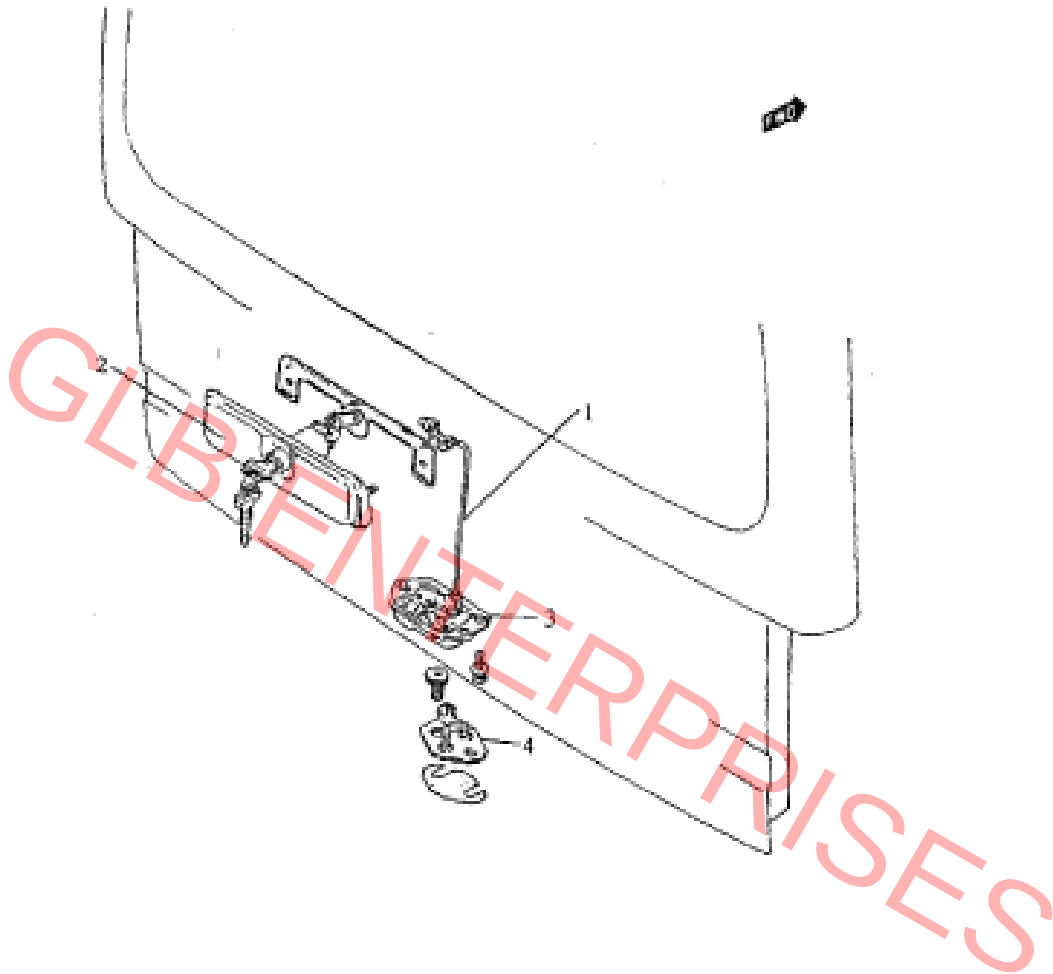


FIGURE 145 REAR HATCH LOCK

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	HATCH DOOR LOCK TENSION ROD	HFJ6305005DA	1	
2	HATCH O/S DOOR HANDLE	HFJ6305010DA	1	
3	HATCH LOCK	HFJ6305020DA	1	
4	HATCH DOOR STRIKER	HFJ6305030DA	1	

GLB ENTERPRISES

FIGURE 146 VAN SLIDING DOOR LOCK

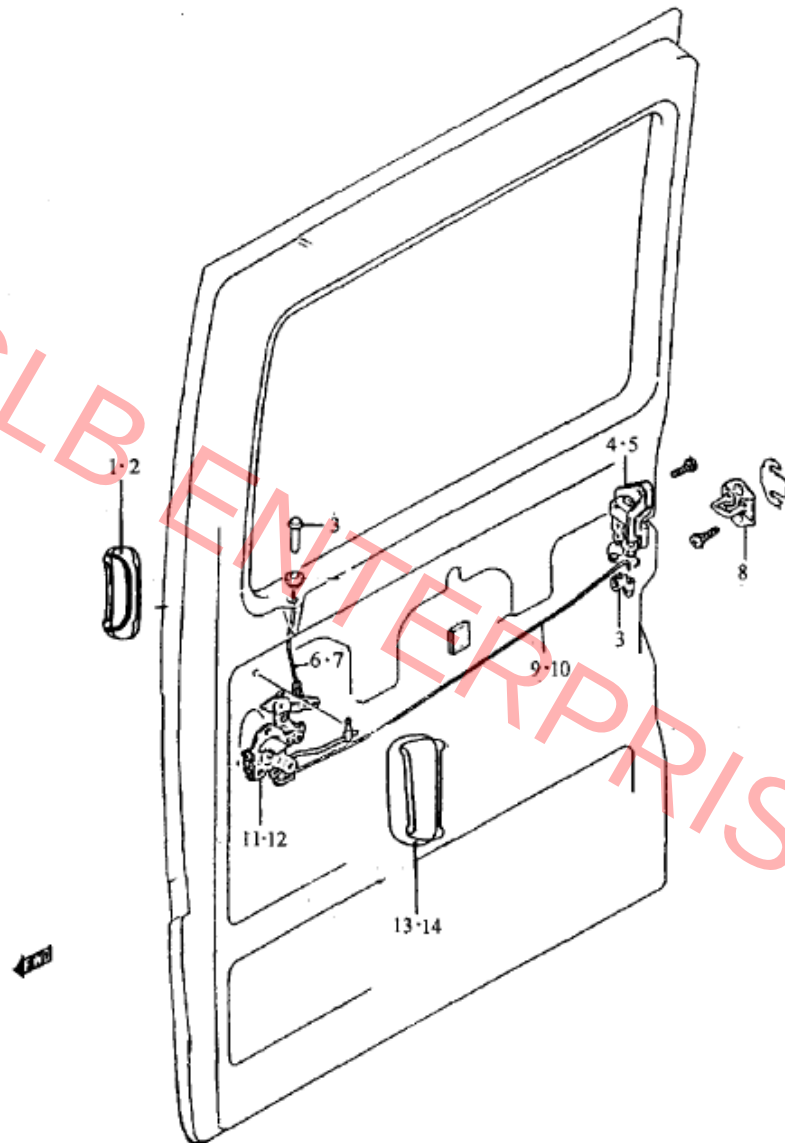


FIGURE 146 VAN SLIDING DOOR LOCK

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	DOOR HANDLE O/S LH	HFJ6205050DA	1	
2	DOOR HANDLE O/S RH	HFJ6205060DA	1	
3	LOCK KNOB	HFJ6405210DA	2	
4	DOOR LATCH LH	HFJ6205010DA	1	
5	DOOR LATCH RH	HFJ6205020DA	1	
6	LOCK KNOB TENSION CABLE LH	HFJ6205005DA	1	
7	LOCK KNOB TENSION CABLE RH	HFJ6205006DA	1	
8	STRIKER	HFJ6405220DA	2	
9	DOOR RELEASE CABLE LH	HFJ6205007DB	1	
10	DOOR RELEASE CABLE RH	HFJ6205007DB	1	
11	STOPPER/LOCK LH	HFJ6205030DA	1	
12	STOPPER/LOCK RH	HFJ6205040DA	1	
13	DOOR HANDLE INSIDE LH	HFJ6205070DA	1	
14	DOOR HANDLE INSIDE RH	HFJ6205080DA	1	

FIGURE 147 FRONT & REAR BUMPER

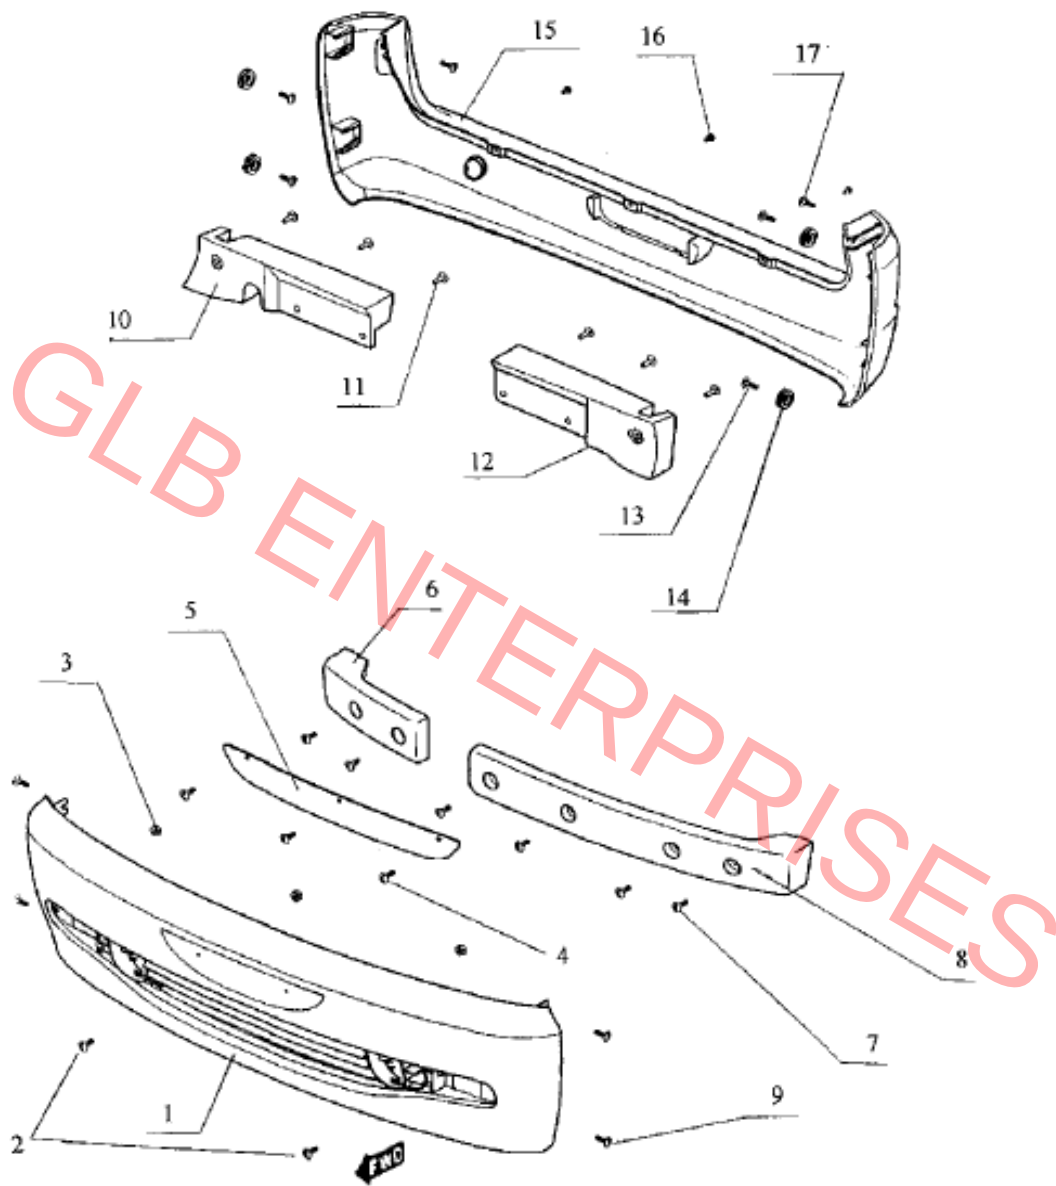


FIGURE 147 FRONT & REAR BUMPER

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	FRONT BUMPER	HFJ2803005DA	1	
2	WASHER	Q/2A-CJ-105 M6X16	2	
3		Q/2A-CJ-105 M6X16	3	HFJ6350B, HFJ6350C, HFJ6351B, HFJ6351C, HFJ1011B, HFJ1011H
		Q/2AJ22 10X20X1	6	HFJ6350B, HFJ6350C, HFJ6351B, HFJ6351C, HFJ1011B, HFJ1011H
4	WASHER	Q214B0412	3	
5	FRONT GRILL	HFJ5304101DA	1	HFJ6371, HFJ7371
		HFJ5304201DA	1	HFJ1011G, HFJ1011H, HFJ6376
6	BUMPER FOAM RH	HFJ2803006DA	1	
7	CLIP	Q/2A-CJ-113	6	HFJ6350B, HFJ6350C, HFJ6351B, HFJ6351C
8	BUMPER FOAM LH	HFJ2803007DA	1	HFJ1011G, HFJ1011H
9	WASHER	Q/2A-CJ-62 M6	4	
	REAR BUMPER FOAM			
10	RH	HFJ2803008DA	1	
11	CLIP	Q/2A-CJ-113	6	
12	REAR BUMPER FOAM LH	HFJ2803007DA	1	
13	BOLT	Q/2A-CJ-101 M8X20	4	HFJ6350B, HFJ6350C, HFJ6351B, HFJ6351C
14	FIXED WHEEL	HFJ2804006DA	4	
15	REAR BUMPER	HFJ2804005CA	1	
16	SCREW	HFJ2804011DA	3	
17	WASHER	Q/2A-CJ-81 M6X25	2	
	REFLECTOR (BUMPER			
18	MOUNT VAN)	HFJ3760110DA	2	

FIGURE 148 FRONT BUMPER (VAN)

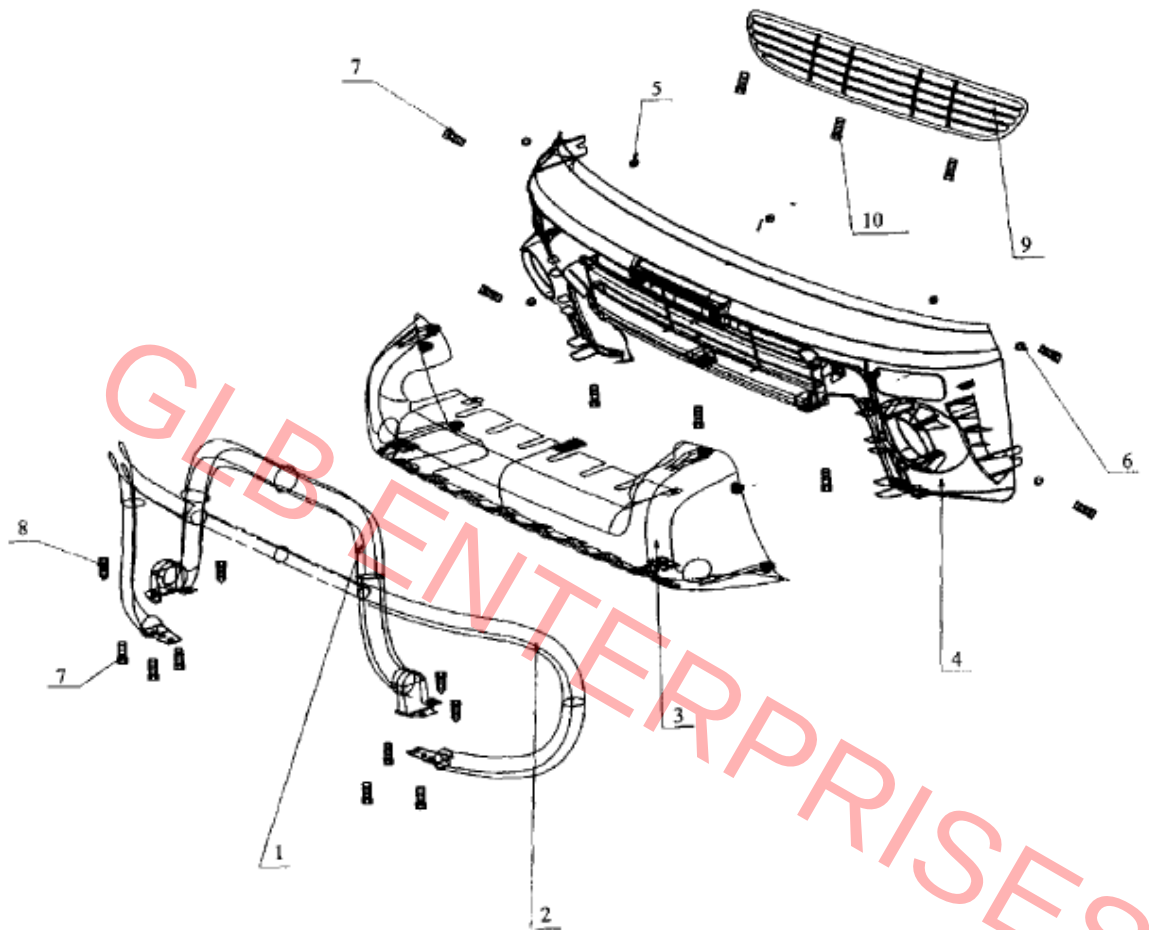


FIGURE 148 FRONT BUMPER (VAN)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	FRONT BUMPER CENTER DECO PIPE	HFJ2803130DA	1	
2	FRONT BUMPER DECO PIPE LH/RH	HFJ2803DN	2	
3	FRONT BUMPER FORESIDE	HFJ2803120DB	1	
4	FRONT BUMPER	HFJ2803110DN	1	HFJ6371, HFJ6371B, HFJ6371C
		HFJ2803000DP	1	HFJ6376
5	NUT	Q/2A-CJ-105 M6	3	
6	WASHER	Q/2AJ22 M6X20X1	8	
7	BOLT	Q/2A-CJ-62 M6X16	13	
8	BOLT	Q/2A-CJ-62 M8X26	4	
9	FRONT GRILL	HFJ5304101DA	1	
10	BOLT	Q214B0414-6G	3	

GLB ENTERPRISES

FIGURE 149 WINDSHIELD GLASS

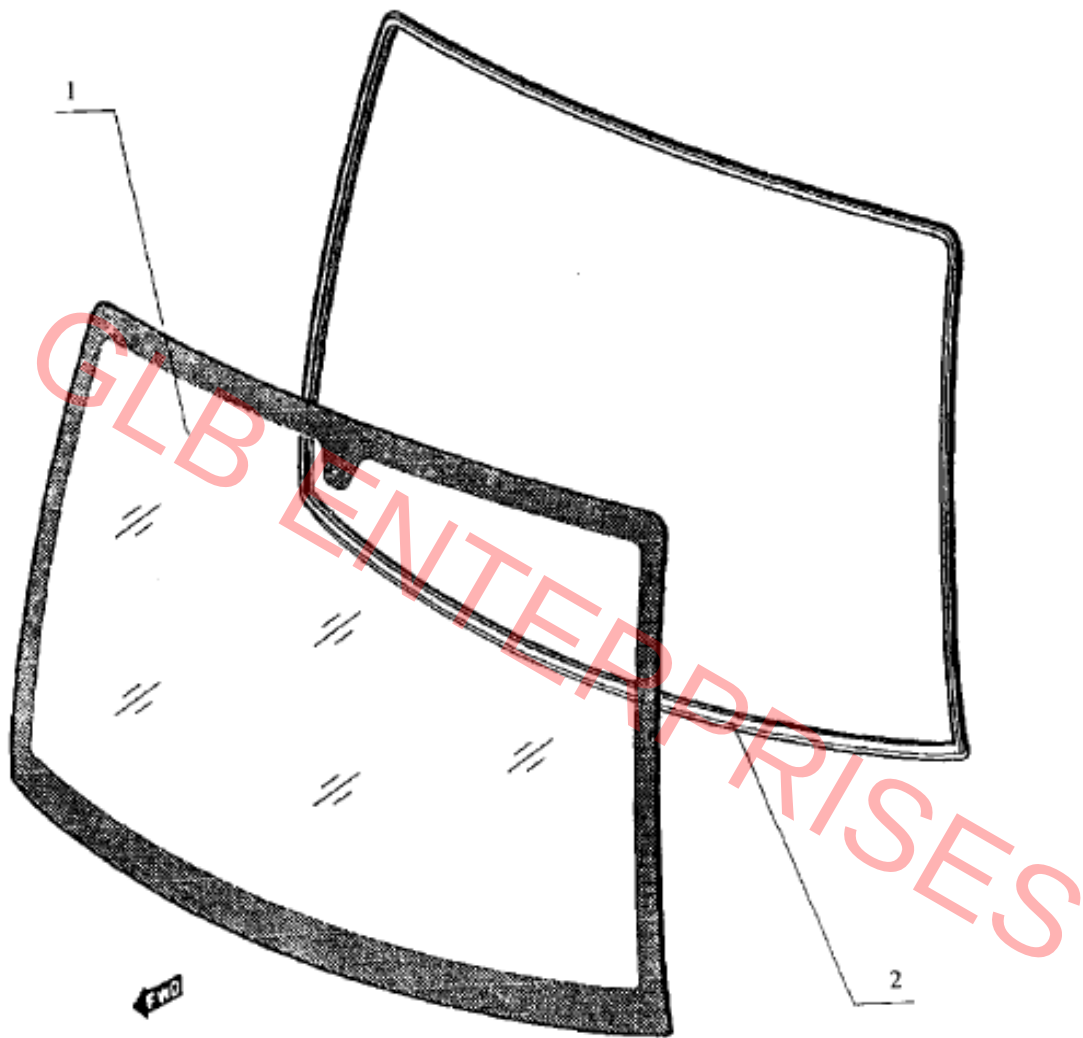


FIGURE 149 WINDSHIELD GLASS

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	WINDSHIELD GLASS	HFJ5206101DA	1	
2	WINDSHIELD GLASS SEAL	HFJ5206102DA	1	

GLB ENTERPRISES

FIGURE 150 WHEEL HOUSE

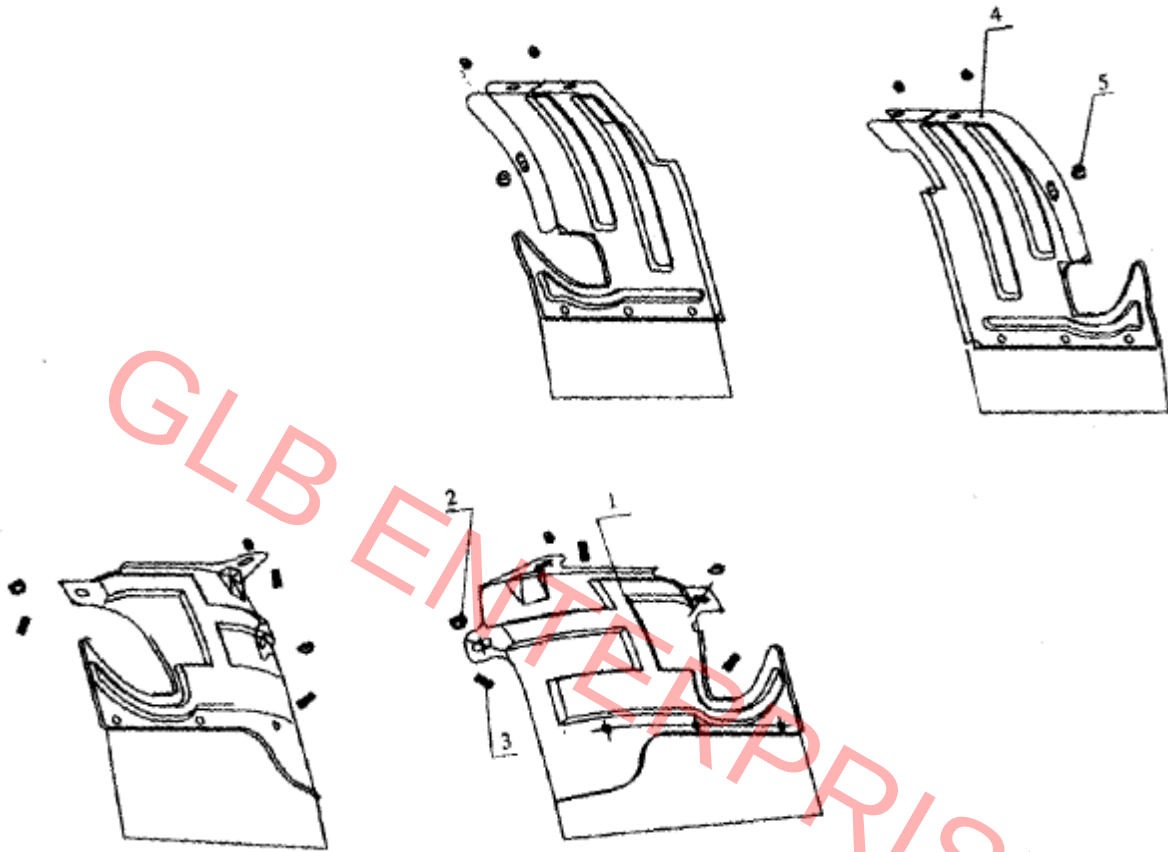


FIGURE 150 WHEEL HOUSE

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	FRONT WHEEL HOUSE LH	HFJ2802100DA	1	HFJ6371, HFJ1011G, HFJ1011H
	FRONT WHEEL HOUSE RH	HFJ2802200DA	1	HFJ6371, HFJ1011G, HFJ1011H
2	NUT	Q/2AJ19-5	6	
3	SCREW	Q/2A-CJ-25A M5X16	4	
4	REAR WHEEL HOUSE LH	HFJ2802310DA	1	HFJ6371
	REAR WHEEL HOUSE RH	HFJ2802320DA	1	HFJ6371
5	NUT	Q/2A-CJ-44 M5	6	

GLB ENTERPRISES

FIGURE 151 HEADLINER

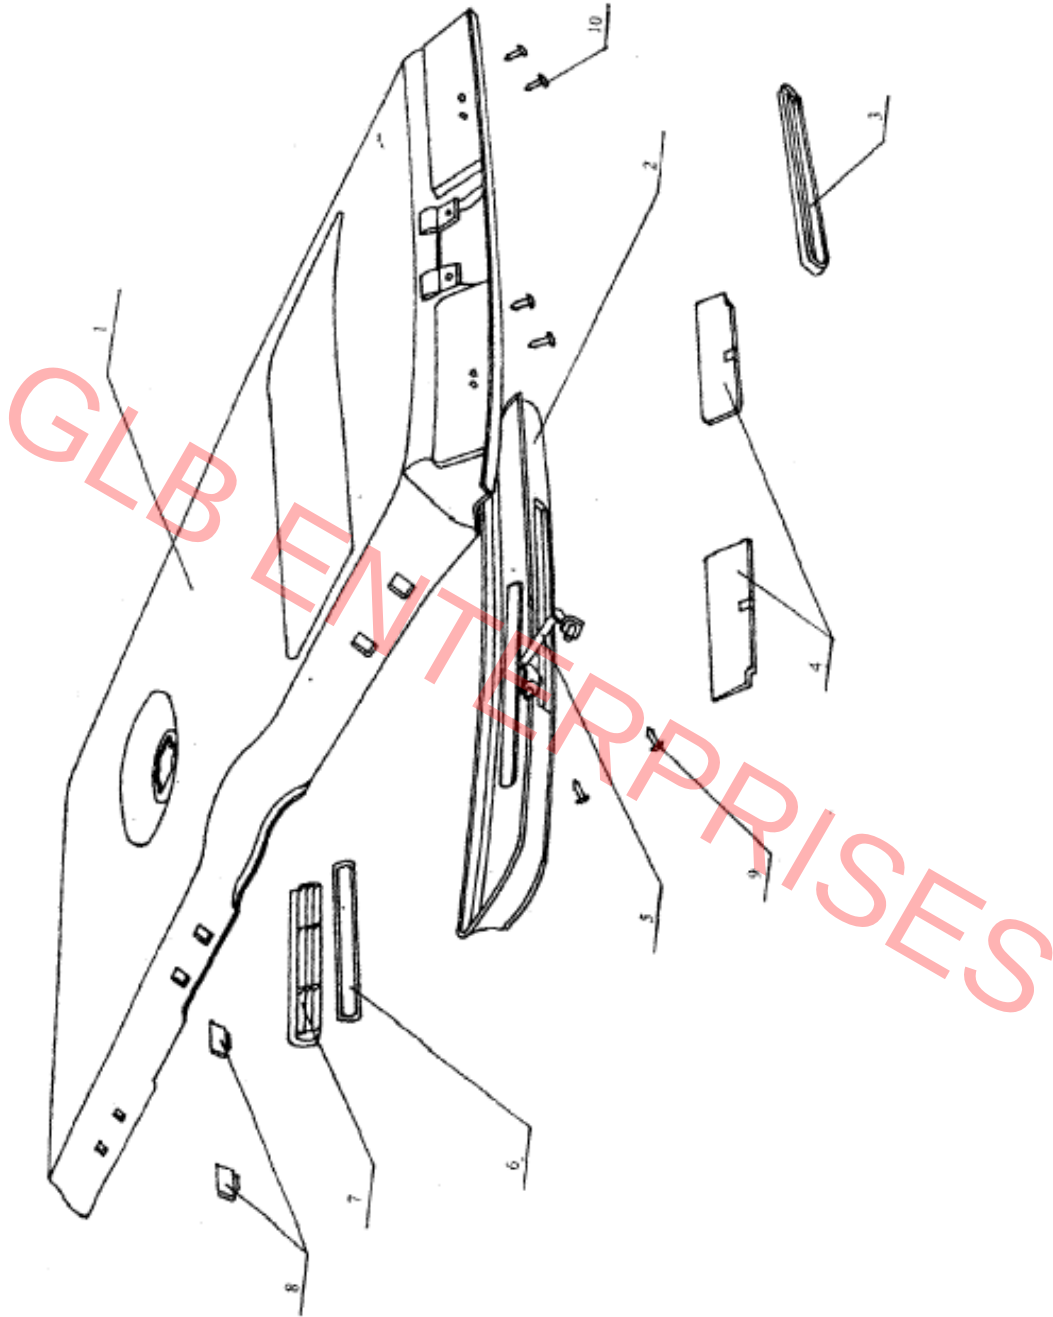


FIGURE 151 HEADLINER (VAN)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	HEADLINER	HFJ5702110DA	1	
2	EVAPORATOR COVER	HFJ5702210DA	1	
3	FRONT INLET GRID	HFJ5702230DA	1	
4	SUN VISOR LH	HFJ8402110DA	1	
	SUN VISOR RH	HFJ8402120DA	1	
5	GRAB	HFJ5702130DA	5	
6	SEAL WASHER	HFJ5702120DA	1	
7	OUTLET GRID ASM	HFJ5702120DA	1	
	HATCH DOOR HINGE			
8	ADJUSTING CAP	HFJ5702120DA	2	
9	SCREW	Q/2A-CJ-108A M6X40	10	
10	SCREW	Q/2A-CJ-104 ST4.8X32	4	

GLB ENTERPRISES

FIGURE 152 TRUCK BED

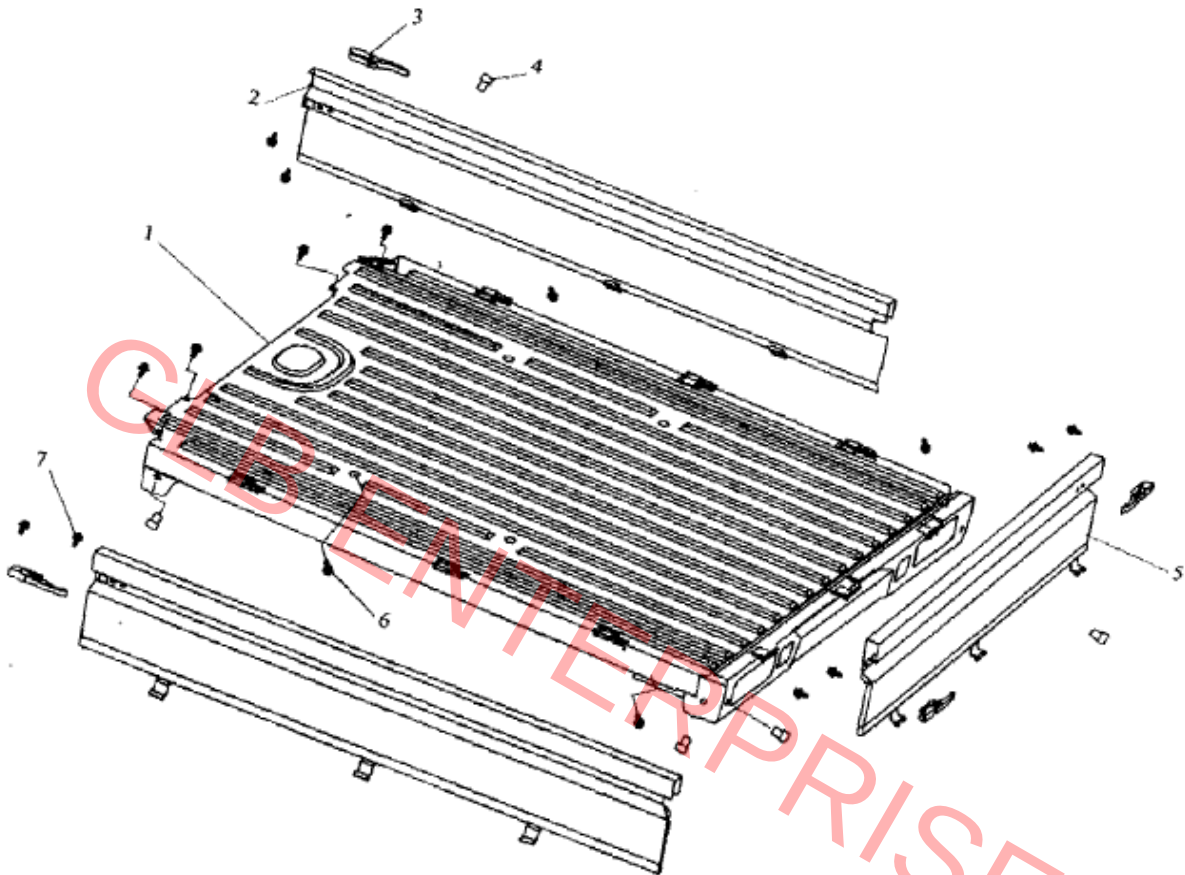


FIGURE 152 TRUCK BED

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	BOX FLOOR ASM	HFJ8501100DM	1	HFJ1011G
2	BOX SIDE PANEL RAILS LH	HFJ8502100DM	1	
	BOX SIDE PANEL RAILS RH	HJF8502200DM	1	
3	TAIL GATE LATCH	HFJ8505200DA	4	
4	CUSHION	HFJ5400451DA	1	
5	TAIL GATE ASM	HFJ8503100DA	1	
6	SCREW	Q/2A-CJ-271 M10X1.25X30	10	
7	SCREW	Q/2A-CJ-61 M6X14		

GLB ENTERPRISES

FIGURE 153 TRUCK BED (CREW CAB)

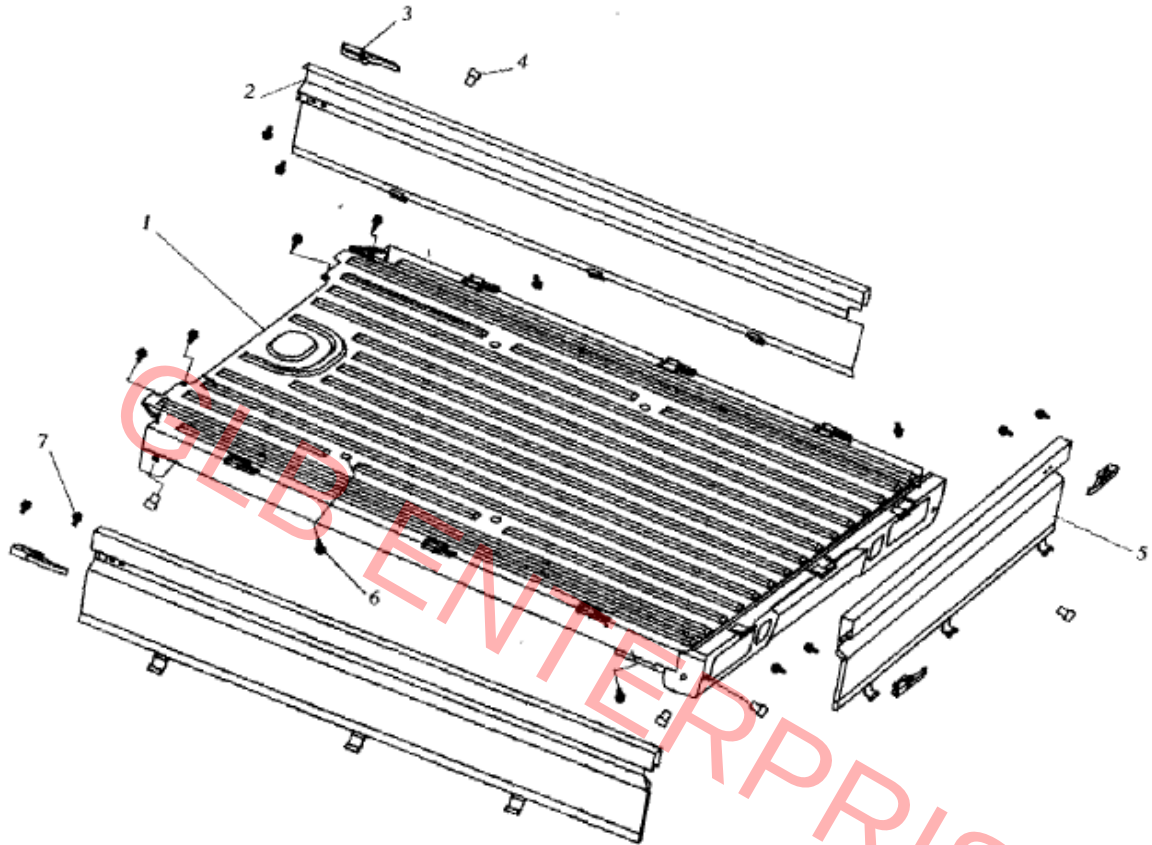


FIGURE 153 TRUCK BED (CREW CAB)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	BOX FLOOR ASM	HFJ8501100DM	1	HFJ1011H
2	BOX SIDE PANEL RAILS LH	HFJ8502100DM	1	
	BOX SIDE PANEL RAILS RH	HJF8502200DM	1	
3	LATCH	HFJ8505200DA	4	
4	CUSHION	HFJ5400451DA	1	
5	TAIL GATE ASM	HFJ8503100DA	1	
6	SCREW	Q/2A-CJ-271 M10X1.25X30	10	
7	SCREW	Q/2A-CJ-61 M6X14		

GLB ENTERPRISES

FIGURE 154 FLOOR ACCESSORIES

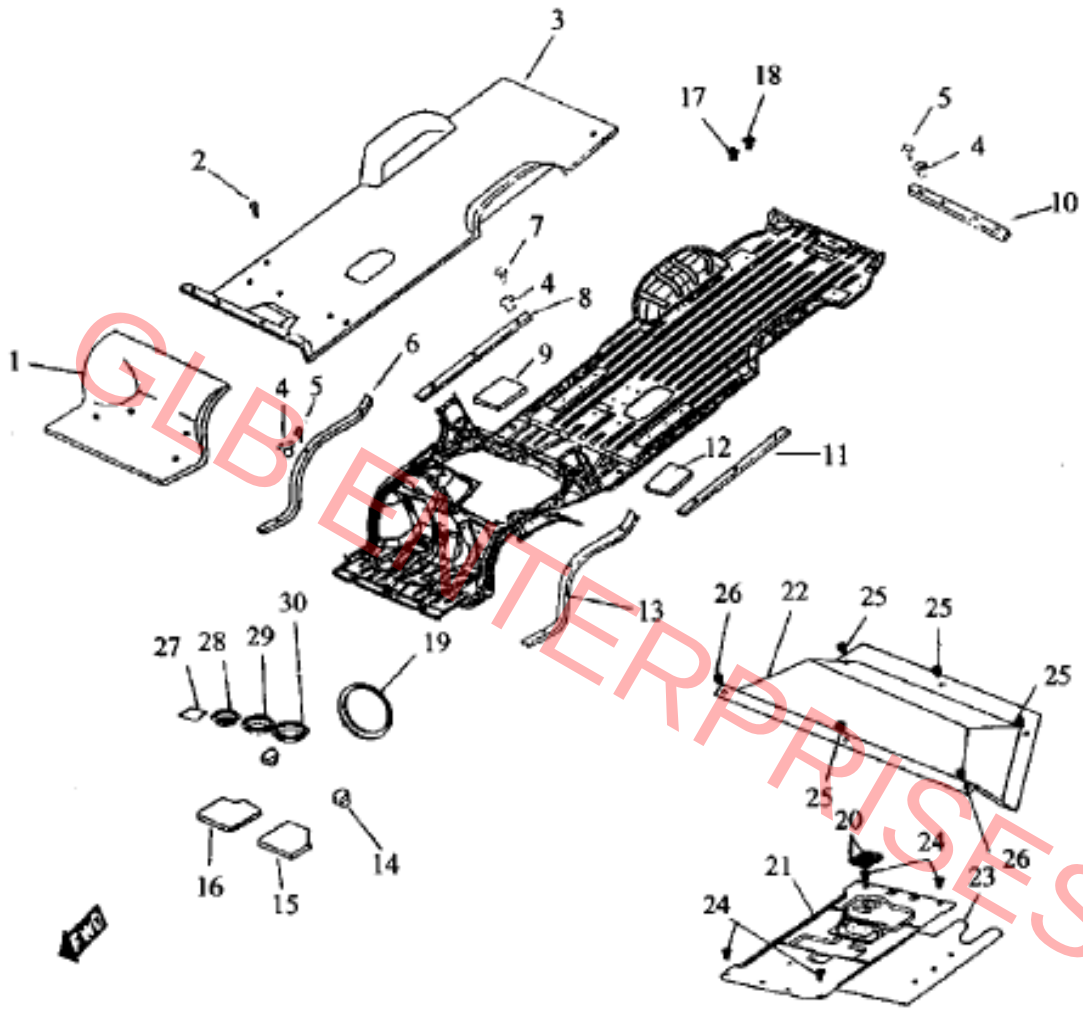


FIGURE 154 FLOOR ACCESSORIES

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	FRONT CARPET	HFJ5109101DB	1	
2	CLIP	Q/2AJ17-5	18	HFJ6371
		Q/2AJ-18-M5	4	HFJ1011G, HFJ1011H
3	REAR CARPET	HFJ5109102DB	1	HFJ6371
		HFJ5109102DK	1	HFJ1011H
4	PLASTIC NUT	Q/2A-CJ-100	16	HFJ6371
			6	HFJ1011G, HFJ1011H
5	SCRW	Q271B4232	10	HFJ6371
			6	HFJ1011G, HFJ1011H
6	FRONT SILL PLATE RH	HFJ5100202DA	1	
7	SCREW	Q271B4225	6	HFJ6371
8	SLIDING DOOR SILL PLATE RH	HFJ5100204DA	1	
9	RR FLOOR SILENCE RH HATCH DOOR SILL	HFJ5110104DA	1	HFJ6371, HFJ1011H
10	PLATE	HFJ5100205DA	1	HFJ6371
11	SLIDING DOOR SILL PLATE LH	HFJ5100203DA	1	
12	RR FLOOR SILENCE LH	HFJ5110103DA	1	HFJ6371, HFJ1011H
13	FRONT SILL PLATE LH	HFJ5100201DA	1	HFJ6371, HFJ1011G, HFJ1011H
14	PLUG	HFJ6200102EA	2	
15	FR FLOOR SILENCE LH	HFJ5110101DA	1	
16	FR FLOOR SILENCE RH	HFJ5110102DA	1	
17	CLIP	Q/2A-CJ-92A	4-16	HFJ6371
18	PLUG	HFJ5402430EA	2	HFJ6371
19	PLUG	Q/2A-CJS-500-2003	1	HFJ1011H
20	UPPER COVER PLUG	HFJ51101098DA	2	HFJ6371, HFJ1011G, HFJ1011H
21	UPPER COVER ASM	HFJ5107100DA	1	
22	ENGINE INSPECTION COVER ASM	HFJ5110110DA	1	HFJ6371, HFJ1011H
23	INSULATOR COVER UPPER	HFJ5110113CA		HFJ6371, HFJ1011G, HFJ1011H
24	BOLT	Q/2A-CJ-63 M6X16	4	
25	BOLT	Q/2A-CJ-81 M6X20	4	
26	BOLT	Q/2A-CJ-81 M6X25	2	
27	FRONT PILLAR SEAL	HFJ5400730EA	1	
28	NO.1 PLUG FOR A/C	HFJ5110106DA	3-5	
29	NO.2 PLUG FOR A/C	HFJ5110107DA	1	
30	NO.3 PLUG FOR A/C	HFJ5110108DA	2	

FIGURE 155 FRONT SEATS (HFJ1011H)


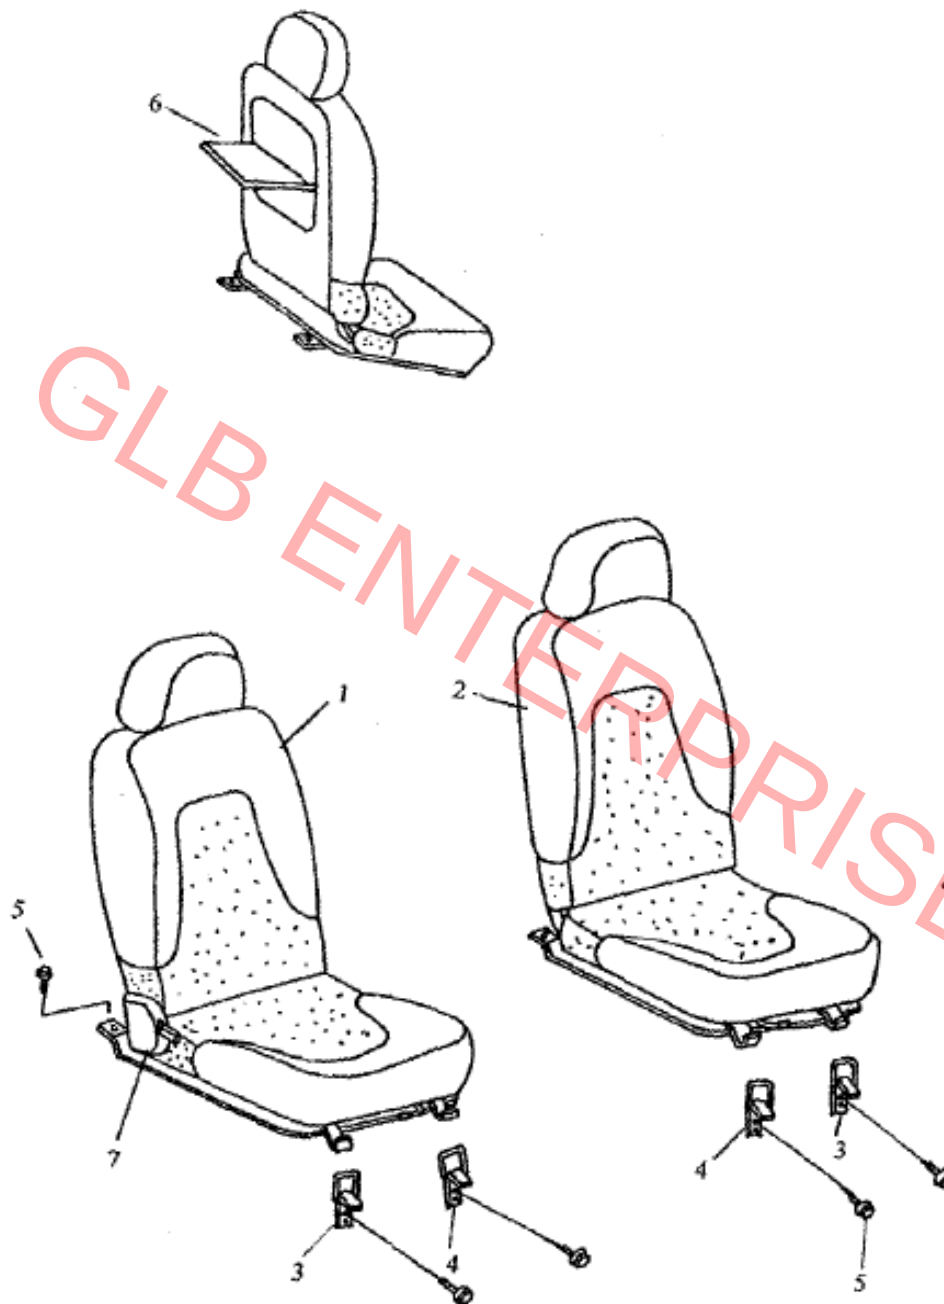


FIGURE 155 FRONT SEATS (HFJ1011H)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	FRONT SEAT RH	HFJ6800200DA	1	CREW CAB & VAN
2	FRONT SEAT LH	HFJ6800100DA	1	CREW CAB & VAN
3	SEAT LATCH	HFJ6800110CA	2	
4	SEAT LATCH	HFJ6800120CA	2	
5	SCREW	Q/2A-CJ-36 M6X18	12	
6	TABLE PLATE		2	
7	ADJUSTER LH	HFJ6800130	2	
	ADJUSTER RH	HFJ6800140	2	

GLB ENTERPRISES

FIGURE 156 FRONT SEATS (HFJ1011G,HFJ1011H)

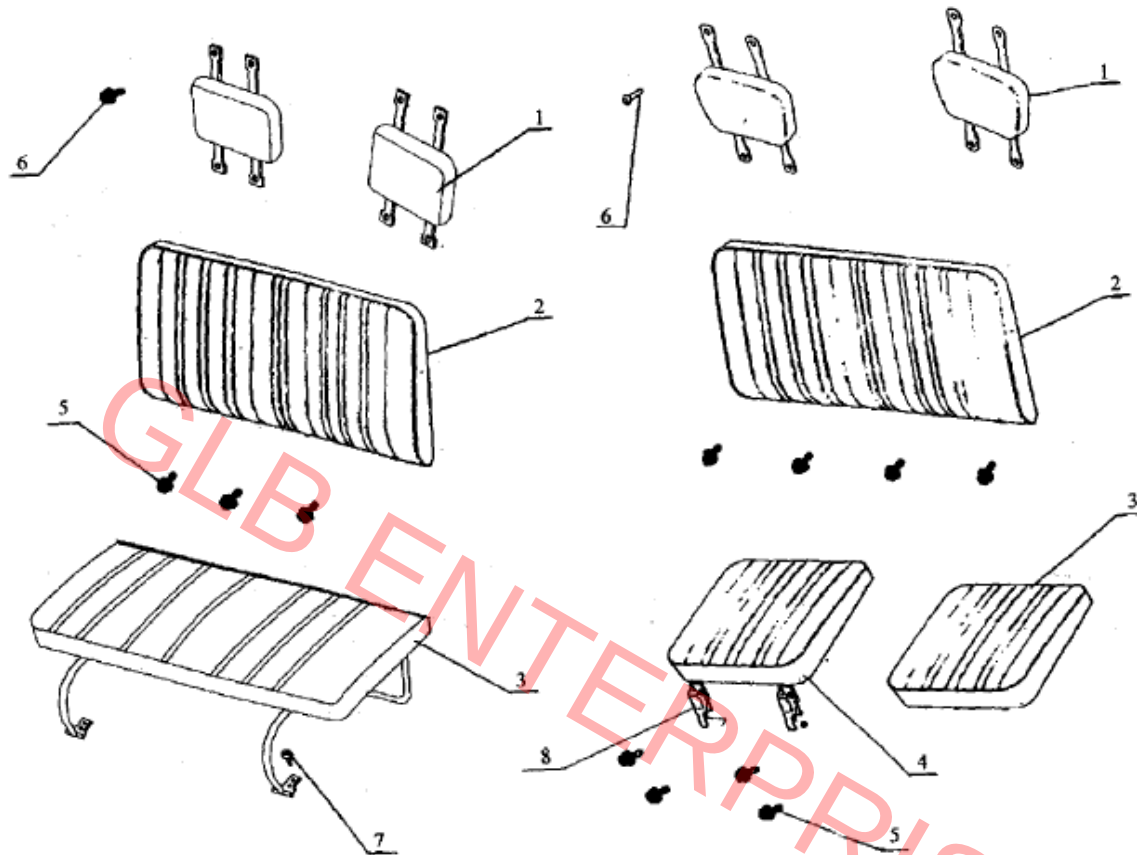

HFJ6800500DB
HFJ6800600DB

FIGURE 156 FRONT SEATS (HFJ1011G,HFJ1011H)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	HEAD REST	HFJ6800400DB	2	HFJ1011G, HFJ1011H
2	REAR SEAT BACK ASM	HFJ6800300DP	1	HFJ1011G
		HFJ7300200DP	1	HFJ1011H
3	SEAT PAD ASM LH	HFJ6800100DB	1	HFJ1011G
		HFJ7300100DP	1	HFJ1011H
4	SEAT PAD ASM RH	HFJ6800200DB	1	HFJ1011G
5	SCREW	Q/2A-CJS-291 M6X16	8	HFJ1011G
		Q/2A-CJ-35 M8X25-8.8	3	HFJ1011H
6	BOLT	Q/2A-CJ-63 M6X18	12	HFJ1011G
		Q/2A-CJ-35A M6X14	8	HFJ1011H
7	BOLT	Q/2A-CJ-35A M8X25-8.8	4	HFJ1011H
8	ADJUSTER LH	HFJ6800130	1	HFJ1011H
	ADJUSTER RH	HFJ6800140	1	HFJ1011H
	FRONT SEAT W/HEAD REST LH	HFJ6800100DA	1	HFJ1011G
	FRONT SEAT W/HEAD REST RH	HFJ6900100DA	1	HFJ1011G
NS	FRONT SEAT ASMLH	HFJ6800500DB	1	
NS	FRONT SEAT ASM RH	HFJ6800600DB	1	

FIGURE 157 MIDDLE SEATS (VAN)

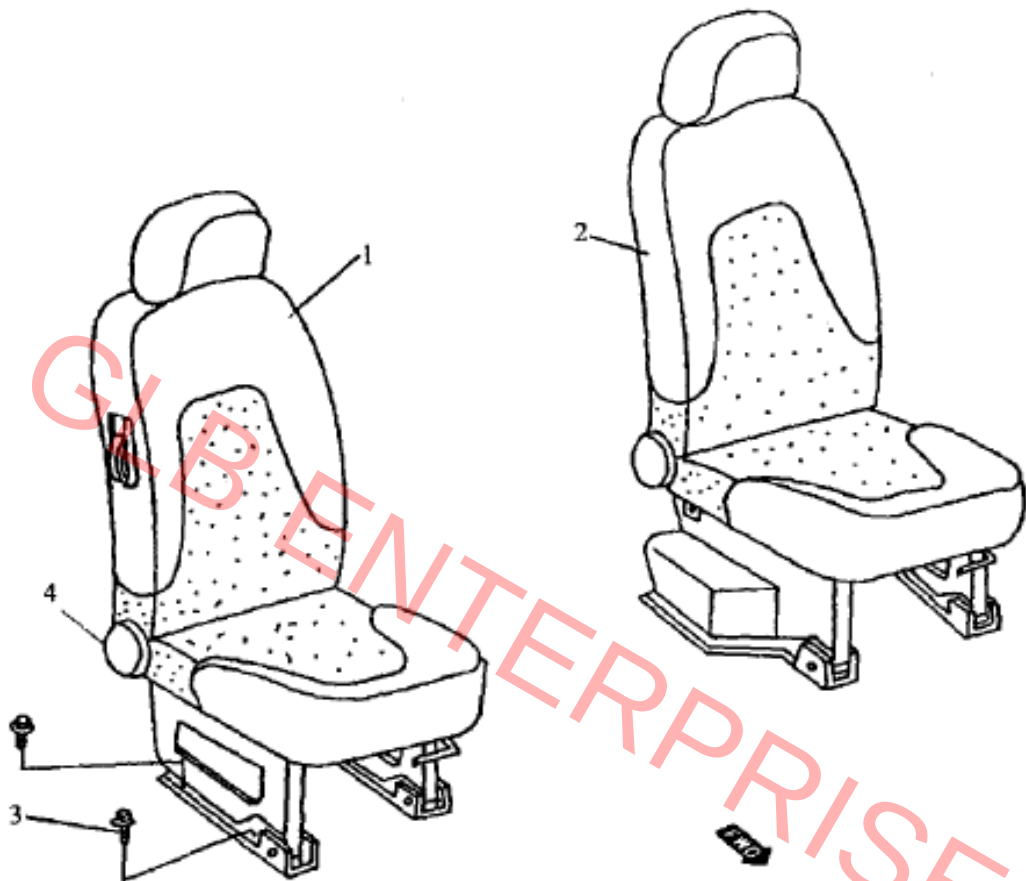


FIGURE 157 MIDDLE SEATS (VAN)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	MIDDLE SEAT RH	HFJ7100200DA	1	
		HFJ7200000FA	1	WITH HEAD PILLOW
		HFJ7200000FB	1	WITHOUT HEAD PILLOW
2	MIDDLE SEAT LH	HFJ7100100DA	1	
3	WASHER	Q/2A-CJ-35 M8X25	8	
		Q/2A-CJ-35A M8X22-8.8	8	SIMPLE SEATS
4	ADJUSTER LH	HFJ6800150	2	
	ADJUSTER RH	HFJ6800160	2	

GLB ENTERPRISES

FIGURE 158 REAR SEATS (3RD ROW)

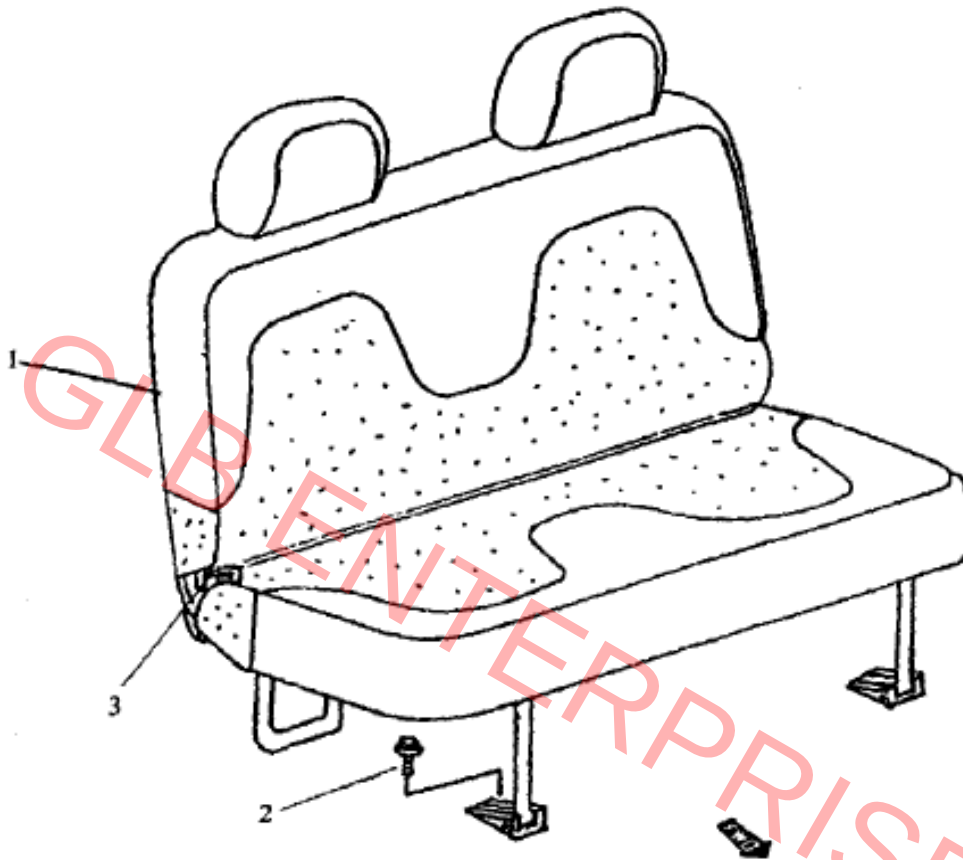


FIGURE 158 REAR SEATS (3RD ROW)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	REAR SEAT ASM	HFJ7300000DA	1	
2	SCREW/ WASHER	Q/2A-CJ-35 M8X25	4	
3	ADJUSTER	HFJ6800170	2	HFJ1011H

GLB ENTERPRISES

FIGURE 159 CONSOLE

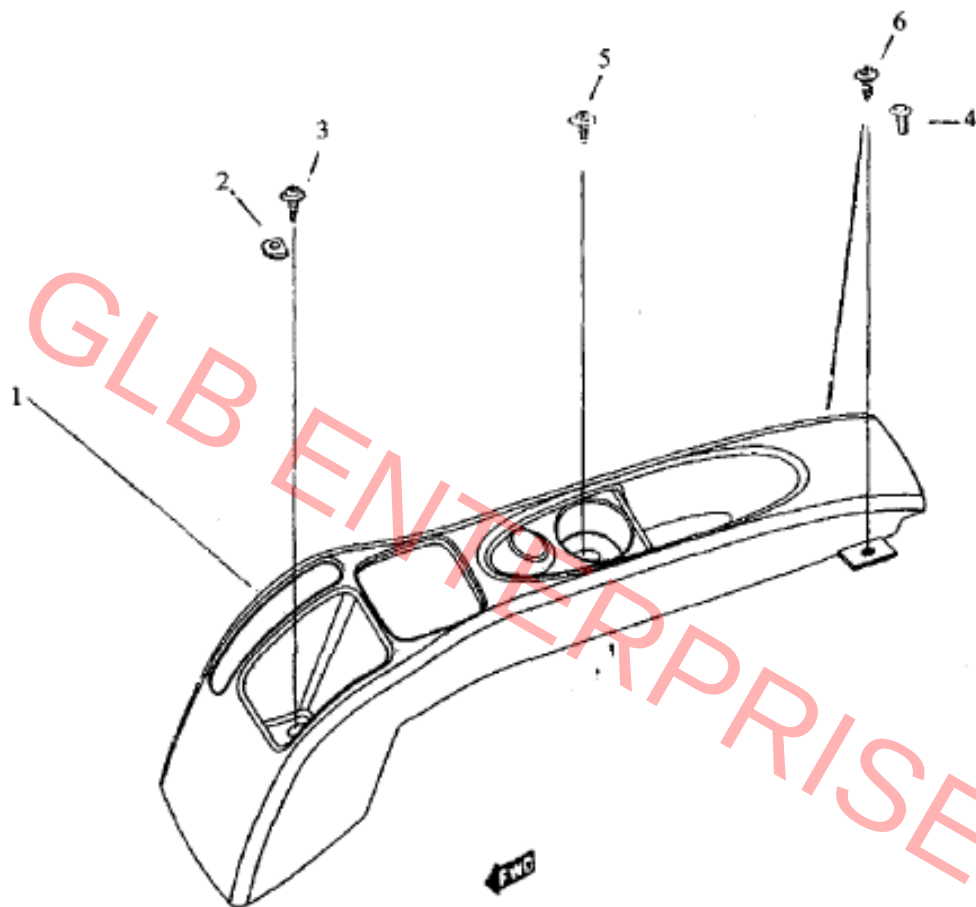


FIGURE 159 CONSOLE

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	CONSOLE ASM	HFJ5100110DA	1	HFJ6371, HFJ1011G, HFJ1011H
		HFJ5100110DL	1	HFJ6371, HFJ1011G, HFJ1011H
2	SPRING CLIP	Q/2A-CJ-147 M4.8-1	2	
3	SCREW	Q/2A-CJ-104-ST4.8X32	1	
4	CLIP	Q/2A-CJ-122-1998	2	
5	SCREW	Q/2A-CJ-104-ST4.8X25	1	
6	SCREW	Q/2A-CJ-104A-ST4.8X14	2	

GLB ENTERPRISES

FIGURE 160 BODY SIDE INNER GARNISH (VAN)

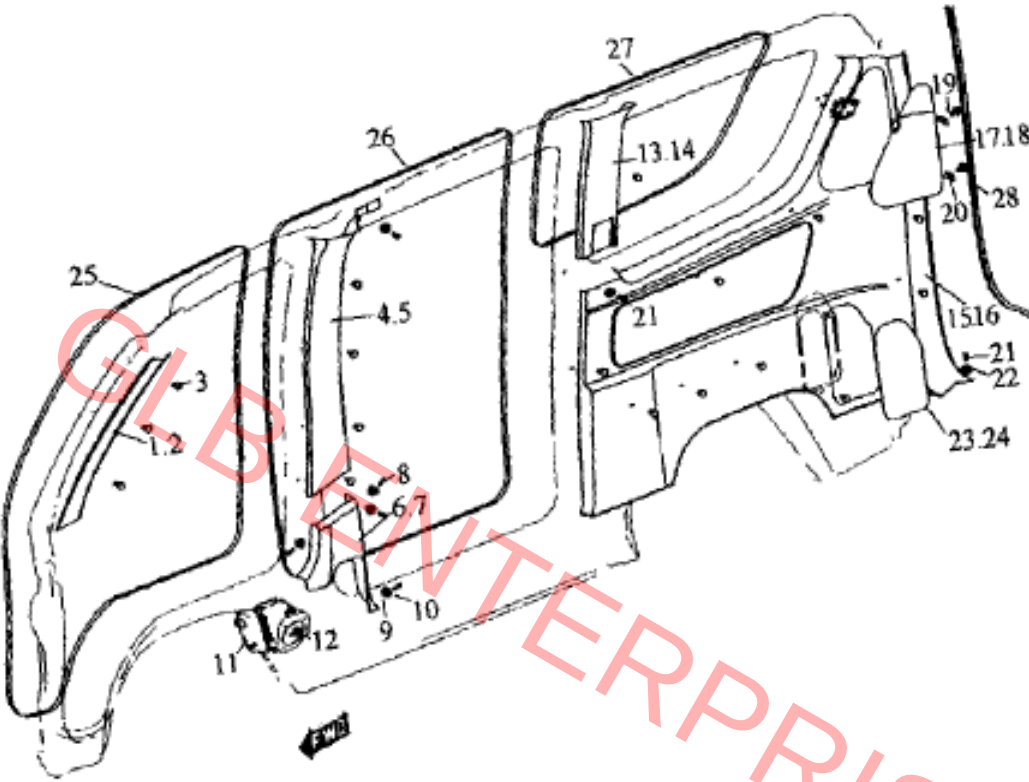


FIGURE 160 BODY SIDE INNER GARNISH (VAN)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	FRONT PILLAR INNER GARNISH LH	HFJ5402110DA	1	HFJ6371
2	FRONT PILLAR INNER GARNISH RH	HFJ5402120DA	1	HFJ6371
3	CLIP	Q/2A-CJ-91	34	
4	TRIM PANEL CENTER PILLAR UPPER LH	HFJ5402330DA	1	
5	TRIM PANEL CENTER PILLAR UPPER RH	HFJ5402340DA	1	
6	TRIM PANEL CENTER PILLAR LOWER LH	HFJ5402310DA	1	
7	TRIM PANEL CENTER PILLAR LOWER RH	HFJ5402320DA	1	
8	WASHER/SCREW	Q/2A-CJ-47-ST4.2X13	8	
9	NUT	Q/2A-CJ-90-A	12	
10	WASHER/SCREW	Q/2A-CJ-47-ST4.2X25	2	
11	FUEL TANK FILLER CAP	HFJ54003100DA	1	
12	WASHER/SCREW	Q/2A-CJ-28 M5X12	2	
13	CENTER PILLAR INNER TRIMING PANEL LH	HFJ5402510DA	1	
14	CENTER PILLAR INNER TRIMING PANEL RH	HFJ5402520DA	1	
15	REAR BODY SIDE INNER TRIMING PANEL LH	HFJ5402530DA	1	
16	REAR BODY SIDE INNER TRIMING PANEL RH	HFJ5402540DA	1	
17	REAR SPEAKER COVER LH	HFJ5402570DA	1	
18	REAR SPEAKER COVER RH	HFJ5402580DA	1	
19	SCREW	Q/2A-CJ-18 M4X12	4	
20	CLIP	Q/2A-CJ-94-4-3	4	
21	SCREW	Q/2A-CJ-47-ST4.2X16	4	
22	CLIP	Q/2A-CJ-100	1	
23	REAR BODY SIDE INNER TRIM LH	HFJ5402550DA	1	
24	REAR BODY SIDE INNER TRIM RH	HFJ5402560DA	1	
25	FRONT DOOR WEATHERSTRIP	HFJ5402130DA	2	
26	SLIDING DOOR WEATHERSTRIP	HFJ5402710DA	2	
27	SIDE WINDOW WEATHERSTRIP	HFJ5402710DA	2	
28	HATCH DOOR WEATHERSTRIP	HFJ5402590DA	1	

FIGURE 161 BODY SIDE OUTER GARNISH (VAN)

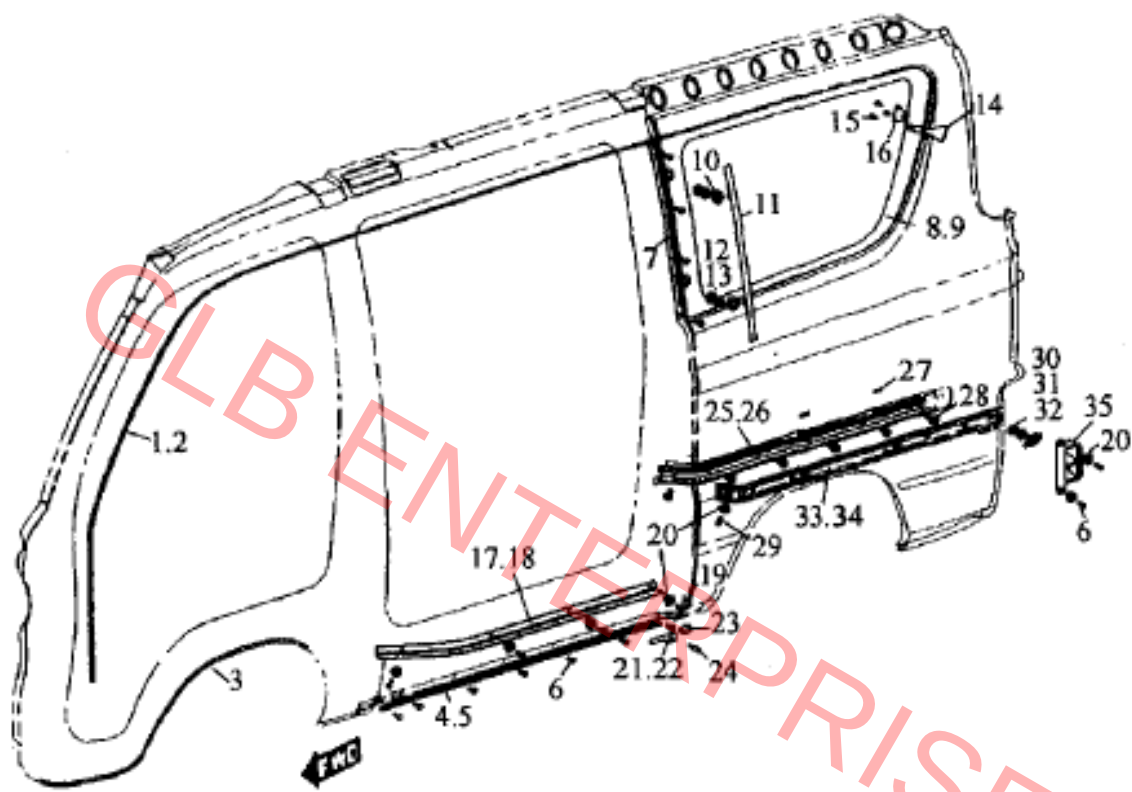


FIGURE 161 BODY SIDE OUTER GARNISH (VAN)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	UPPER WEATHERTRIP LH	HFJ5400111DA	1	
2	UPPER WEATHERTRIP RH	HFJ5400112DA	1	
3	FRONT DOOR LOWER DUST SEAL	HFJ5400131DA		
4	SLIDING DOOR LOWER DUST SEAL LH	HFJ5400151DA	1	
5	SLIDING DOOR LOWER DUST SEAL RH	HFJ5400152DA	1	
6	SCREW	Q/2A-CJ-47-ST4.2X12	2	
7	BODY SIDE WINDOW FRONT DUST SEAL	HFJ5403110DA	1	
8	REAR SIDE GLASS LH	HFJ5403301DA	1	
9	REAR SIDE GLASS RH	HFJ5403302DA		
10	SIDE WINDOW O'RING SIDE WINDOW HINGE	HFJ5403101DA	4	
11	ASM	HFJ5403320DA	2	
12	NUT	Q340B06	4	
13	WASHER	Q40206	4	
14	SIDE WINDOW LATCH ASM	HFJ5403310DA	2	
15	BOLT	Q/2A-CJ-28 M5X20	6	
16	SIDE WINDOW LATCH SHIM	HFJ5403102DA		
17	LOWER RAIL LH	HFJ5400411DA	1	
18	LOWER RAIL RH	HFJ5400412DA	1	
19	LOWER RAIL C-CLIP LH	HFJ5400413DA	1	
20	LOWER RAIL C-CLIP RH	HFJ5400414DA	1	
21	SLIDING DOOR BUMPER PAD	HFJ5400415DA	2	
22	SCREW	Q/2A-CJ-47-ST4.2X16	8	
23	NUT	Q/2A-CJ-90-A	12	
24	CHERRY RIVET	Q4420410	2	
25	CENTER RAIL ASM LH	HFJ5400510DA	1	
26	CENTER RAIL ASM RH	HFJ5400520DA	1	
27	CLIP	HFJ5400501DA	4	
28	SCREW	Q/2A-CJ-64- M5X12	12	
29	SCREW	Q/2A-CJ-47-ST4.2X16	2	
30	NUT	Q340B05	2	
31	WASHER	Q40105	2	
32	WASHER/SCREW	Q/2A-CJ-114- M5X12	2	
33	CENTER RAIL COVER ASM LH	HFJ5400530DA	1	
34	CENTER RAIL COVER ASM RH	HFJ5400540DA	1	
35	VENTILATIONG GRID ASM	HFJ5400210DA	1	

FIGURE 162 SEAT BELT

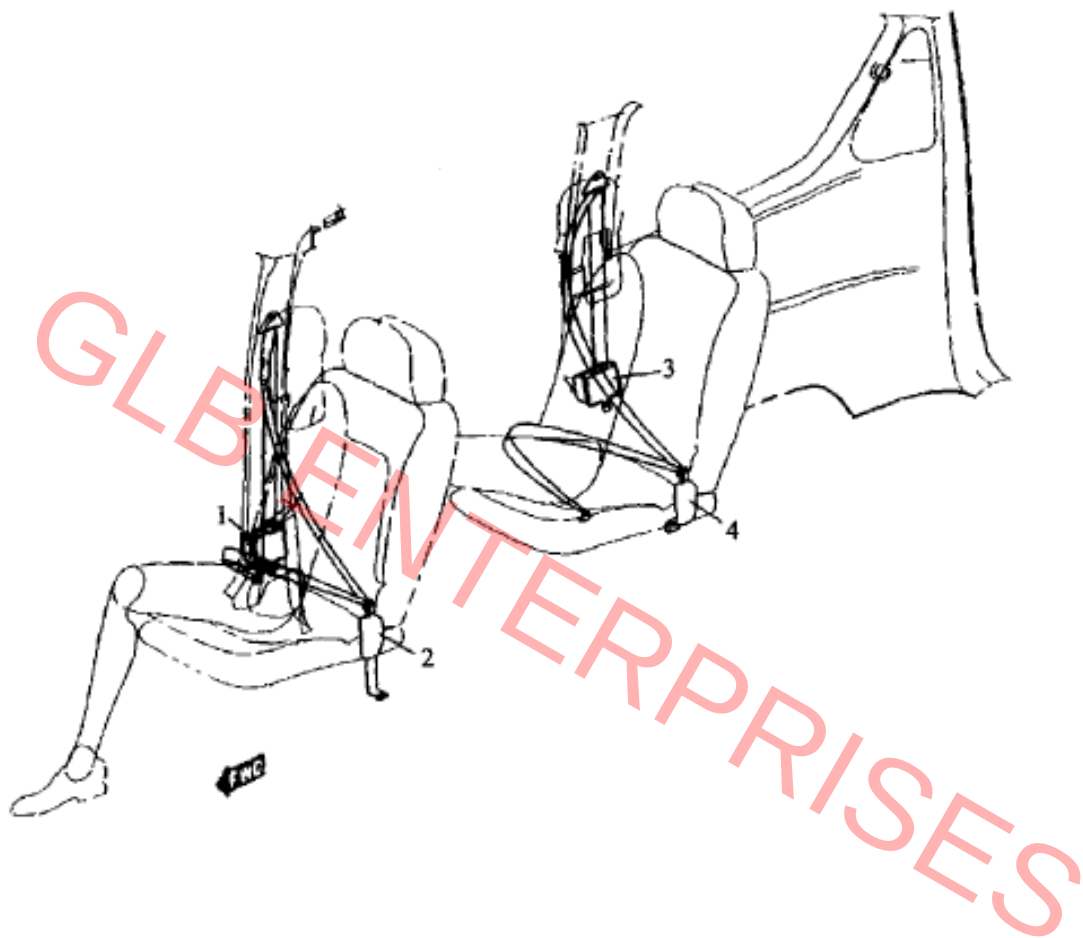


FIGURE 162 SEAT BELT

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	SEAT BELT ASM LH/RH	HFJ8212110DA	2	
	SEAT BELT LATCH			
2	LH/RH	HFJ8212130DA	2	
	SEAT BELT ASM REAR			
3	LH/RH	HFJ8212310DA	2	
	SEAT BELT LATCH REAR			
4	LH/RH	HFJ8212330DA	2	

GLB ENTERPRISES

FIGURE 163 BODY (SHEET METAL-VAN)

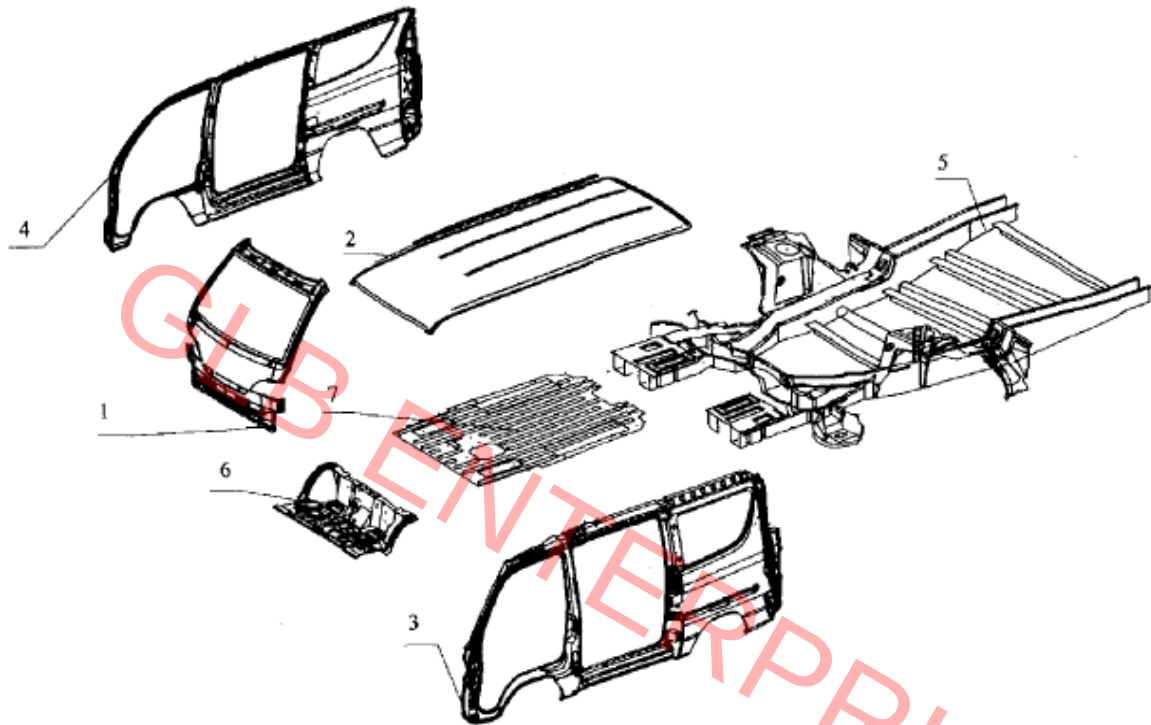


FIGURE 163 BODY (SHEET METAL-VAN)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	FRONT PANEL ASM	HFJ5301000DA	1	HFJ6371
2	ROOF PANEL ASM	HFJ5701100DA	1	
3	BODY SIDE ASM LH	HFJ5401100DA	1	
4	BODY SIDE ASM RH	HFJ5401200DA	1	
5	FRAME ASM	HFJ2801000DM	1	
6	FRONT FLOOR ASM	HFJ5101100DL	1	
7	REAR FLOOR ASM	HFJ5101200DL	1	

GLB ENTERPRISES

FIGURE 164 BODY (SHEET METAL-HFJ1011G)

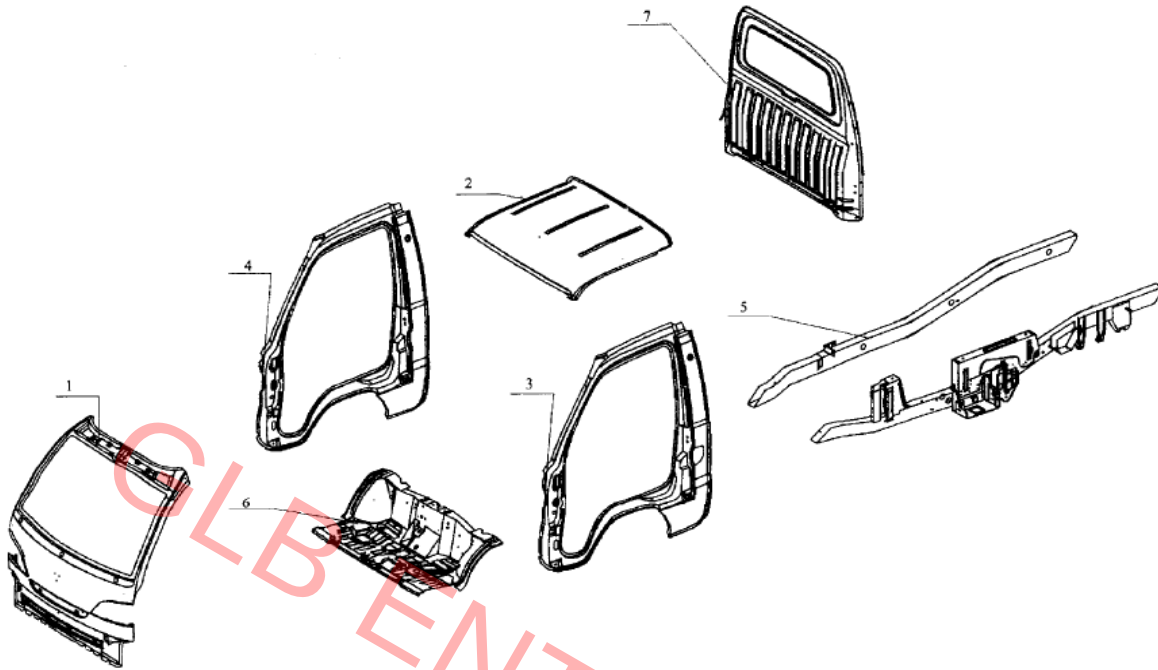


FIGURE 164 BODY (SHEET METAL-HFJ1011G)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	FRONT PANEL ASM	HFJ5301000DA	1	
2	ROOF PANEL ASM	HFJ5701100DD	1	
3	BODY SIDE ASM LH	HFJ5401100DJ	1	
4	BODY SIDE ASM RH	HFJ5401200DJ	1	
5	FRAME ASM	HFJ2801000DJ	1	
6	FRONT FLOOR ASM	HFJ5101100DC	1	EGI
		HFJ5101100DD	1	CARBURETOR
7	REAR PANEL ASM	HFJ5601100DA	1	

GLB ENTERPRISES

FIGURE 165 BODY (SHEET METAL-HFJ1011H)


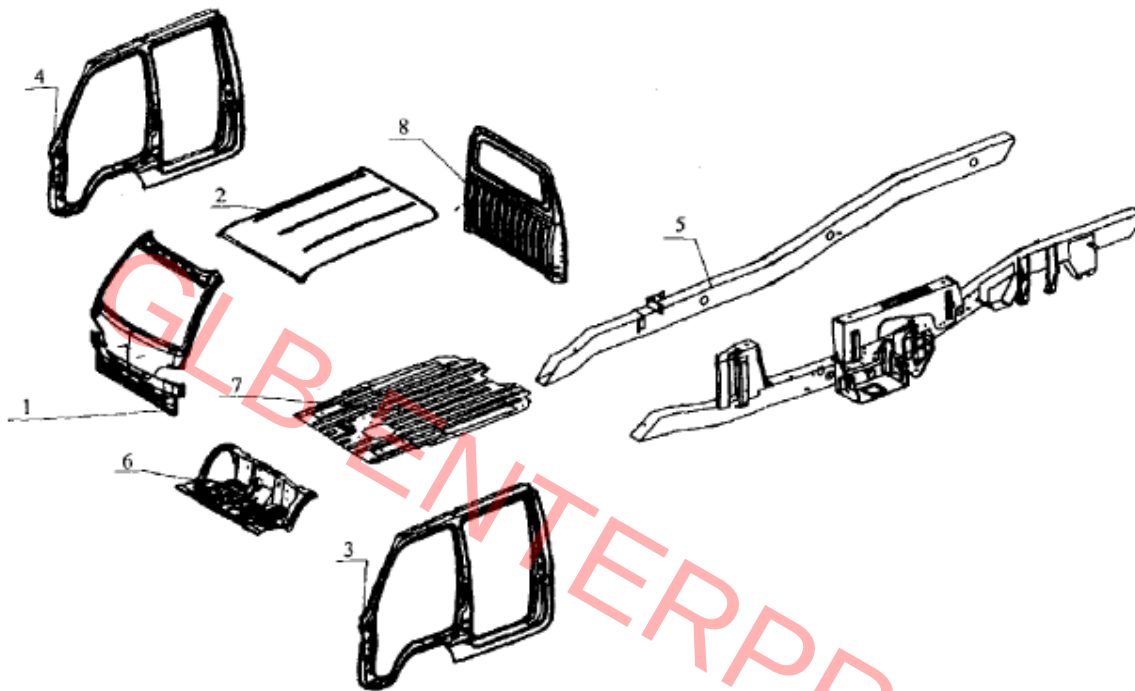


FIGURE 165 BODY (SHEET METAL-HFJ1011H)

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	FRONT PANEL ASM	HFJ5301000DA	1	HFJ1011H
		HFJ5301000DE	1	HFJ6376
2	ROOF PANEL ASM	HFJ5701100DB	1	
3	BODY SIDE ASM LH	HFJ5401100DK	1	
4	BODY SIDE ASM RH	HFJ5401200DK	1	
5	FRAME ASM	HFJ2801000DW	1	HFJ1011H
6	FRONT FLOOR ASM	HFJ5101100DK	1	
7	REAR FLOOR ASM	HFJ5101200DK	1	
8	REAR PANEL ASM	HFJ5601100DM	1	

GLB ENTERPRISES

FIGURE 166 REAR GLASS

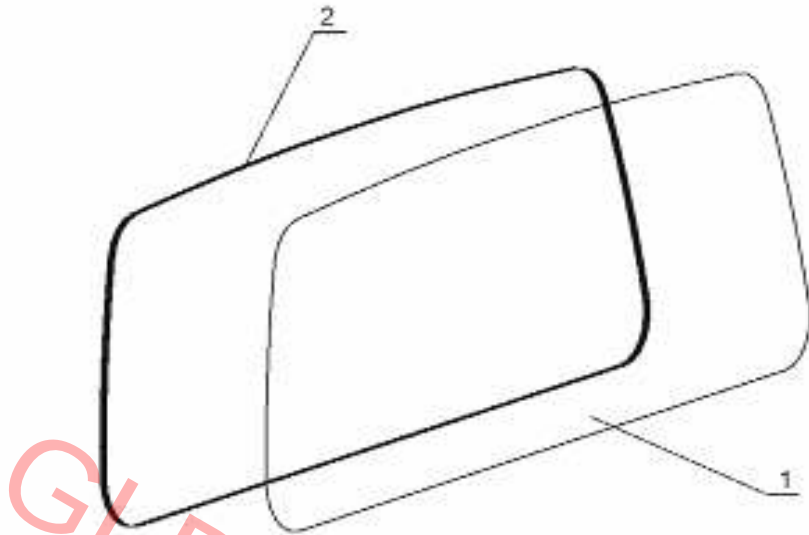

GLB ENTERPRISES

FIGURE 166 REAR GLASS

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	HFJ5603101DA	REAR GLASS	1	
2	HFJ5603102DA	REAR GLASS W/ WEATHERSTRIP	1	

GLB ENTERPRISES

FIGURE 167 MIRRORS

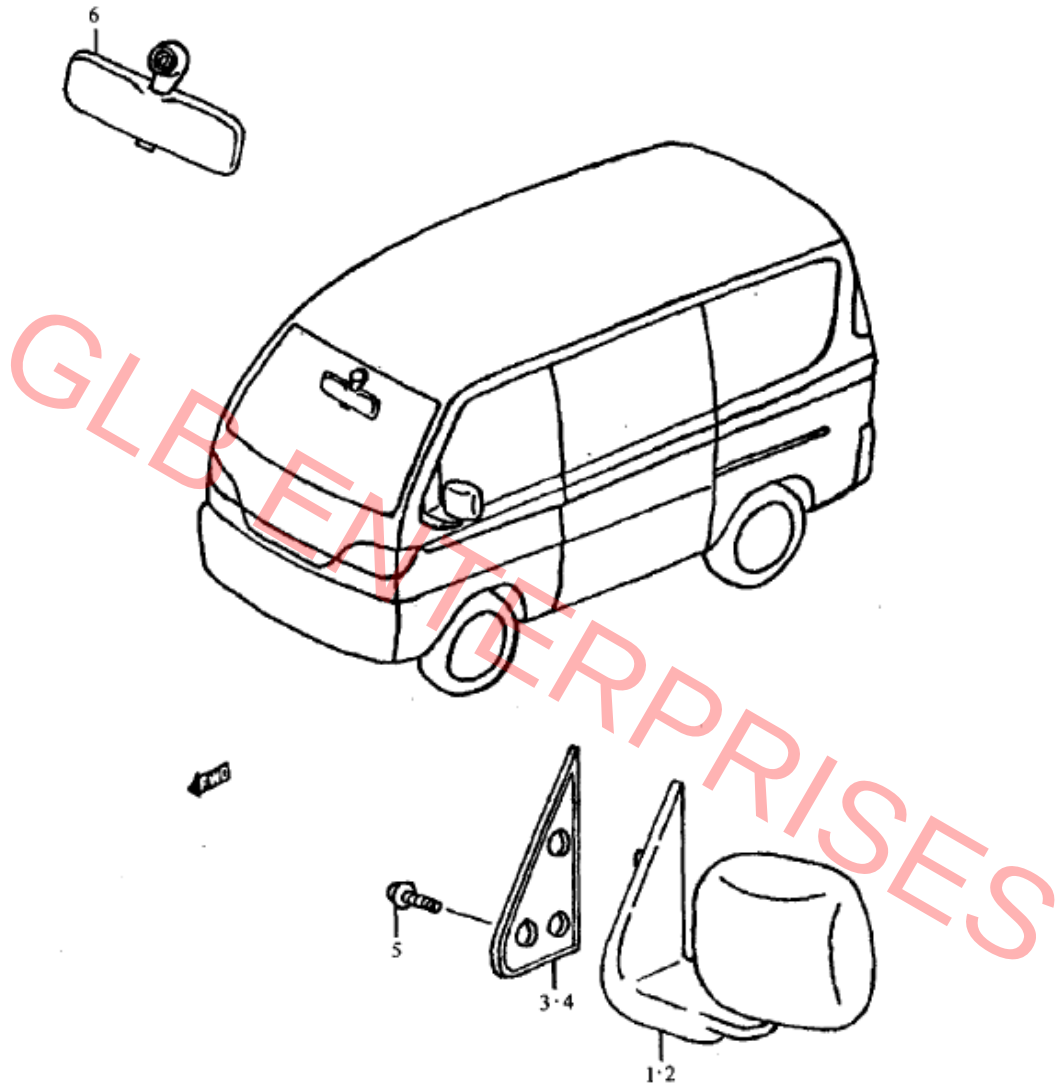


FIGURE 166 MIRRORS

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	MIRROR O/S LH	HFJ8202110DA	1	
2	MIRROR O/S RH	HFJ8202120DA	1	
3	MIRROR SPACER O/S LH	HFJ8202101DA	1	
4	MIRROR SPACER O/S RH	HFJ8202102DA	1	
5	REAR VIEW MIRROR INTERIOR	HFJ8201100DA	1	
6	SCREW	Q/2A-CJ-64 M6X25	6	

GLB ENTERPRISES

FIGURE 168 MISC



GLB ENTERPRISES

FIGURE 169 FOG LAMP

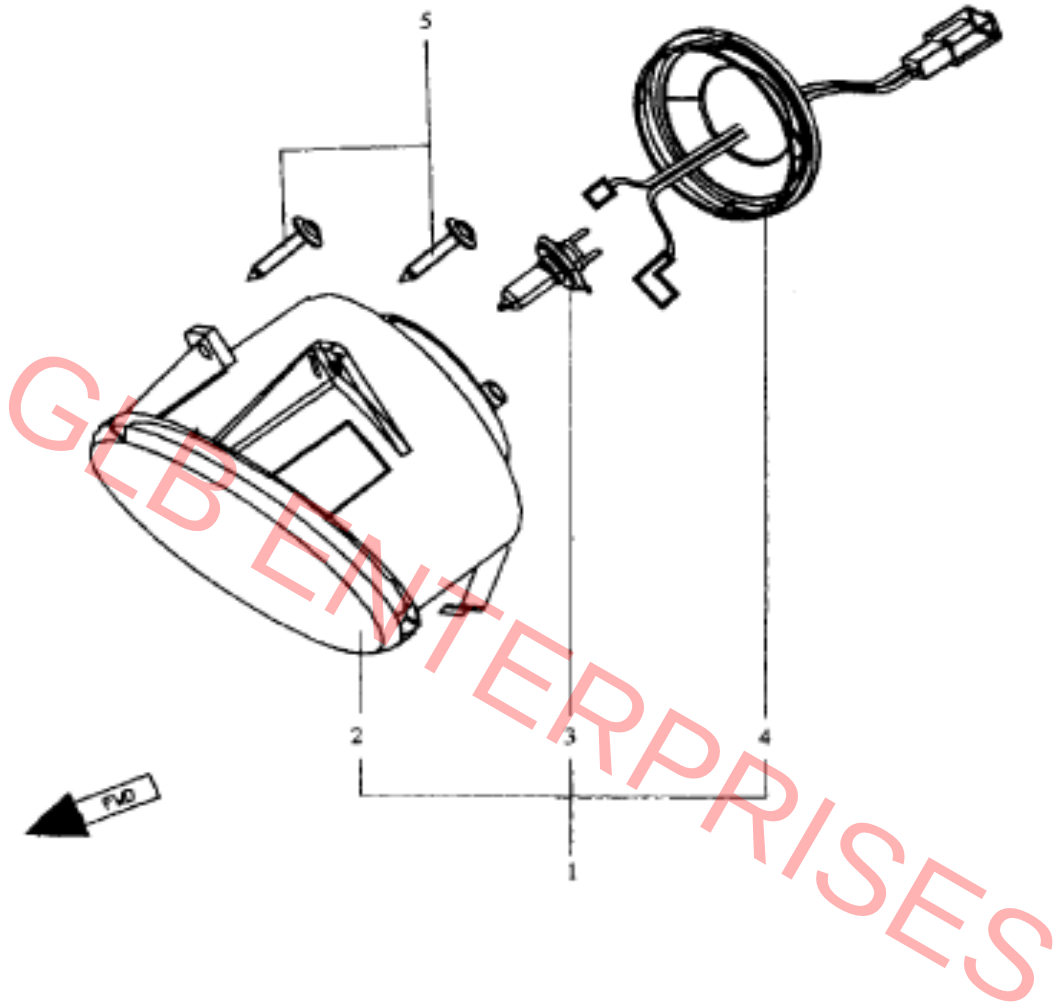


FIGURE 169 FOG LAMP

NO	DESCRIPTION	PART NO.	ALL	NOTE
1	FOG LAMP ASM LH/RH	HFJ3723110DA	1	

GLB ENTERPRISES